



Model No.: MHZ2215


N-LITE 209

QUICK START GUIDE

Please read this Quick Start Guide carefully and keep it for future use.

Product Overview

In-ear Earphones x 2 (left & right)
Charging Case
USB-C Charging Cable
Quick Start Guide and Warranty Letter

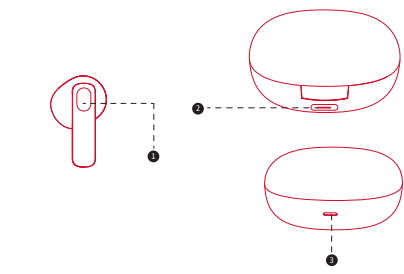

- 1.Multi-function touch button (MFB)
- 2.USB-C charging interface
- 3.Charging case indicator light

Power On/Off

Open the cover of the charging case and it will turn on automatically. Put the earphones into the charging case, close the cover, and the earphones will automatically turn off and charge.

Charging

Use the USB-C charging cable provided with the product to charge. When charging the charging case, the red indicator light on the charging case flashes, and it will stay on after being fully charged.

Pairing

Open the charging case cover and the charging case will open automatically. To connect a new device, turn on your phone's Bluetooth and search for "Monster N-Lite 209" to pair.You will hear system prompts after the earphones are connected to the device.

If the earphones have been connected before, they will connect to the last connected device automatically after being turned on.

Volume control

Turn down the volume: While the music is playing, short press the MFB on the left earphone.
Turn up the volume: While the music is playing, short press the MFB on the right earphone.

Call

Answer/end a call: Double press the MFB .
Rejecting a call: Long press 2 seconds the MFB .


Music

Play/Pause music: Double press the MFB.
Previous: While the music is playing, left earphone quickly press 3 times.
Next: While the music is playing, right earphone quickly press 3 times.

Voice Assistant

When the phone is connected, long press the MFB for 2 seconds to wake up the voice assistant.

Key operation

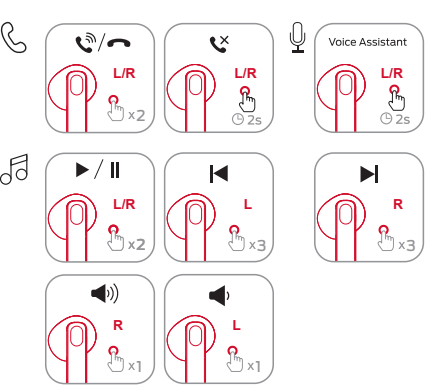

Reset

In the power on state, press the MFB of the earphones 5 times (two earphones at the same time), and the earphones will automatically shut down to reset. Put the earphones in the charging case and then take them out, the earphones will turn on automatically, and enter the pairing mode.

Indicator/Voice Prompt Guide

LED indicator (earphone)		
Mode	Description	Voice prompt
Power on	The white light flashes quickly	System tone
Power off	The red light is on for 2 seconds	System tone
Connected	The white indicator light stays on for 1s and turns off	System tone
Disconnect	The white light flashes quickly	System tone
LED indicator (charging case)		
Charging	The red light flashes slowly when charging, and the red light stays on when it is full	-
Discharge	When the charging case charges the earphones, the white light stays on and turns off when it is full	-
Low battery	When open the charging case cover, the red light stays on 1 second and turns off	-

Cautions

* After removing the earphone from the charging case, there is no need to press any buttons, the left and right earphone will automatically connect and Automatically enter pairing mode.
*Please place the earphones in the correct position for charging.
*It is not recommended to replace the battery privately without permission.
*Batteries [battery packs or cell combinations] must not be exposed to lighting, baking, or similar excessive heat.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
FCC ID:2AVD2-MHZ2215