



 
# P10/Adventurer 1000

型号:MS22141 / Model No:MS22141

## 快速指南/ Quick Start Guide


请仔细阅读此快速指南并妥善保存以备将来使用。

Please read this Quick Start Guide carefully and keep it for future use.

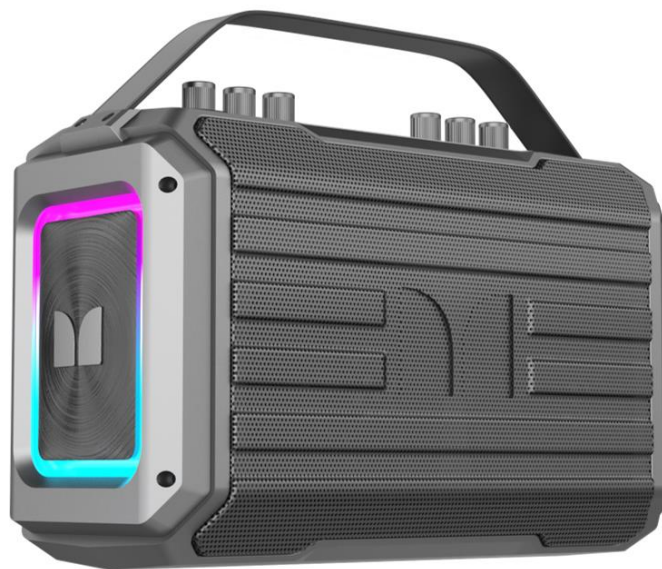

## 产品概述/ Product Overview
 
<ul style="list-style-type: none"> <li>• 音箱</li> <li>• 充电直播一体线</li> <li>• AUX IN 线</li> <li>• 无线话筒</li> <li>• 快速指南&amp;保修卡</li> </ul>	<ul style="list-style-type: none"> <li>• Speaker Unit</li> <li>• AUX IN Cable</li> <li>• USB-C Charging Cable</li> <li>• Quick Start Guide &amp; Warranty Letter</li> </ul>
---	---

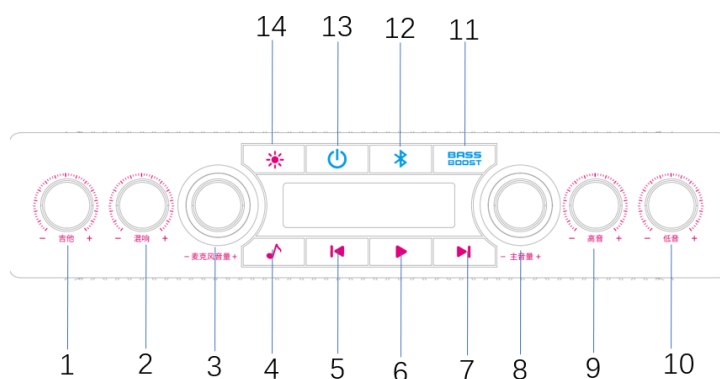

### 1. 吉他音量调节

### 2. 混响调节

### 3. 话筒音量调节

### 4. 伴唱/原唱切换

### 5. 上一曲

### 6. 多功能键

短按可以播放或暂停音乐。

### 7. 下一曲

### 8. 主音量调节

顺时针/逆时针旋转以增加/减小主音量。

### 9. 高音调节

顺时针/逆时针旋转以增加/减少高音。

### 10. 低音调节

顺时针/逆时针旋转以增加/减少低音。

### 11. 音效模式

短按切换不同音效模式。

### 12. 蓝牙

短按一下可以进入蓝牙配对模式。

按住 5 秒可清除所有已配对的设备。

### 13. 电源开/关

按住 2 秒可开机或关机。

### 14. 灯效键

短按切换不同灯光模式。

按住 2 秒打开或关闭灯效。

### 1. Guitar volume adjustment

### 2. Reverberation adjustment

### 3. Microphone volume adjustment

### 4. Accompaniment Vocal switch

### 5. Previous song

### 6. Multi-function button

Press to play or pause music.

### 7. Next song

### 8. Master volume adjustment

Turn clockwise/counterclockwise to increase/decrease the master volume.

### 9. Treble adjustment

Rotate clockwise/counterclockwise to increase/decrease the treble.

### 10. Bass adjustment

Rotate clockwise/counterclockwise to increase/decrease the bass.

### 11. Sound mode

Press this button to switch between sound modes.

### 12. Bluetooth

Press the button to enter Bluetooth pairing mode.

Press and hold for 5 seconds to clear all paired devices.

 
### 13. Power on/off

Press and hold for 2 seconds to turn on or off.

### 14. Light effect

Press this button to switch between different lighting modes.

Press and hold for 2 seconds to turn the light on or off.

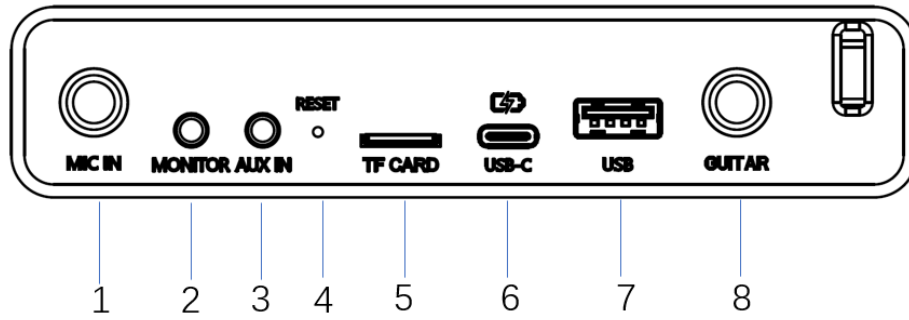

#### 1. MIC IN

连接到有线话筒（不包含）。

#### 2. MONITOR

监听接口，连接到耳机（不包含）。

#### 3. AUX IN

使用音频电缆可以连接外接音频设备。

#### 4. RESET

复位键

#### 5. TF CARD

连接 TF Card（不包含） 存储设备。

#### 6. USB-C/LIVE

USB-C 充电接口

OTG 直播接口,连接直播设备。

#### 7. USB

连接 USB 存储设备。

#### 8. GUITAR

连接到吉他（不包含）。

#### 1. MIC IN

Connect to microphone (not included).

#### 2. MONITOR

Listening interface, connected to headphones (not included).

#### 3. AUX IN

External audio devices can be connected using audio cables (not included).

#### 4. RESET

Reset button

#### 5. TF CARD

Connect TF Card (not included) storage device.

#### 6. USB-C/LIVE

USB-C charging port

Live broadcast port connects live broadcast devices.

#### 7. USB

Connect a USB storage device.

#### 8. GUITAR IN

Connect to guitar (not included).

## LED 指示灯/语音提示指南

	描述	语音提示	状态
⏻	○白色 LED 灯亮	开机提示音	开机
	●白色 LED 灯灭	关机提示音	关机
✳️	★白色 LED 闪烁	蓝牙等待连接	未连接
	○白色 LED 长亮	蓝牙已连接	已连接
BASS BOOST	○白色 LED 灯亮	-	-
	●白色 LED 灯暗	-	-
	●白色 LED 灯灭	-	-
低电提示	-	电量低请充电	-
音响充电	充电中，红色指示灯亮， 充满后，红色指示灯灭	-	-

说明：○表示指示灯亮；●表示 LED 灯变暗 ●表示指示灯灭；★表示指示灯闪烁。

 
## LED Indicator Guide

	Description	Voice/Tone	Status
⏻	○White LED light	Opening Tone	Power On
	●The white LED is off	Goodbye	Power Off
✳️	★White LED lights flashing	Discovering	Not connected
	○White LED light	Your device is connected	Connected
BASS BOOST	○White LED light is white	-	-
	●White LED light dark white	-	-
	●The white LED is off	-	-
Battery low	-	Battery low	-
Charging	While charging, the red indicator lights up,When full, the red light goes off	-	-

Description: ○Indicator light; ●Indicates that the LED lights dim; ●Indicate that the light is off; ★Indication flash.

## 遥控器

将电池按极性标记(+/-)正确装入电池仓。

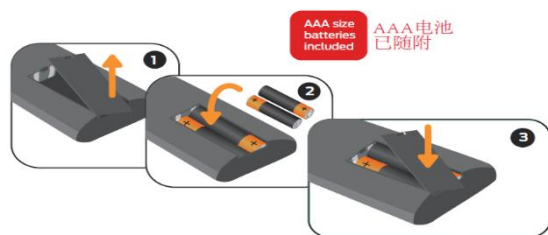

示意图仅供参考




### 使用电池注意事项

 - 请勿将旧电池与新电池一起使用。
- 请勿混用不同类型的电池（例如锰和碱性）。
- 如果长时间不使用时，请取出电池。
- 丢弃用过的电池时，请遵循适用于您当地任何电池回收和处置指南。
- 让电池远离儿童和宠物。
- 请勿将电池暴露在极端温度或火中。

## 使用遥控器

要使用遥控器，请将其指向音箱前面的遥控传感器。如果遥控器的路径被阻塞，遥控器将无法运行。遥控器与音箱的距离最远约为 6 米，与传感器的任一侧最多成 30 度角，如下图所示。

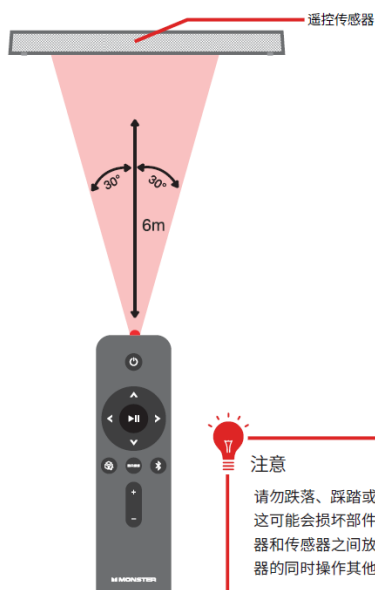

### 注意

请勿跌落、踩踏或以其他方式撞击遥控器。这可能会损坏部件或导致故障。请勿在遥控器和传感器之间放置物体。请勿在使用遥控器的同时操作其他设备的遥控器。

## 遥控器概览



## 电源/充电

为了更好的使用体验，在使用音响前，您需要先为其充满电。

包装中包含了一条 USB-C 充电线（仅充电，无数据传输功能），可以与其它兼容 USB 的标准充电设备。使用 5V/2A 或以上适配器(不包含)进行充电。

注意：如果连接线或设备潮湿、损坏，请勿充电。

## Power/Charging

For better enjoyment, fully charge the speaker before use.

A USB-C charging cable (charge only) is included for standard USB compatible device.

Please use a 5V/2A or above power adapter (not included).

Caution: - Other incompatible charges may cause damages.

 
- Do not use if the connector or device is wet or damaged.

## 开机/关机

在关机模式下，按住电源开/关按键大约 2 秒以开启音响，可听到开机提示音。

关闭音响，请再次按住电源开/关按键大约 2 秒，可听到关机提示音。

注意：开机后如没有连接到蓝牙设备，音响大约在 15 分钟内关闭。

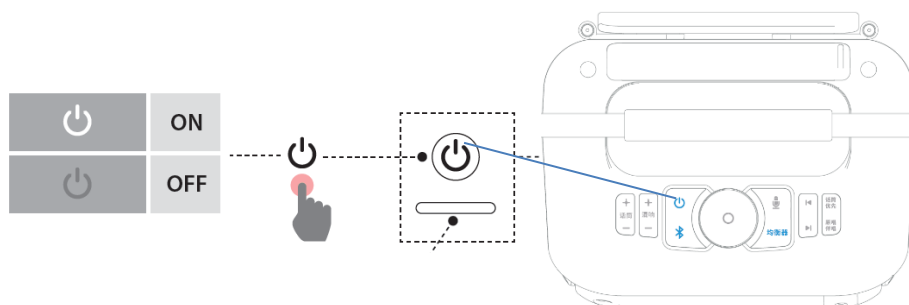


## Power On/Off

To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone.

 
To turn off the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power off tone.

Caution: If no Bluetooth device is connected, the speaker will turn off in 15 minutes.

## 蓝牙连接

- 首次使用并开机时，音响将自动进入等待连接模式。
- 如已连上蓝牙设备，按住 2 秒 “


配对时，启用手机的蓝牙功能，搜索“Monster P10”进行连接，连接成功后你会听到提示音，蓝牙指示灯从闪烁变成长亮。

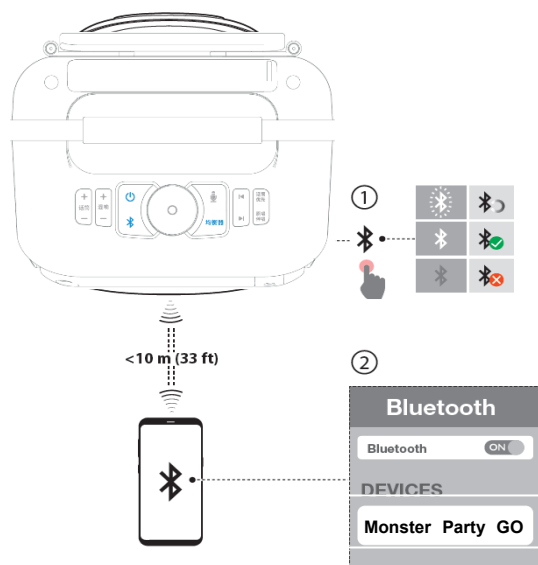

- When first used and turned on, the speaker will automatically enter a waiting mode for connection.
- If the Bluetooth device is already connected, press "❄️" button to disconnect the current connection and connect with other devices.
- The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device. When pairing, enable the Bluetooth function of the phone and search for "**Monster Adventurer 1000**" to connect. When the connection is successful, you will hear a prompt tone and the Bluetooth indicator will turn from blinking to long on.

## 音乐控制

 按一次 "▶" 可播放或暂停音乐。  
 按一次 "◀" 可转至上一首歌曲。  
 按一次 "▶" 可转至下一首歌曲。

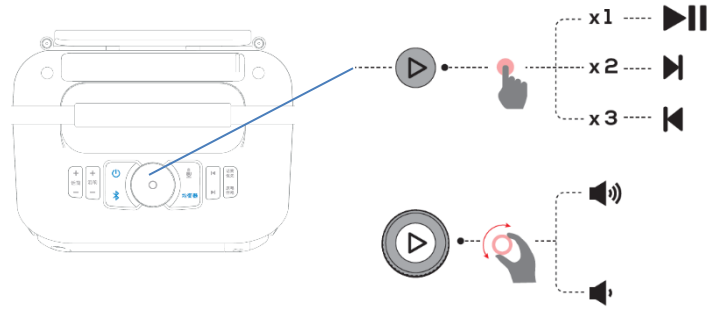


## Music control

Press "▶" once to play or pause music.  
 Press "◀" once to go to the previous song.  
 Press "▶" once to go to the next song.

## USB IN (Audio) 模式播放

 开机时，USB IN (Audio) 插入音响后，会以 USB IN (Audio) 为优先播放，届时如需用蓝牙播放时，可以通过 "⏻" 按键来切换音源。

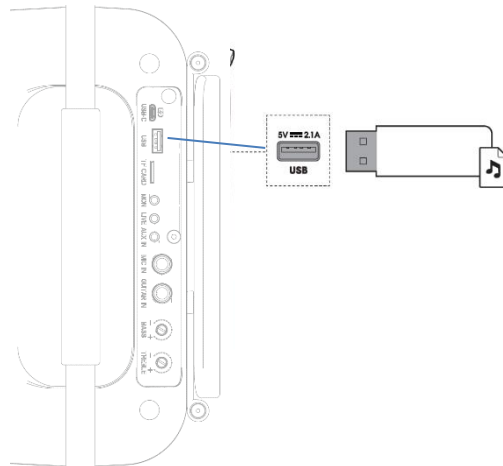


## USB IN (Audio) Playback

When speaker is on and USB drive is inserted, USB IN (Audio) is the priority playback source. If you want to use Bluetooth function, press the "⏻" Button to switch the source.



## Micro SD 卡播放

 开机时，micro SD 卡（不包含）插入音响后，会以 micro SD 卡为优先播放，届时如需用蓝牙播放时，可以通过 “⏻” 按键来切换音源。

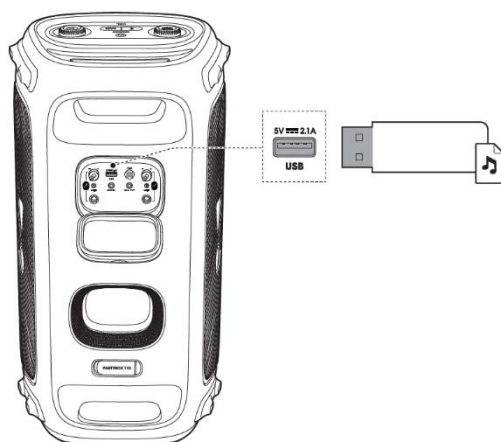


## Micro SD Card Playback

When speaker is on and micro SD card (Not included) is inserted, micro SD card is the priority playback source. If you want to use Bluetooth function, press the “⏻” Button to switch the source.

## AUX IN 模式播放

 开机时，外接 AUX IN 音源输入后，会以外接 AUX IN 音源为优先播放，届时如需用蓝牙播放时，可以通过 “⏻” 按键来切换音源。

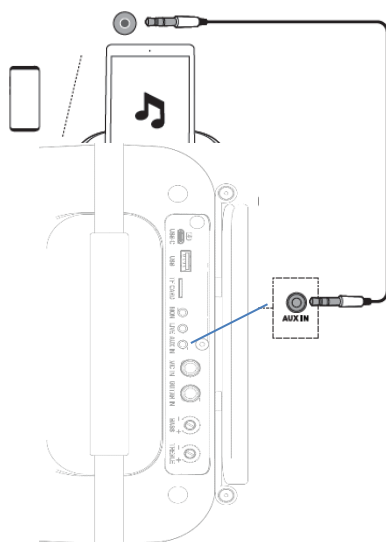


## AUX IN Playback

When speaker is on and audio source is inserted via AUX IN, AUX IN is the priority playback source. If you want to use Bluetooth function, press the “⏻” Button to switch the source.

## 直播功能

 将音响与直播设备连接，一端连接直播设备，另一端连接音响直播口，使用另一台移动设备连接到音响的蓝牙或 AUXIN 播放伴奏，音响端所有声音（音乐/话筒声音）都可以通过直播线（不包含）上传到直播设备。

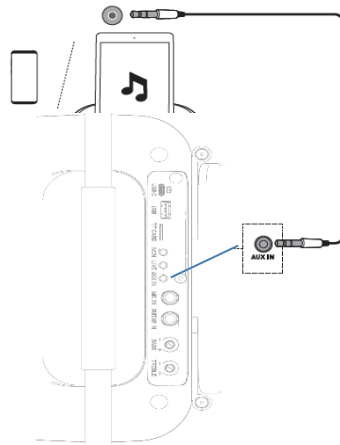

## Live broadcast function

Connect the speaker to the live broadcasting device, one end of which is connected to the live broadcasting device, and the other end is connected to the live broadcasting port of the speaker. Use another mobile device to connect to the Bluetooth or AUXIN of the speaker to play accompaniment, and all the sounds (music/microphone sounds) at the end of the speaker can be uploaded to the live broadcasting device through the live broadcasting line (excluding).

## 监听功能

 
插入监听孔后音响会进入静音状态，音响声音从监听孔输出，此时双击电源键“⏻”可以打开或关闭音响声音输出。

## Monitoring function


After inserting the monitoring hole, the speaker will enter the mute state, and the sound of the speaker will be output through the monitoring hole. In this case, double-click the power button "⏻" to turn on or off the sound output of the speaker.


## 无线话筒

在音箱开机状态，打开无线话筒上的电源开关，即可使用无线话筒。

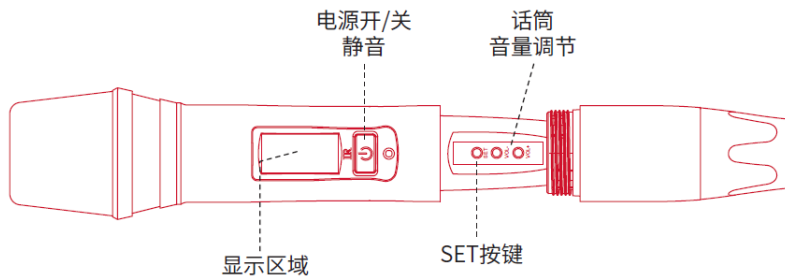

操作说明：

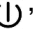开机：按住“”2秒，屏显“ON”。

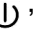关机：按住“”2秒，屏显“OFF”。

静音：按一下“”，屏显“-”。

加减音量：按一下+/-键。


频点切换：按一下SET键可以切换不同频点。

解码：按住SET键5秒，屏显“----”循环流动时，把音响开机，直至“----”图标退出，解码完成。


锁码：按住SET键5秒，屏显“ID-”闪烁时，把音响开机，直至“ID-”图标退出，锁码完成。

\*注意：操作解/锁码时，音响需要重新开机（内置接收板）一次才能完此操作。

### 连接两台音响，立体声模式（只限于相同型号）

1. 打开两台 P10 音响，在开机状态并且没有连接蓝牙设备（如手机）。
2. 在其中一台音响上连续快速按“”键两下，会听到语音提示，两台音响将会自动配对。连接成功后，主音响的蓝牙指示灯会闪烁，副音响的蓝牙指示灯会长亮。
3. 启用手机上的蓝牙功能，搜索“Monster P10”进行连接，连接成功后你会听到语音提示，主音响上的蓝牙指示灯会变为长亮，副音响的蓝牙指示灯会保持长亮。

### Connect two speakers, stereo mode (same model only)

1. Turn on two speakers, are on and are not connected to a Bluetooth device (such as a mobile phone).
2. Press the "" button twice in a row on one of the speakers, and you will hear a voice

prompt, and the two speakers will be matched automatically. After the connection is successful, the Bluetooth indicator of the main speaker will flash and the Bluetooth indicator of the sub-speaker will always light up.

3. Enable the Bluetooth function on the phone and search for "Monster Adventurer 1000" to connect. After the connection is successful, you will hear a voice prompt, the Bluetooth indicator on the main speaker will stay on, and the blue tooth indicator on the sub-speaker will stay on.

## 复位设备

如果音响需要复位，请按下复位键。

## Reset Device

If the speaker needs to be reset, press the reset button.

## 注意

- 不建议未经许可私下更换电池。
- 电池[电池组或电池组合]不得暴露在诸如日照、火烤或类似过热环境中。

## Caution

- It is not recommended to replace the battery privately.
- The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

## FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.