




Model No.: MS32103

Quick Start Guide

Please read this Quick Start Guide carefully and keep it for future use.

Product Overview

- Speaker Unit
- USB-C Charging Cable
- Quick Start Guide & Warranty Letter

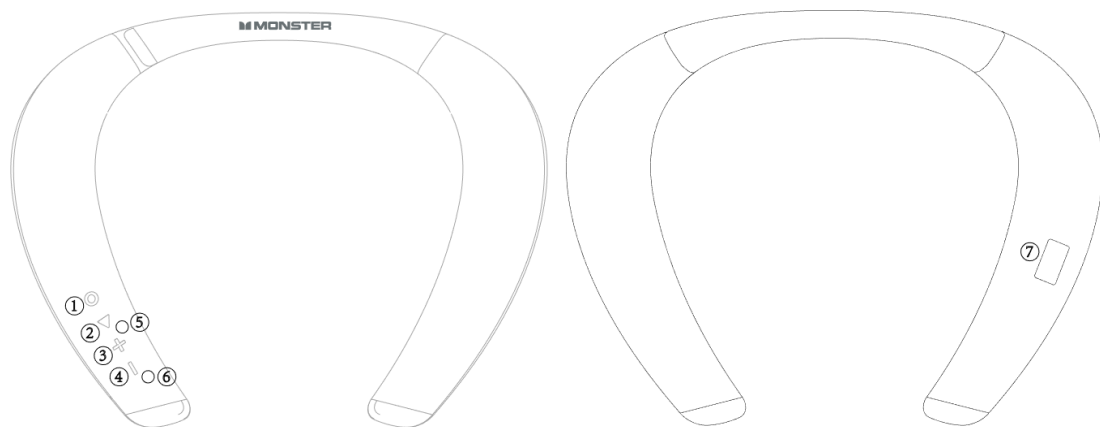

1. Power On/Off Button
2. Multi Function Button (MFB)
Pairing music play/pause...
3. Volume Control "+" Button
volume up, track backward
4. Volume Control "-" Button
volume down, track forward
5. Function Indicator
6. Microphone
7. USB-C Charging port

Power/Charging

For better enjoyment, you should fully charge the speaker before use.

The package includes a USB-C charging cable (charge only, no data transfer function) that can be connected to your computer or other device made for standard USB compatible charging. Charging with 5V 1A or above power adapter (not included).

Caution: ONLY use computer USB output or standard 5 volt only power adapter for charging. Damage may occur if non-standard USB power adapter is used for charging. Do not charge if connector or device is wet or damaged.

Power On/Off

In power off mode, press and hold the Power On/Off Button for about 2 seconds to power on the speaker, you hear the opening tone.

To power off the speaker, press and hold the Power On/Off Button for about 2 seconds again, you will hear a shutdown tone.

Caution: If no Bluetooth device is connected, the speaker will be turned off within about 15 minutes.

Pairing

- When you unbox the speaker and power it on for the first time, it will enter to pairing mode automatically.
- If Bluetooth device is connected, press and hold the MFB for about 2 seconds, disconnect and ready to pair another device.
- If speaker does not connect any Bluetooth device, it will enter to pairing mode automatically.

When pairing, enable the Bluetooth function of the mobile phone, search for Monster devices for pairing and connection. After the connection is successful, you will hear a tone, and the white LED indicator will change from breathing status to off.

Volume Control

Short press the Volume Button “+” or “-” to turn volume up or down.

Music

Play/Pause: In the music playback mode, press the MFB to play/pause music.

Track forward: In the music playback mode, press and hold the Volume “+” Button for 2 seconds for next song.

Track backward: In the music playback mode, press and hold the Volume “-” Button for 2 seconds for previous song.

Call

Answer an incoming call: Short press the multifunction key.

Reject call: Press and hold the multifunction key for about 2 seconds.

End the call: Short press the multifunction key.

Voice Control

When the speaker is connected to the phone, double-click the multi-function button to enable

or disable the voice assistant.

Power Saving Setting

After the speaker is turned on, if it is not connected to a Bluetooth device, it will automatically turn off after 15 minutes.

Reset Paired Device List

After power on, press the Volume “+” and Volume “-” Buttons simultaneously for about 3 seconds.

LED Indicator Guide

Status	Description	Voice/Tone
Power On	Function indicator: White LED stays on about 1 second	Opening Tone
Power Off	Function indicator: LED off	“Goodbye”
Pairing	Function indicator: White LED breathing	“Discovering”
Bluetooth connected	Function indicator: LED off	“Your device is connected”
Bluetooth playback	Function indicator: LED off	-
Battery low	-	“Battery low”
Charging	Function Indicator: Red LED lights when charging, turns off after fully charged	-

Battery Use Caution

- Fully charge before use.
- It is not recommended to replace the battery privately.
- The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2AVD2-MS32103