

中文

封面

Model No.: MH22185



 
BLUETOOTH HEADPHONE
OPEN EAR AC600

快速指南 / Quick Start Guide

请仔细阅读本快速指南并妥善保存以备将来使用。
本产品由中国平安保险公司承保
Please read this Quick Start Guide carefully and keep it for future use.

产品概述
*耳机x 2 (左&右)
*USB-C充电线

*充电仓
*快速指南与保修单

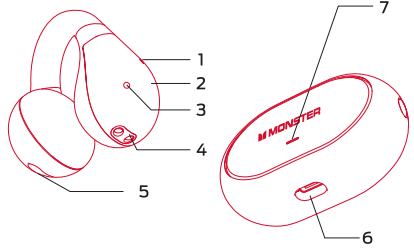

- LED指示灯
- 多功能触控键 (MFB)
- MIC孔
- 充电触点
- 发声位置
- USB-C充电接口
- 充电指示灯

佩戴
拿出耳机，将**Monster Open Ear AC600** 顺着耳后佩戴，并轻轻旋转至舒适位置，以确保获得最佳的佩戴效果和音质体验。



1. 取出耳机，将耳机放入充电盒，耳机自动关机及进行充电。
2. 旋转充电盒，拿出耳机，耳机会自动开机。对于新设备连接，请打开手机蓝牙并搜索“**Monster Open Ear AC600**”进行配对，连接成功后，你会听到系统语音提示。

充电盒充电
使用产品自带的 USB-C 充电线进行充电，充电盒指示灯显示充电状态。当充电盒充满电时，充电盒指示灯长亮。

电源开/关
旋转充电盒，拿出耳机，耳机会自动开机。将耳机放入充电盒，耳机自动关机及进行充电。

配对
旋转充电盒，拿出耳机，耳机会自动开机。对于新设备连接，请打开手机蓝牙并搜索“**Monster Open Ear AC600**”进行配对，连接成功后，你会听到系统语音提示。

音量控制
调低音量：在音乐播放状态下，短按左耳的触摸多功能按键。
调高音量：在音乐播放状态下，短按右耳的触摸多功能按键。

通话
接听/结束通话：双击触摸多功能按键（左右耳均可操作）。
拒接来电：来电时，长按2秒（左右耳均可操作）。
取消通话：在拨出电话后对方未接听时，双击可取消通话。

音乐
播放/暂停音乐：双击触摸多功能按键（左右耳均可操作）。
上一曲：已连接手机状态，左耳轻触3下。
下一曲：已连接手机状态，右耳轻触3下。

语音控制
在耳机与手机连接状态下，长按2秒唤醒语音助手（左右耳均可操作）。

恢复出厂设置
耳机在开机状态时，双耳同时快击5下，然后左右耳机白灯快闪，清空耳机与手机的配对记录后（不清除左右耳），进入设备搜索配对模式，如3分钟内没有连接新设备则自动关机


指示灯/语音指南

模式	描述	声音提示
开机	白灯长亮1秒	系统提示音
关机	红灯长亮2S熄灭	系统提示音
配对	白灯快闪	无
连接	白灯长亮1S熄灭	系统提示音
充电盒充电	充电盒充电时, 充电盒上的指示灯框内, 充满后红灯长亮	-

注意

- *从充电盒中取出耳机后, 无需按任何按键, 左右耳机会自动连接和自动进入配对模式。
- *请将耳机放在正确的位置进行充电。
- *不建议未经许可私下更换电池。
- *电池[电池组或电池组合]不得暴露在照明, 烘烤或类似过热、过冷的环境中。

 按键操作

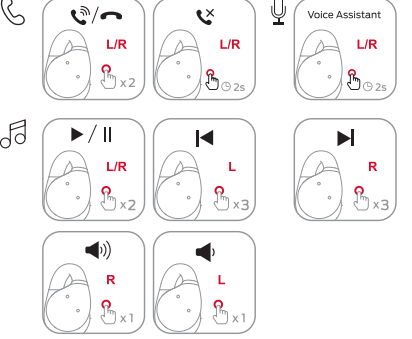


注意

- *从充电盒中取出耳机后, 无需按任何按键, 左右耳机会自动进入配对模式。
- *耳机充电仓在外接电源充电时, 输入电压电流标准<= 5V/1A。
- *请将耳机放在正确的位置进行充电。
- *不建议未经许可私下更换电池。
- *电池[电池组或电池组合]不得暴露在照明, 烘烤或类似过热的环境中。


70x95mm
80G双胶
专色+黑色印刷 折页

 Product Overview
Earphone x 2 (left & right)
Charging Case
USB-C Charging Cable
Quick Start Guide and Warranty Letter

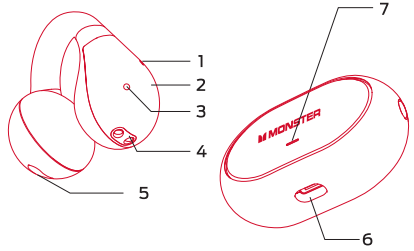

- LED indicator
- Multi-function Touch Button (MFB)
- MIC hole
- Charging contact
- Vocal position
- USB-C charging port
- Charging indicator light

 Wearing
Put the **Monster Open Ear AC600** onto your ears and rotate to fit comfortably to get the best wearing and sound quality experience.

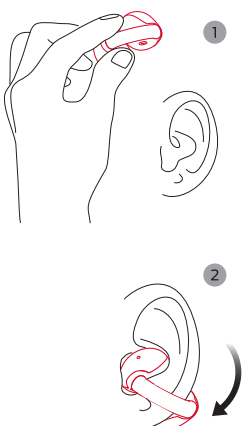

1. 取出耳机，将耳机放入充电盒，耳机自动关机及进行充电。
2. 旋转充电盒，拿出耳机，耳机会自动开机。对于新设备连接，请打开手机蓝牙并搜索“**Monster Open Ear AC600**”进行配对，连接成功后，你会听到系统语音提示。

Case Charging
Use the USB-C charging cable provided with the product to charge, and the charging case indicator shows the charging status. When the charging case is fully charged, the charging case indicator lights up.

Power On/Off
Rotate the charging case, take out the earphones, and the earphones will turn on automatically. Put the earphone into the charging case, and the earphone will automatically shut down and charge.

Pairing
Rotate the charging case, take out the earphones, and the earphones turn on automatically. For new device connection, please turn on Bluetooth and search for “**Monster Open Ear AC600**” to pair, after successful connection, you will hear the system voice prompt.

Volume Control
Turn down the volume: While the music is playing, press the touch multi-function button in your left earphone.
Turn up the volume: While the music is playing, press the touch multi-function button in the right earphone.

Call
Answer/end a call: Double-click MFB (left or right).
Reject an incoming call: When an incoming call comes, press and hold for 2 seconds (left or right).
Cancel a call: If the caller does not answer the call after dialing, double-click to cancel the call.

Music
Play/pause music: Double-click to touch the multi-function button (left or right).
Previous: Connected mobile phone status, left earphone touch 3 times.
Next: Connected phone status, right earphone touch 3 times.

Voice control
When the earphones is connected to the phone, press and hold for 2 seconds to wake up the voice assistant (both the left and right earphones can be operated).

Reset
When the earphone is on, touch both earphones for 5 times at the same time, and then the left and right earphone white lights flash quickly. After clearing the pairing record between the earphone and the phone (without clearing the left and right earphones), enter the device search and pairing mode, and automatically shut down if no new device is connected within 3 minutes


Indicator/Voice Guide

Mode	Description	Voice Prompt
Power On	White light on for 1 second	System tone
Power Off	The red light is on for 2 seconds	System tone
Pairing	White light flashes quickly	-
Connected	White indicator is on for 1 second and off	System tone
Charging Case	Charging Case When charging, the instructions on the charging case The red light blinks slowly, and then blinks long after it is full	-

Note

- * After removing the earphones from the charging case, the left and right earphone will automatically connect without pressing any button. Then they enter pairing mode.
- * Please place the earphones in the correct position for charging.
- * It is not recommended to replace the battery personally without permission.
- * The battery [battery pack or battery combination] shall not be exposed to lighting, baking or similar overheating or undercooling In the environment.

 Key Operation

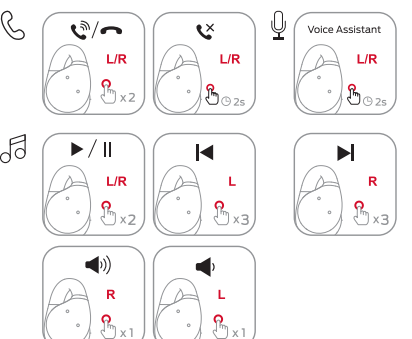

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
FCC ID: 2AVD2-MH22185