

Acoustix

True Wireless Stereo Earbuds

FCC ID: 2AVD8-WH-TWS5005

User Manual

Model: WH-TWS5005

INTRODUCTION

Please read instructions prior to using this product

Thank you for choosing our **True Wireless Stereo Earbuds** with **Bluetooth®** technology.

BUTTON FUNCTIONS



MUSIC MODE

Press MFB: Play/Pause

Double press L MFB: Increase volume

Double press R MFB: Decrease volume

Triple press L MFB: Next song

Triple press R MFB: Previous song

Press and hold MFB for 2 seconds: Activate Siri or OK Google

PHONE TALKING MODE

Press MFB: Answer/Hang up

Press and hold MFB for 2 seconds: Reject call

PAIRING & CONNECTION

STEREO MODE

- 1—**Take both earbuds out of the charging case, they will auto power on. The left and right will connect each other automatically.
- 2—**Activate your phone's **Bluetooth®**, search

name "BTSX1" and connect (If you put either earbud back into charging case during stereo mode, the other one will continue work, if you take it out again, it will automatically reconnect to the other one again).

MONO MODE

- 1—Take either earbud out of the charging case, they will automatically power on in pairing mode.
- 2—Activate your phone's Bluetooth®, search name "BTSX1" and connect.

After the first connection, in future use, it will auto connect with your phone no matter if using mono mode or stereo mode.

POWER OFF & CHARGE

- 1—When you put the earbuds into charging case, they will automatically power off and recharge.
- 2—Charging case will auto detect the earbuds battery, if fully charged, the charging case will stop recharging the earbud.
- 3—When charging the earbuds, the LED will stay red. When fully charged, the LED will turn blue and then off.
- 4—When charging the case, the LED will flash red. When fully charged, the LED will turn blue.



FAQ

- 1—**Sound cuts out:** You may experience this in Bluetooth® or WiFi surroundings. This is normal.

- 2–Earbuds not recharging:** If the charging case battery runs out, charge the charging case first. If charging case battery is normal, then try to clean the charging pin inside the case and the earbuds because it may have dust or sweat on them after long use.
- 3–How to check the earbud in charging:** Open the charging case cover. If the earbud LED is red, it's charging. You can also check the LED on the case; if flashing red the earbud is charging.

PRODUCT OVERVIEW

Power charging touch point

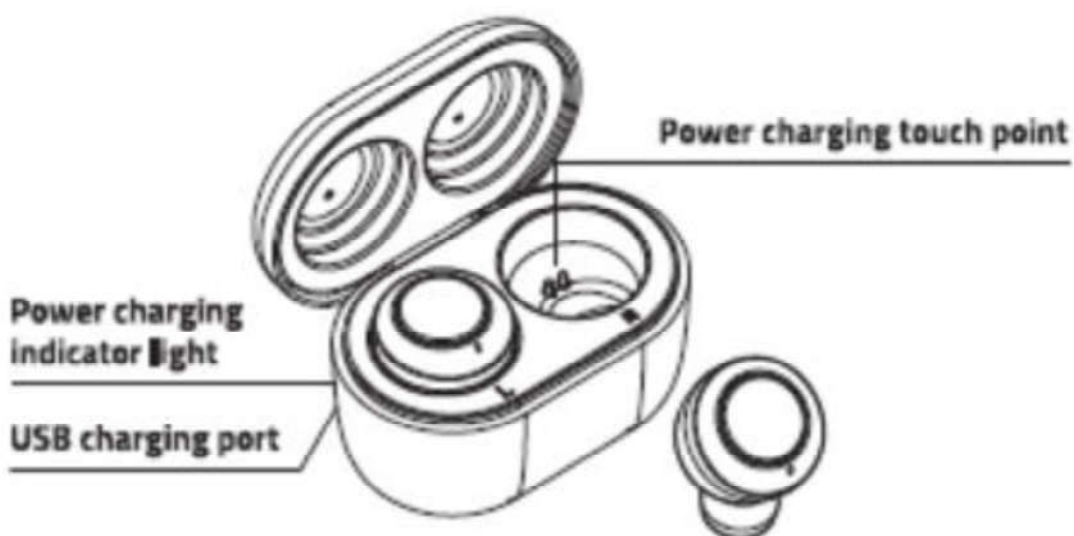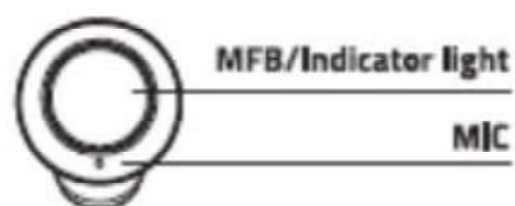

SPECIFICATIONS

- Bluetooth® Version: 5.0
- Earphone battery: 50mAh
- Standby time: > 100 hours
- Play time: 3-4 hours for earbuds at medium volume. Charging case adds 6 hours of additional play time, 10 hours total.
- Charging time: 1 hour
- Charger case battery: 330mAh
- Fully charge True Wireless Earbuds 2 times on a fully charged charger case

90 DAY LIMITED WARRANTY

If this product is found defective within the warranty period, simply return it to us, postage prepaid and with proof of purchase for repair or replacement to:

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction