

**Discovery Gate Ethernet
Demo Software Manual
FCC ID: 2AVDNGC665017**

Product code:

U04 ETH 11

Product:	Discovery Gate Ethernet
Document Type:	Demo Software Manual


Document Rev.	Data	
0.1	08/06/2020	

Summary

1	Hardware description	4
2	Antenna power supply	4
3	Access to Discovery Gate	5
3.1	Login screen.	5
4	Home page	5
5	Monitor.....	6
6	Antenna setting	6
6.1	Firmware/Hardware.....	7
6.2	Power.....	7
6.3	Distance	7
6.4	TID Memory size	7
6.5	User memory size	8
6.6	EPC Reading	8
6.7	TID Reading	8
6.8	User Reading	8
6.9	Tags Reading.....	8
6.10	Filtering	8
6.11	Multiple reading	8
6.12	Buzzer.....	9
6.13	Antenna Tuning.....	9
7	Networking.....	9
8	Operative mode	10
9	Web Service	11

10	Federal Communications Commission (FCC).....	15
10.1	Part 15.19.....	15
10.2	Part 15.21.....	15
10.3	Part 15.105.....	15
10.4	RF Radiation Exposure statement	15

1 Hardware description

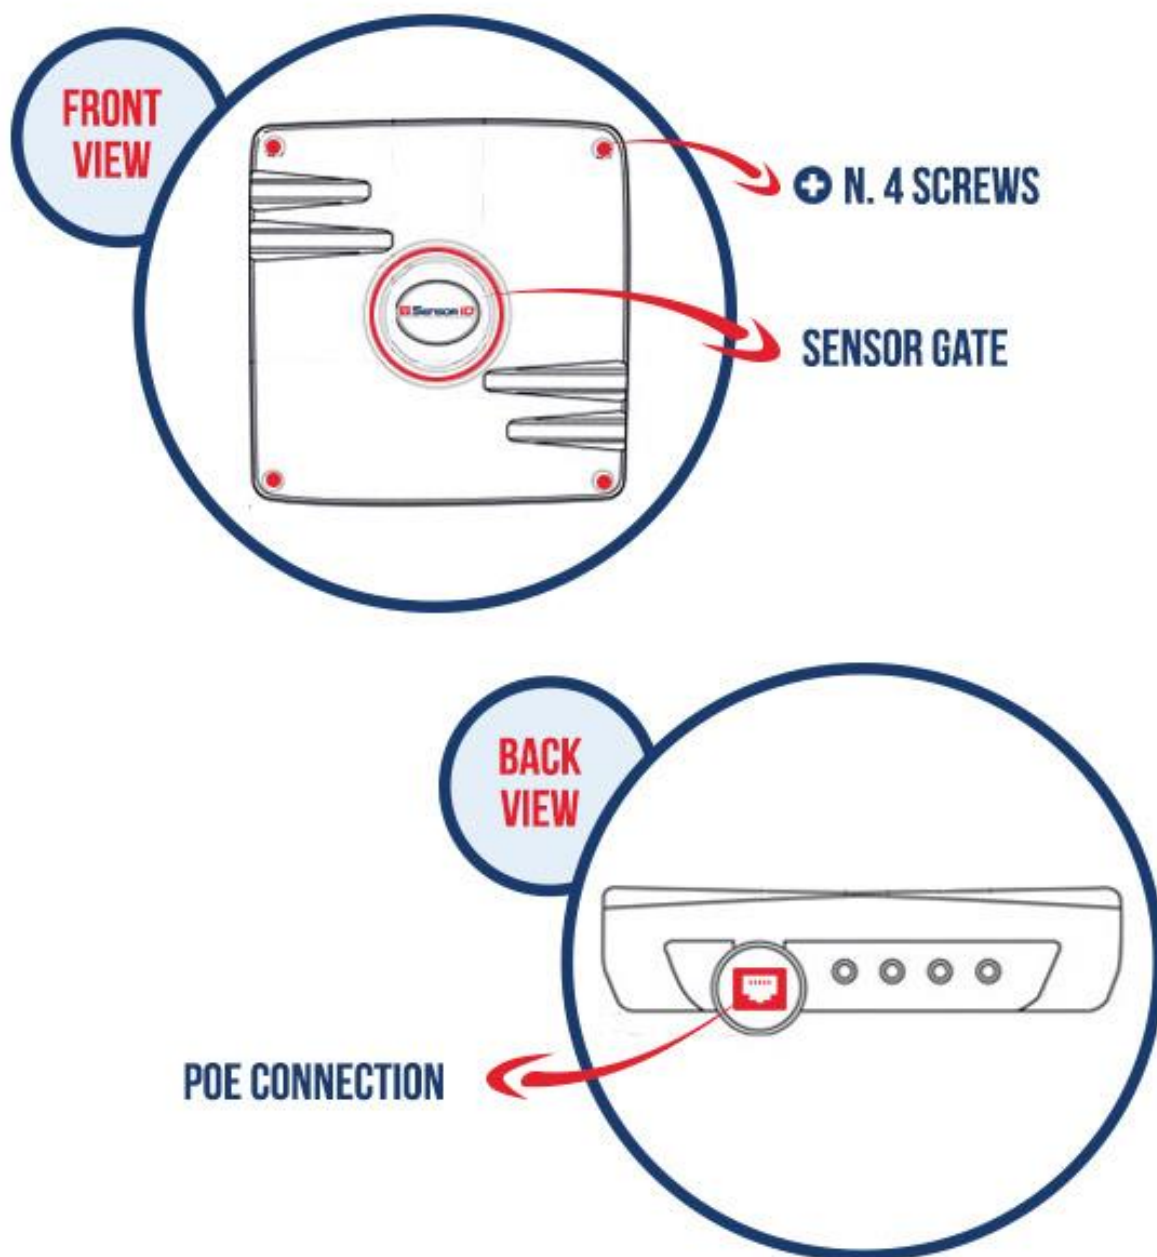


2 Antenna power supply

The antenna power supply is obtained through the **PoE** (Power over Ethernet) according to IEEE 802.3af standard (up to 15.4 W of DC power).

3 Access to Discovery Gate

3.1 Login screen.

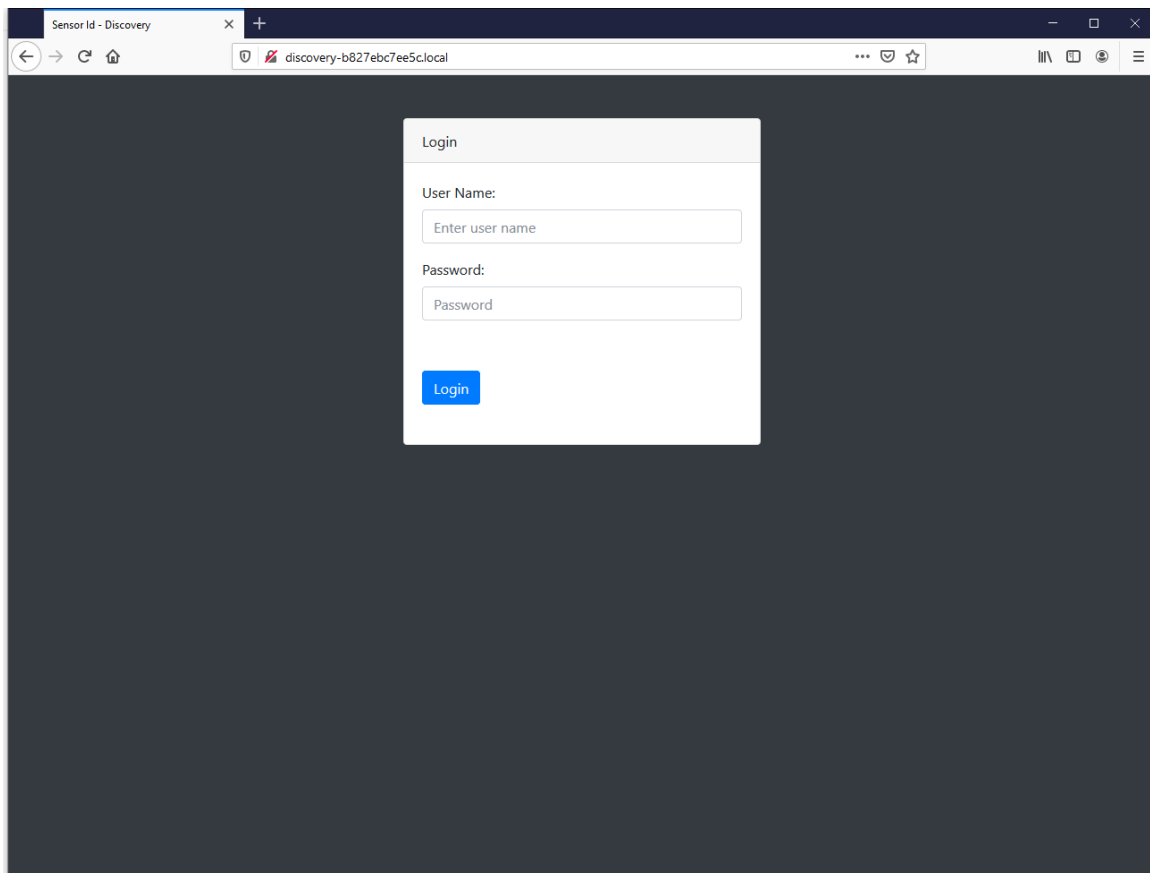

To access to the discovery gate login page, you must start your browser (preferably FireFox) and enter the following url in the address bar: [http://discovery-\(antenna mac address\).local/](http://discovery-(antenna mac address).local/)


The specific address of antenna is attached on external box



You can access the gate with user: *admin* and password: *password2010*

4 Home page


The first page after authentication is:

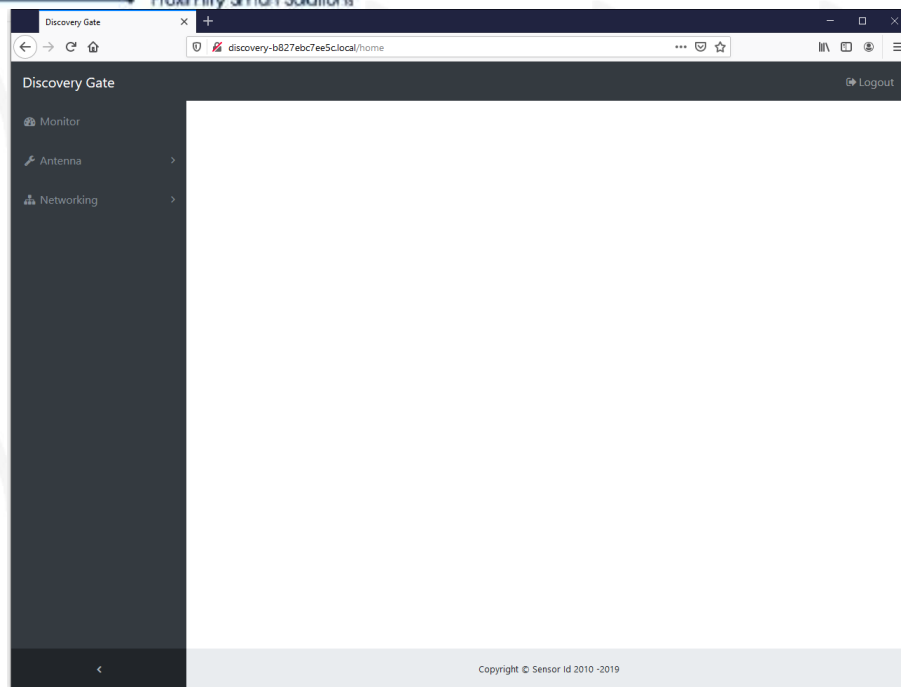

In this page it's possible select one of the reader configuration or monitoring options.

5 Monitor


In the monitor page the user can see the tags read with date and time of reading

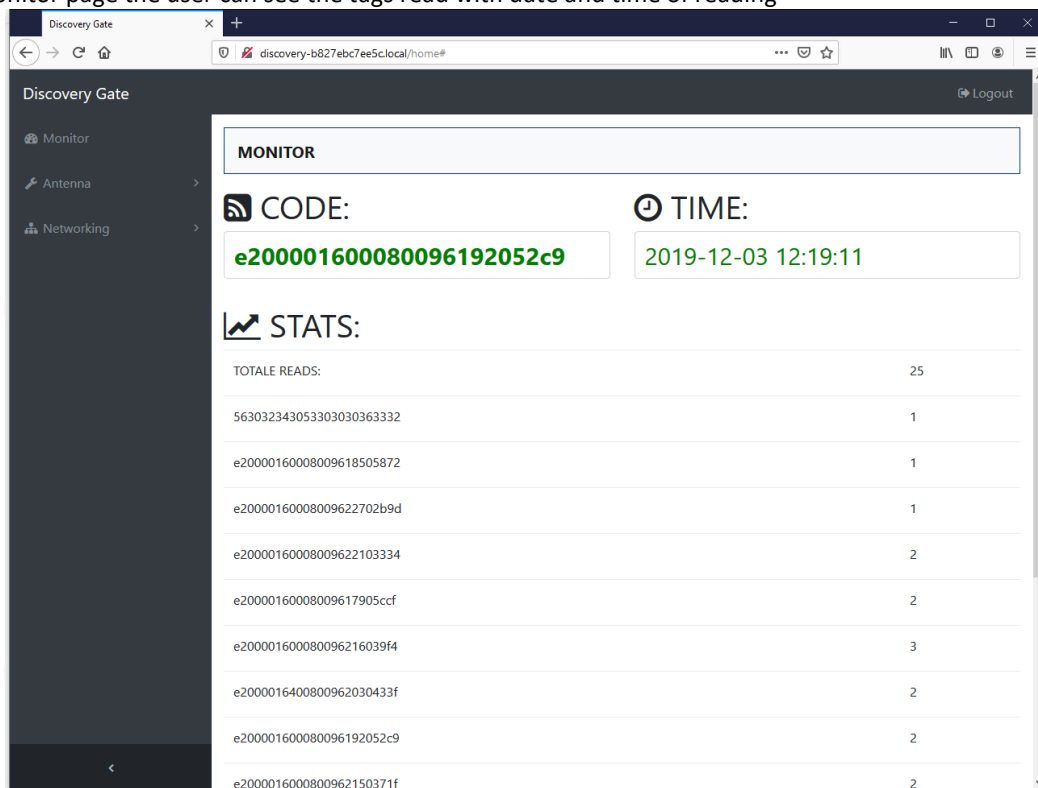

6 Antenna setting

In this page it's possible read and set the reading configurations

Sensor ID s.r.l.

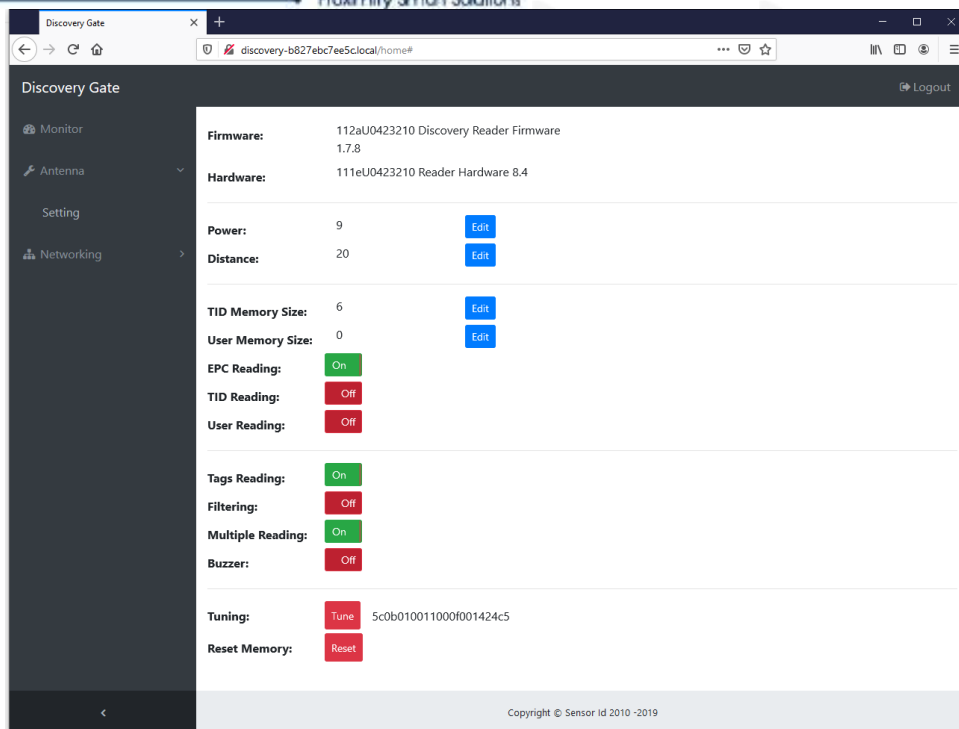

6.1 Firmware/Hardware

These fields show the firmware and hardware revision of UHF Reader

6.2 Power

Using the power tab it's possible increase or decrease the RF power emitted by the reader.

Power:

In particular the maximum power is 10 and minimum is 1. After select the desired value, press confirm button to set it.

6.3 Distance

The distance tab increase or decrease the reading distance.

Distance:

In particular the maximum distance is 10 and minimum is 1. After select the desired value, press confirm button to set it. This parameter use both the RF power and the sensitivity in reception of the reader to set a desired reading distance.

6.4 TID Memory size

This tab defines the number of byte to read in TID memory.

TID Memory Size:

The maximum value is 24 and minimum is 2 according to the EPC standard.

6.5 User memory size

This tab defines the number of byte to read in User memory.

User Memory Size:

The maximum value is 64 and minimum is 2, and according to the EPC standard.

6.6 EPC Reading

This tab enable or disable the reading of EPC memory of tags

EPC Reading: ☒ On

6.7 TID Reading

This tab enable or disable the reading of TID memory of tags

TID Reading: ☐ Off

6.8 User Reading

This tab enable or disable the reading of User memory of tags

User Reading: ☐ Off

6.9 Tags Reading

This tab enable or disable the reading of tags

Tags Reading: ☒ On

6.10 Filtering

This tab enable or disable a filtering of reading tags.

Filtering: ☐ Off

Enabling the filtering, the tag is read only once every minute.

6.11 Multiple reading

This tab enable or disable the reading of multiple tags in the same inventory cycle

Multiple Reading: ☒ On

The maximum number of tags read in one inventory cycle is 10.

6.12 Buzzer

Using this tab it's possible activate or deactivate the sound emitted by the reader at every reading.

Buzzer:

On

6.13 Antenna Tuning

This tab performs the tuning of antenna. This command must be send only when the antenna is installed and seated correctly. Run the antenna tuning to optimize the reading distances.

Tuning:

Tune


5c0b010010000000140032

A good value of tuning is found when the last four characters are 00XX.

Warning! A wrong setting may affect antenna performance.

7 Networking

In this page it's possible configure the Ethernet settings.

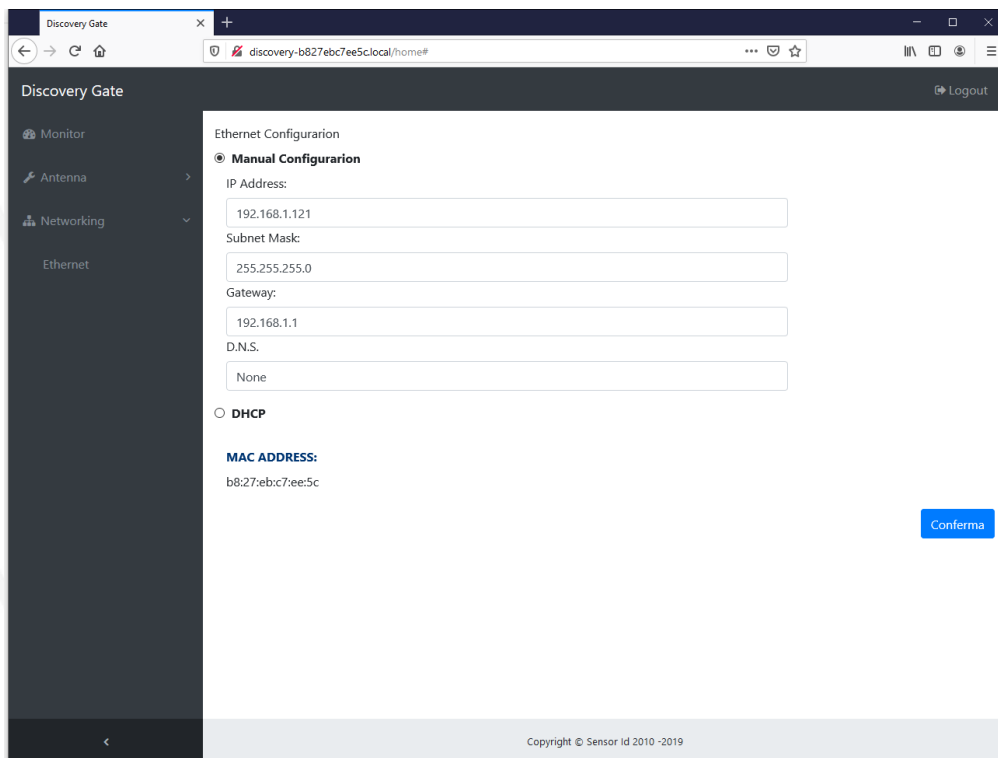

Discovery Gate

Monitor

Antenna

Networking

Ethernet

Ethernet Configuration

Manual Configuration

IP Address:

192.168.1.121

Subnet Mask:

255.255.255.0

Gateway:

192.168.1.1

D.N.S.:

None

DHCP


MAC ADDRESS:

b8:27:eb:c7:ee:5c

Conferma

Copyright © Sensor Id 2010 - 2019

8 Operative mode

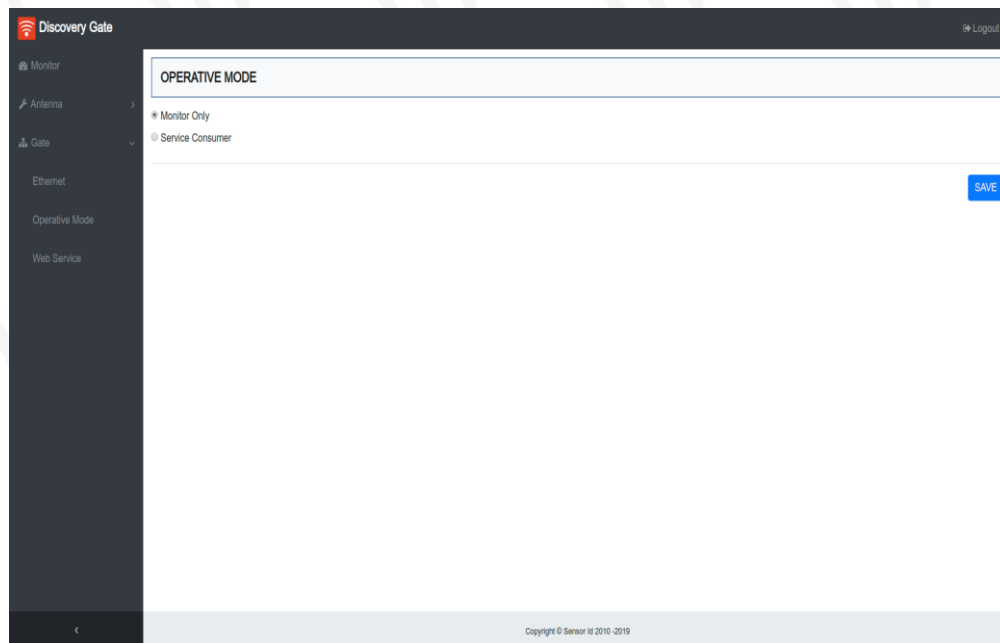

The Discovery Gate can operate in two modes:


1. Only monitor

2. Service Consumer

When is selected “only monitor” no tag is sent to Server, this mode is for test only.

Service Consumer mode is used for send data to a web service. Before doing this you need to configure some parameters in “web service” menu.

9 Web Service

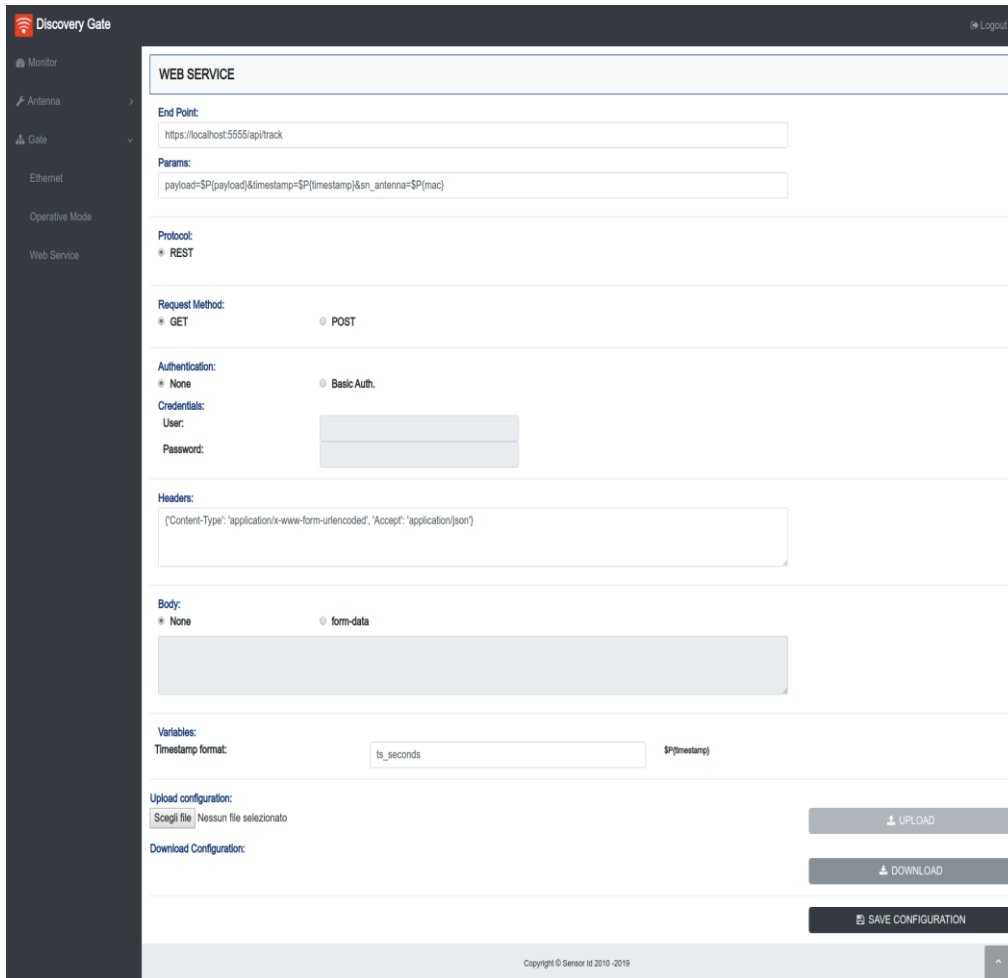

The screenshot shows the 'Discovery Gate' interface for configuring a 'WEB SERVICE'. The left sidebar contains navigation options: Monitor, Antenna, Gate, Ethernet, Operative Mode, and Web Service (selected). The main configuration area includes the following fields:

- End Point:** `https://localhost:5555/api/track`
- Params:** `payload=$P{payload}×tamp=$P{timestamp}&sn_antenna=$P{mac}`
- Protocol:** ☒ REST
- Request Method:** ☒ GET, ☐ POST
- Authentication:** ☒ None, ☐ Basic Auth.
- Credentials:**
 - User: [text input]
 - Password: [text input]
- Headers:** `["Content-Type": "application/x-www-form-urlencoded", "Accept": "application/json"]`
- Body:** ☒ None, ☐ form-data
- Variables:**
 - Timestamp format: `ts_seconds`
 - `$P{timestamp}`
- Upload configuration:** `Scagl file` | Nessun file selezionato
- Download Configuration:** [button]
- Buttons:** [UPLOAD], [DOWNLOAD], [SAVE CONFIGURATION]

Copyright © Sensor ID 2010 - 2019

On this page you can set the parameters for sending data to the webservice.
 First of all we must enter the URL of the endpoint of the webservice.

End Point:

`https://localhost:5555/api/track`

Params:

`payload=$P{payload}×tamp=$P{timestamp}&sn_antenna=$P{mac}`

Params

in the url parameter you can use some parameters placeholder for create dynamic

`$P{payload}` : tag read from antenna

`$P{mac}`: antenna mac address

`$P{timestamp}` : timestamp

Sensor ID s.r.l.

\$P{gate_id} : production id

Request Method and authentication

In this section is possible set the request method, POST or GET, and authorization credential for the basic authentication.

Request Method:

☒ GET

☐ POST

Authentication:

☒ None

☐ Basic Auth.

Credentials:

User:

Password:

You can

Headers:

```
{'Content-Type': 'application/x-www-form-urlencoded', 'Accept': 'application/json'}
```

customize the headers and body of request.

Body:

☒ None

☐ form-data

Variables:

Timestamp format:

\$P{timestamp}

The table below shows all the codes that you can pass to the timestamp format.

Directive	Meaning	Example
ts_seconds	Unix Timestamp	
%a	Abbreviated weekday name.	Sun, Mon, ...

Sensor ID s.r.l.

Directive	Meaning	Example
%A	Full weekday name.	Sunday, Monday, ...
%w	Weekday as a decimal number.	0, 1, ..., 6
%d	Day of the month as a zero-padded decimal.	01, 02, ..., 31
%-d	Day of the month as a decimal number.	1, 2, ..., 30
%b	Abbreviated month name.	Jan, Feb, ..., Dec
%B	Full month name.	January, February, ...
%m	Month as a zero-padded decimal number.	01, 02, ..., 12
%-m	Month as a decimal number.	1, 2, ..., 12
%y	Year without century as a zero-padded decimal number.	00, 01, ..., 99
%-y	Year without century as a decimal number.	0, 1, ..., 99
%Y	Year with century as a decimal number.	2013, 2019 etc.
%H	Hour (24-hour clock) as a zero-padded decimal number.	00, 01, ..., 23
%-H	Hour (24-hour clock) as a decimal number.	0, 1, ..., 23
%I	Hour (12-hour clock) as a zero-padded decimal number.	01, 02, ..., 12
%-I	Hour (12-hour clock) as a decimal number.	1, 2, ... 12
%p	Locale's AM or PM.	AM, PM
%M	Minute as a zero-padded decimal number.	00, 01, ..., 59
%-M	Minute as a decimal number.	0, 1, ..., 59
%S	Second as a zero-padded decimal number.	00, 01, ..., 59
%-S	Second as a decimal number.	0, 1, ..., 59
%f	Microsecond as a decimal number, zero-padded on the left.	000000 - 999999
%z	UTC offset in the form +HHMM or -HHMM.	
%Z	Time zone name.	
%j	Day of the year as a zero-padded decimal number.	001, 002, ..., 366
%-j	Day of the year as a decimal number.	1, 2, ..., 366

Directive	Meaning	Example
%U	Week number of the year (Sunday as the first day of the week). All days in a new year preceding the first Sunday are considered to be in week 0.	00, 01, ..., 53
%W	Week number of the year (Monday as the first day of the week). All days in a new year preceding the first Monday are considered to be in week 0.	00, 01, ..., 53
%c	Locale's appropriate date and time representation.	Mon Sep 30 07:06:05 2013
%x	Locale's appropriate date representation.	09/30/13
%X	Locale's appropriate time representation.	07:06:05
%%	A literal '%' character.	%

Save, export and import configuration

10 Federal Communications Commission (FCC)

10.1 Part 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

10.2 Part 15.21

Any changes or modifications to this equipment not expressly approved by Sensor ID may cause harmful interference and void the user's authority to operate this equipment.

10.3 Part 15.105

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

10.4 RF Radiation Exposure statement

This product complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. The antenna should be installed and operated with minimum distance of 20 cm between the radiator and your body.