 


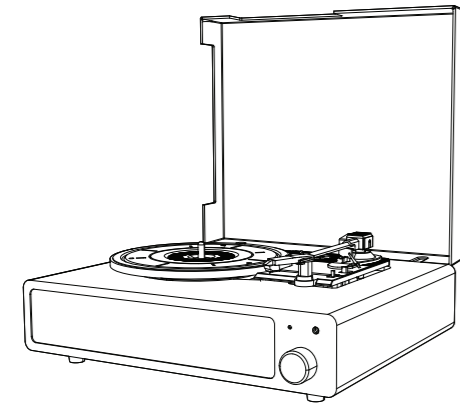

ANESOK

EN

 
 
User Manual A vinyl record player A6




BEFORE USE

1. Choose a safe location and avoid placing the unit in direct sunlight or near any heat source.
2. Avoid locations subject to vibrations, excessive dust, cold, or moisture.
3. Do not open the cabinet as this may result in an electrical shock. If a foreign object is inserted accidentally contact your dealer.
4. Do not attempt to clean the unit with chemical solvents as this might damage the finishing. A clean, dry cloth is recommended for cleaning.
5. Keep this manual for future reference.

TURNTABLE PARTS

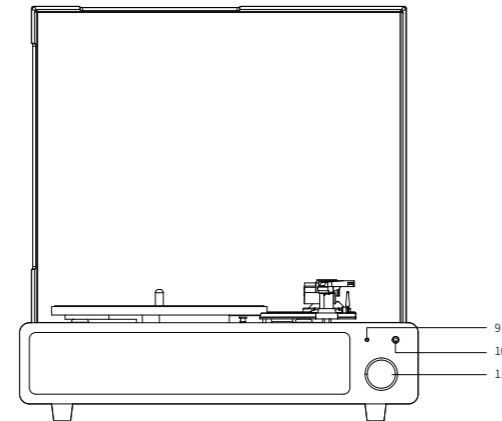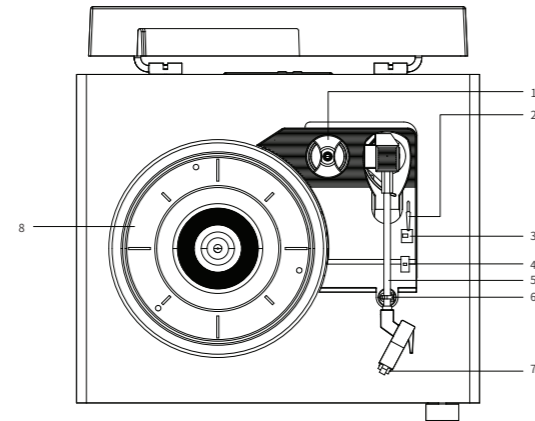

FUNCTION DESCRIPTION

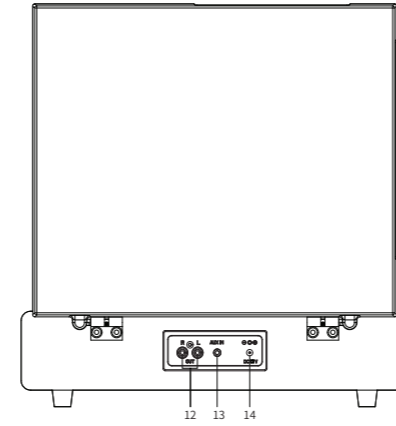 

- | | |
|----------------------------|---|
| 1. 45RPM adaptor | 9. Status indicator |
| 2. Lift lever | 10. 3.5mm headphone jack |
| 3. AUTO-STOP ON/OFF switch | 11. Power ON/OFF and volume control knob |
| 4. Speed switch | 12. RCA out port—to connect external speaker system with built-in amplifier |
| 5. Tonearm | 13. Line in(AUX-IN) port |
| 6. Tonearm lock | 14. DC IN jack—to connect the power adaptor |
| 7. Cartridge with needle | |
| 8. Platter | |

PARAMETER SPECIFICATION

Model	A6	Bluetooth	V 5.1
Input voltage	AC100V~240V 50/60HZ	Play mode	LP/Bluetooth/AUX
Power Adapter	DC12V/1.0A	Rotational speed	33/45/78 RPM
Product Dimensions	36.8*33*13.6 cm	Record size	7/10/12
Item Weight	2.35 kg	Power cord length	1 m

FUNCTION DESCRIPTION

GETTING STARTED

Firmly and securely insert the DC plug of the adaptor to the DC IN Jack on the unit. Insert the adaptor's AC plugs into a power outlet.

BLUETOOTH MODE

1. Turn on the power switch knob. The device enters into Bluetooth mode automatically (USB, AUX-IN ports is not occupied) The status indicator will become blue with flashing.
2. Turn on the Bluetooth function on your mobile phone or tablet PC and search device name ANESOK-A6. After pairing and connection, the indicator will become blue without flashing, then you can play your music from your mobile phone or tablet PC through this turntable player. Turn the VOLUME CONTROL KNOB to adjust the volume. The mobile phone or tablet PC's volume control also impacts the overall volume level. Please adjust that as well if necessary.

PHONO MODE

1. Turn on the power switch knob.
2. Place a record on the turntable platter and select the desired speed (33/45/78) according to the record. NOTE: when playing a 45RPM record, use the included 45RPM adaptor located in the holder near the tonearm.
3. Remove the white needle protector and open the tonearm clip to release the tonearm. Push the lift lever backward to raise the tonearm and gently move the tonearm towards the desired position over the record. Push the lift lever forward to lower the tonearm slowly onto the desired position on the record, Device enters into PHONO mode automatically to begin playing the record.
4. If the AUTO STOP ON/OFF Switch is turned ON, the record will stop playing automatically when finished (For a few vinyl records, it will stop when it does not come to the end OR it will not stop when it comes to the end.). If Auto Stop Control is turned OFF, the record will NOT stop playing automatically when finished.

Notice: PHONO mode is the highest precedence, must stop PHONO mode to switch into BT, AUX, USB mode.

AUX IN MODE

1. AUX-IN mode is precedence after plugin, plug 3.5mm Audio cable. Device enter into AUX-IN mode automatically.
2. You can enjoy the music from iPod, MP3 player, mobile phones, etc. through the record player.

FUNCTION DESCRIPTION

3. Turn the VOLUME CONTROL KNOB to adjust the volume. The iPod, MP3 player, mobile phones' volume control also impact the overall volume level. Please adjust that as well if necessary.

AMPLIFIER CONNECTION (IF REQUIRED)

Whilst you can listen to your new turntable using the built in speakers you may wish to connect it to your existing Hi-Fi system. Connect the audio plugs to the Line input on your mixer or amplifier using an RCA cable (not supplied)

- Red plug into R/H channel input.
- White plug into L/H channel input.

HOW TO REPLACE THE NEEDLE

To replace the needle, please refer to the instructions below.

Removing the needle from the cartridge:

1. Place a screwdriver at the tip of the stylus and push downward as shown in direction "A".
2. Remove the stylus by pulling the stylus forward and pushing downward.

Installing the Stylus:

1. Hold the tip of the stylus and insert the stylus by pressing as shown in direction "B".
2. Push the stylus upward as in direction "C" until the stylus locks into the tip position.



FUNCTION DESCRIPTION

NOTES

1. We recommend that you clean your turntable with an anti-static cloth for maximum protection.
2. We would also point out that for the same reason your stylus should be replaced periodically (approximately every 250 playback hours)

TIPS FOR BETTER TURNTABLE PERFORMANCE

1. When opening or closing the turntable cover, handle it gently, gripping it either at the centre or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Frequently clean the needle tip-use a soft brush in a "back-to-front" motion only.
4. If you must use a needle cleaning fluid, use it very sparingly..
5. Gently wipe the turntable player housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable player.
6. Never apply harsh chemicals or solvents to any part of the turntable system.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.