





Bluetooth Mode 11 one press the power button for 2 seconds to turn on the speaker. After hearing a gradually intensifying "deng deng deng" prompt sound. the device will automatically enter Bluetooth mode, and the blue light will flash. Open your Bluetooth device, search for "TuneElf," and select it to connect. Once connected you will hear two crisp "deng deng" prompt sounds and the blue light will remain on, reverting to the normal lighting mode. allowing you to play music. 2.To disconnect the current Bluetooth device, quickly press the button four times You will bear a gradually weakening "deng deng deng" prompt sound. The speaker will then enter Bluetooth pairing mode, and the blue light will flash 3 The "TuneFift Bluetooth speaker features a connection memory function automatically reconnecting to the last connected device upon startup. 3 TWS Wireless Stereo Playback

. (A) Prerequisites for TWS Connection 1. This function requires two "TuneElf" speakers, both of which must be powered on and in Bluetooth pairing mode.

2. Before proceeding with TWS pairing, ensure that neither "TuneFif" speaker is connected to any device via Bluetooth

• (B) TWS Connection Steps

1.Power on both "TuneElf" speakers and enter Bluetooth pairing mode. 2.Quickly press the power button on one of the speakers three times to enter-TWS mode. After hearing the search prompt sound,"dong dong," the lights will alternate between blue and white, and the speaker will automatically search for the other speaker to establish a TWS connection.

3.If the TWS pairing is successful within 30 seconds, the main speaker will emit a clear connection success prompt sound "ding" At this point, it will enter Bluetooth pairing mode, the blue light on the main speaker will flash, and the secondary speaker's light will revert to normal. The two speakers will

automatically switch to left and right channels, with the main speaker as the left channel and the secondary speaker as the right. 4. Beneat the above Bluetooth connection process to pair the Bluetooth device

with the sneakers. Once connected, play music on the device to experience stereo sound from both speakers. During TWS playback, the lights of both sneakers will sync with each other in effect

5 If the TWS connection is unsuccessful after 30 seconds, the main speaker will exit the TWS search mode, the lights will change from alternating blue and white to flashing blue, indicating that the speaker has automatically returned to Bluetooth pairing mode.

• (C) Disconnecting TWS Connection

1.While in TWS connection status, quickly press the power button on either speaker three times to disconnect the connection and clear the TWS device. memory. Upon the next power-on, the speakers will not automatically reconnect and a disconnection promot sound "dingling" will be heard. Both the main and secondary speakers will then enter Bluetooth pairing mode, indicated by the flashing blue light.

2 If the TWS connection is not disconnected both speakers will automatically reconnect to the TWS device the payt time they are nowered on

Cool Colorful RGB Lighting

. (A) Bluetooth Connection Indicators

1.Bluetooth pairing mode: blue light flashing (frequency 0.5s). 2 Bluetooth connection successful: BGB lights transition in color.

3 Bluetooth connection disconnected: blue light flashing.

4.TWS interconnection mode: blue and white lights alternate. 5.TWS connection successful: blue light flashes on the main speaker. while the secondary speaker returns to normal lighting mode

• (B) Light Mode Switching

Double-click to switch: After successfully connecting via Bluetooth. double-click the button to switch between light modes. You can cycle through five different lighting modes: Bhythm - Breathing - Colorful Lights - Candlelight - Off

Type-C Fast Charaina

Please avoid using power adapters that have not passed safety certification

X It is recommended to use a power adapter with a 5V-1A output for charging. 1. The speaker supports adaptive charging, automatically adjusting the charging current based on the power of the external power adapter When charging via a computer USB port, the charging current will be low.

leading to a longer charging time. 2.A red light indicates that the speaker is charging.

and a green light will appear when it is fully charged.

Energy Saving

The speaker will automatically power off to conserve energy under the following conditions:

1.In Bluetooth mode, if no device is connected for pairing within twenty minutes. 2 in any mode, if the nower button is pressed to hause and there is no further operation for twenty minutes, the speaker will sutomatically power off To turn it back on please long press the power button

- Warm Reminder:

This product is designed to be water-resistant for everyday use However Do not submerge the speaker in water. (In case of functional failure due to water ingress, our company reserves the right of final interpretation.)

Troubleshooting

What to do if Bluetooth cannot connect or there is no sound

when playing music?

Please first confirm that the speaker is in Bluetooth mode. Then, check that your Bluetooth device supports Bluetooth functionality and ensure it is turned on Verify that the speaker is in Bluetooth search mode. If there are too many Bluetooth devices nearby, it may cause difficulty in searching, so please turn. off other Bluetooth devices.

No. Custom:
This device compiles all th part 15 of the FCC Rules. Operation is subject to the
following two conditions: (1) This device may not cause hareful interference, and (2) this device must accept any interference
recived, including interference that may cause underind operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could sold the user's authority to

Note: This equipment has been tested and found to comply with the limits for a Class E digital device, pursuant to part 15 of the ECC Bules. These limits are designed to provide responsible protection and part to part of interference in a residential Install table.

This coppions gover into uses and can real six radio frequency energy and. If not Install dated used in accordance with the behavior of the property of the pr

-Booriest or relicate the receiving antenna.

-Booriest he separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit of ifferent from that to which the receiver is connected.

-Connect the dealer or an experienced read CMV technicis on for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition

50*60mm, 80克书纸, 单面单黑