
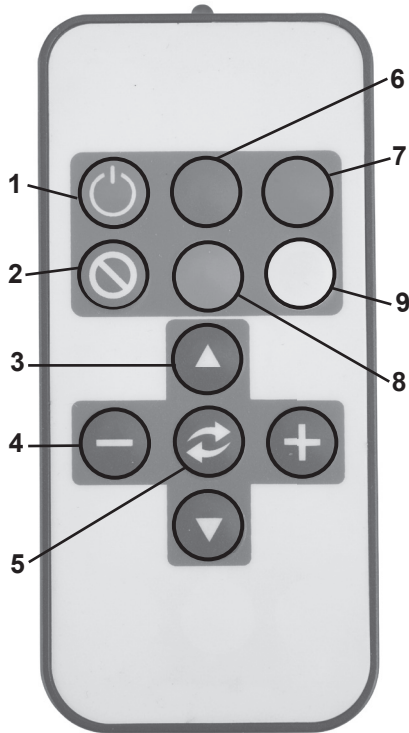


Operation

1. Check that the Power Cord / Controller is connected to the String Lights then connect to 120 VAC outlet.
2. Use the Remote Control to turn the lights on/off. Also use it to select color and mode changes.
3. On the Remote Control, remove the pull-out Tab to activate the battery.
4. Point the Remote Control at Controller and press selection buttons as desired.

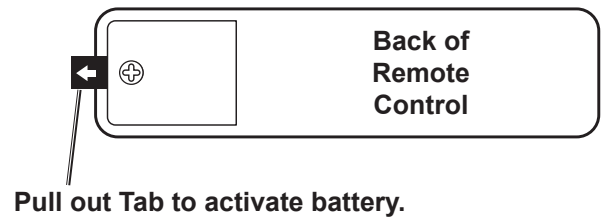

Button	Selection
1	ON: Turns lights on.
2	OFF: Turns lights off.
3	BRIGHTNESS: Press ▲ / ▼ to choose brightness level (only works in single color mode).
4	SPEED: Press - / + to decrease or increase color changing speed (only works in color combination mode).
5	MODE: Press to select a color combination.
6	RED: Press to change light color to red.
7	GREEN: Press to change light color to green.
8	BLUE: Press to change light color to blue.
9	WHITE: Press to change light color to white.

Programming and Resetting the Remote Control

1. Reset the Remote Control if it is not working properly or has been replaced.
2. To Reset, turn power OFF by unplugging the Power Cord / Controller.
3. Press and hold the Remote Control's ON button.
4. While holding down the ON button, plug power cord back into the outlet and point the Remote Control at the Controller.
5. The String Light's bulbs should flash 3 times signifying the Remote Control has been successfully reprogrammed.
6. Release the On button.

FCC Note:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.