

Warranty card

Your tablet comes with a 1-year manufacturer's warranty for any manufacturing defects

To register your product, please go to the following link:

Also fill in the details below for your own reference and keep this card in a safe place.

Order Number: _____
Model Number: _____
Serial Number: _____

Following are the terms and conditions for the warranty:

1. The warranty covers only the product listed on this card.
2. Warranty covers any manufacturing defects which occurred within one year of the purchase. Normal wear and tear is not covered.
3. The retailer will cover the expenses for the return shipping if the defect occurs within first 30 days. After first 30 days of the purchase, buyer is responsible to pay the shipping cost for sending the item for repair.
4. The average time to repair and send the unit back is about 6 weeks.
5. The manufacturer may send a replacement unit instead of repairing the defective one at his own discretion.
6. Please remove all your personal information before sending the unit for repair. The manufacturer is not responsible for any loss of data or information.

Quick Start Guide

This is a quick start guide only.
Ceci est un guide de démarrage rapide seulement.
Dies ist eine Kurzanleitung nur.
Questa è solo una guida rapida.
Esta es sólo una guía de inicio rápido.

For full user manual, please visit
Pour le mode d'emploi complet , s'il vous plaît visitez
Für vollständige Bedienungsanleitung finden Sie unter
Per manuale utente completo , visitare il sito
El manual de usuario completo, visitar

<https://frunsi.com>

Read me first

Please read this manual before operating your tablet and keep it for future reference.

The descriptions in this manual are based on the default settings.

Images and screenshots used in this manual may differ from the actual product.

Available features and additional services may vary by device, software or service provider.

Our company is not liable for performance issues caused by third-party applications.

Getting Started

1. Charge the Tablet

The Tablet comes with a built-in rechargeable lithium-polymer battery. It is recommended to fully charge the battery for at least **4 hours** before first use.

- To charge the Tablet, plug the charger to an electrical socket with the other end of the adapter inserted to the charging slot on the Tablet (Refer to Step 1 on the previous page).
- You may continue to use the Tablet while it is charging. You may stop charging any time even when it is not 100% charged.
- The battery charge status will be indicated in the middle of the screen.



- Disconnect the power adapter when the Tablet is fully charged after 4 hours.
- If the tablet does not power up after charging, please insert a paper clip pin inside the Reset hole on the back and recharge the tablet again.

Note: When the Tablet is connected to a computer via the USB cable, the battery will charge via the USB socket, but at a much slower rate than via the DC 5V power adapter.

- ⚠ **Do not use any other power adapters than the one supplied. Using an incompatible power adapter could damage the tablet and poses the potential risk of fire.**

2. Turn on the Tablet

- Press the power key for 5 seconds.
- The Frunsi logo will show up in the middle of the screen, followed by the Android™ logo. •

Wait for about 30-60 seconds for Android system to load.


- You will then see the welcome page.

3. Touch Screen Actions

You can control all the functions of the Tablet by using the touch screen in combination with the three touch keys located at the bottom of the screen. To control the Tablet, use your finger to select the icons, buttons, menu, on-screen keyboard, and other items displayed on the screen.

You can perform the following actions with your fingers:

- Touch an option to select it
- “Touch and drag” to move items or to scroll through lists by touching and holding, then gliding your finger over the screen.
- Use a finger and thumb to “pinch zoom” on-screen items such as photographs and web pages.

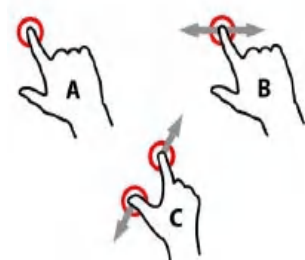

4. Initial setup

- On the welcome page, scroll to select the desired language.
- Tap the arrow circled in green to proceed.
- Select a Wi-Fi network, i.e. the wireless network for Internet connection
- Enter the password and wait for the connection and system check. It may take up to 2 minutes.

- Sign in to your Google™ account

If you have an existing Google account

- ⇒ Enter your Google email and press Next
- ⇒ Enter your Google account password and press Next
- ⇒ Accept the Terms of Service and Privacy Policy

If you do not have a Google account yet

- ⇒ Select “Or create a new account”
- ⇒ Enter your first name and last name and press Next
- ⇒ Enter your desired username and press Next
- ⇒ Create your password with at least 8 characters and press Next
- ⇒ You will be prompted to add your phone number. You may insert your phone number or skip this step.
- ⇒ Agree to the Privacy Policy and Terms of Service by pressing “I agree”

- Wait for about 30 seconds for the Tablet to sign in and load your account info
- Select backup options, payment info accordingly (You may skip this step and change the setup later)
- The Home screen with a digital clock will show up.
- Press and swipe up the lock icon to unlock.

The Tablet is now ready for use.

5. Power on and off

To turn on the Tablet: Press and hold the power key until the LCD screen turns on. Wait until the Home screen appears. The tablet is now ready to use.

To turn off/ reboot the Tablet: Press and hold the Power key until the “power off” menu appears. Choose “Power off” to turn off the Tablet or “Reboot” to reboot the device.

To lock screen: When the Tablet is on, press the power key once to lock screen. The tablet will enter the standby mode. Alternatively, press and hold the Power key until the “lock now” menu appears.

To unlock screen: When the Tablet is on but in standby mode, press the power key once to get to the unlock screen. The home screen will show up. Press and swipe up the lock icon to unlock.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This TABLET PC meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: TABLET PC has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the TABLET PC kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the TABLET PC. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.