

SB01 User manual

Automatic Smart Phone Charging

After connecting your smartphone to the inner portable battery, please put the smartphone to the wireless charging pocket on the shoulder side. It'll be automatically wireless-recharged. Feel free from charging cables. Charge and store your phone freely.

Notes

The position of the wireless charging receiver may vary depending on the phone model. Please adjust the position to allow your phone to fit into it.

If the case of your phone too thick or contains metal or magnets, wireless charging may not be successful.

Wireless charging speed may vary depending on the portable battery you connect to.

Precautions

We are not responsible for any damages to Spaker products or mobile phones caused by inadequate personal use, carelessness, or failure to observe the usage instructions and precautions listed on the detail page. Please make sure you're aware of the precautions to use the product.

Please avoid dropping the bag from a high place, throwing it on the floor, or pulling the grab with a strong force, as this can cause malfunction.

Unauthorized repair or disassembly of the device may be the reason you can't use after-sales service.

Stop using the product and disconnect the portable charger before cleaning and maintenance.

Do not use alcohol or other detergents. Clean the bag with a soft, dry cloth.

Too high or low ambient temperature may cause product failure or fire. If the bag is suddenly placed in room temperature from a cold place, it can damage the internal circuits of the product due to moisture inside the product.

Do not use any third-party cable other than our company's cable, non-standard power supply, or charger. This may cause product failure, fire or other hazards.

Q. How do I wash it?

※ Do not wash with water. See the Precautions

Since the wireless charging device is built into the bag, do not wash with the water.

Stop using the product and disconnect the portable charger before cleaning and maintenance.

Do not use alcohol or other detergents. Clean the bag with a soft, dry cloth.

When drying, remove the water as much as possible after washing, and spread with using hands, and then dry it in the well-ventilated shade.

Please be careful not to discolor due to friction between the product and other colored fabrics.

Do not rub the bag hard on rough surfaces.

Please do not brush or iron the printed and embroidery parts.

Do not use it in oily places.

Store in a shade away from high temperature or high humidity.

Please note that the shape or material of the product may be changed when exposed to a hot fire.

Please note that there may be damage to clothing (peeling, fluff, etc.) when rubbing against certain clothes (cashmere, silk, knitwear, etc.) due to the nature of the material of bag products with mesh materials on the back part.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC RF exposure statement:

The device has been evaluated to meet general RF exposure statement.

The device can be used in portable exposure condition without restriction

FCC ID: 2AVIX-SB