

Instruction of FP.08.08.01



Pic.1

1 Keyboard


1.1 Long press to pair box

- 1. The box is powered on, and the blue LED lights on to enter the pairing mode
- 2. Press and hold the offline voice button for 3 seconds until it flashes.

If the pairing is successful, the LED light stops flashing and turns on. If pairing fails, the blue LED light turns off. Repeat the steps until pairing is successful

1.2 Short press to stop function

Click the Press button to stop all actions

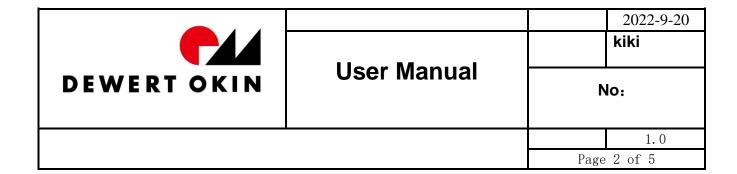

2. Command Function

To activate VCM, say the wake words, "Okay, Bob." The LED light on the device lights up green and the Voice Command Module responds with a "beep."

NOTES:

The VCM is set in silent as its default mode.

When the voice feedback is turned on and after every successful command, the VCM responds with "I am here."


Within 15 seconds, say the voice command to control your bed. Your adjustable bed beeps again and adjusts according to a valid voice command.

NOTE: It is not necessary to repeat the wake word. The VCM responds automatically when given a different command.


To toggle through the wake words, say "Switch to Bob/Jarvis/Coco/Austin/Dan/Ruby." The Voice Command Module responds with "Bob/Jarvis/Coco/Austin/Dan/Ruby is now ready. You can say 'Okay, Bob/Jarvis/Coco/Austin/Dan/Ruby' to wake me up."

Command

Serial n	Command	Feedback	Action
umber			
1	HEAD-UP	HEAD-UP	Raises the head section of the bed.
2	HEAD-DOWN	HEAD-DOWN	Lowers the head section of the bed
3	FOOT-UP	FOOT-UP	Raises the foot section of the bed.
4	FOOT-DOWN	FOOT-DOWN	owers the head section of the bed
5	NECK-UP	NECK-UP	Raises the neck section of the bed
6	NECK-DOWN	NECK-DOWN	Lowers the neck section of the bed
7	LUMBAR-UP	LUMBAR-UP	Raises the lumbar section of the bed.
8	LUMBAR-DOWN	LUMBAR-DOWN	Lowers the lumbar section of the bed
9	STOP-ALL	STOP-ALL	Stops all lift activities
10	FLAT-POSITION	FLAT-POSITION	Adjusts the bed into a flat position.
11			Raise the foot section slightly higher than the
11	ZERO-GRAVITY	ZERO-GRAVITY	chest for a relaxing position.

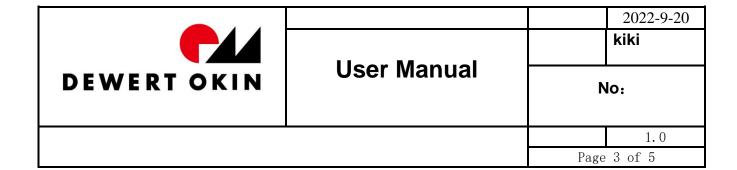

12			Adjusts the bed into a relaxing chaise lounge
	LOUNGE-POSITION	LOUNGE-POSITION	position.
13	ANTI-SNORE	ANTI-SNORE	Raises the head section to help reduce snoring
14	MASSAGE-START	MASSAGE-START	Turns massage motors on.
15	MASSAGE-STOP	MASSAGE-STOP	Turns massage motors off
16	WAVE-ONE	WAVE-ONE	Starts massage at wave 1.
17	WAVE-TWO	WAVE-TWO	Starts massage at wave 2
18	WAVE-THREE	WAVE-THREE	Starts massage at wave 3.
19	WAVE-FOUR	WAVE-FOUR	Starts massage at wave 4
20	MASSAGE-UP	MASSAGE-UP	Increases massage intensity
21	MASSAGE-DOWN	MASSAGE-DOWN	Decreases massage intensity
22	LIGHT-ON	LIGHT-ON	Turns the underbed lights on.
23	LIGHTS-ON	LIGHTS-ON	Turns the underbed lights on.
24	LIGHT-OFF	LIGHT-OFF	Turns the underbed lights off.
25	LIGHTS-OFF	LIGHTS-OFF	Turns the underbed lights off.
26	TOGGLE-LIGHT	TOGGLE-LIGHT	Toggles through the underbed light colors
27	TOGGLE-LIGHTS	TOGGLE-LIGHTS	Toggles through the underbed light colors
28	VOLUME-UP	VOLUME-UP	Increases the volume of the VCM.
29	VOLUME-DOWN	VOLUME-DOWN	Reduces the volume of the VCM
20			Increases the volume of the VCM to the
30	MAX-VOLUME	MAX-VOLUME	maximum level.
31		MINIMUM-VOLUME	Reduces the volume of the VCM to the
	MINIMUM-VOLUME		minimum level.
32	SILENT-MODE	SILENT-MODE	akes "dingdong" as a voice feedback
33	TURN-ON-SOUND-PLA	TURN-ON-SOUND-PLAY	Turns on the voice feedback again
	YBACK	BACK	

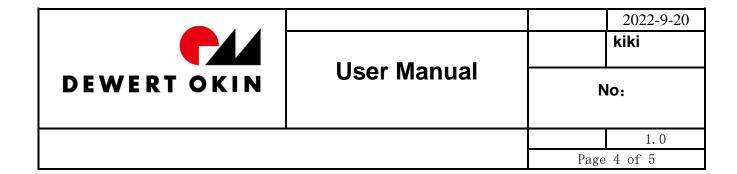

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

ISED RSS Warning/ISED RF Exposure Statement


ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

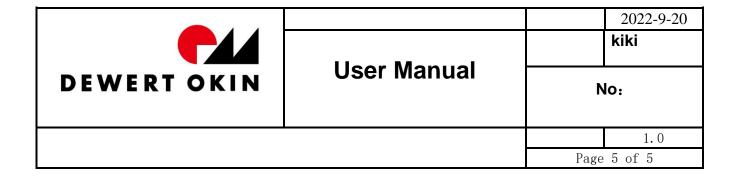

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Le rayonnement de la classe b repecte ISED fixaient un environnement non contrôlés. Installation et mise en œuvre de ce matériel devrait avec échangeur distance minimale entre 20 cm ton corps. Lanceurs ou ne peuvent pas coexister cette antenne ou capteurs avec d'autres.