
 <small>A Phoenix Mecano Company</small>	Issue Department: Bedding Division	Date:	2017-8-15
	System Instruction	Author:	
Instruction of RF5011		Edition:	1.1
		Page 1 of 4	

Instruction of RF5011



Figure 1 button of remote

 <small>A Phoenix Mecano Company</small>	Issue Department: Bedding Division	Date:	2017-8-15
	System Instruction	Author:	
Instruction of RF5011		Edition:	1.1
		Page 2 of 4	

1 Item

1.1 Stop snoring button ⑤

Click the Stop snoring button, the head actuator moves to Stop snoring position, stop when click any button during the movement.

1.2 Head up ⑦

Press and hold HEAD UP button of remote, head actuator moves out, stop when released;

1.3 Head down ⑧

Press and hold HEAD DOWN button of remote, head actuator moves in, stop when released;

1.4 Foot up ⑩


Pressa and hold FOOT UP button of remote, foot actuator moves out, stop when released;

1.5 foot down ⑪

Press and hold FOOT DOWN button of remote, foot actuator moves in , stop when released;
When moving to flat position, lumbar actuator and tilt actuator move first, after 500ms, head and foot actuators start moving;

1.6 Flat ⑨

Click FLAT button, the bed goes flat, stop when click any button during the process of going flat;

 <small>A Phoenix Mecano Company</small>	Issue Department: Bedding Division	Date:	2017-8-15
	System Instruction	Author:	
Instruction of RF5011		Edition:	1.1
		Page 3 of 4	

1.7 Memory location ④ ⑥

Click memory location to set the bed to the setted location.

1.8 Pair ②


Click Pair for one second to pair the retmote and bed.

1.9 Massage head ①

Click MASSAGE HEAD button, head massage motor switches massage intensity, massage intensityswitches among 0-1-2-3;

1.10 Massage foot ③

Click MASSAGE foot button, head massage motor switches massage intensity, massage intensityswitches among 0-1-2-3;

	Issue Department: Bedding Division	Date:	2017-8-15
	System Instruction	Author:	
	Instruction of RF5011		
			Page 4 of 4

FCC Warning:

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ISED RSS Warning:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.