 <small>A Phoenix Mecano Company</small>	Issue Department: Bedding Division	Date:	2024-05-22
	<b>System Instruction</b>	Author:	
<b>Instruction of RF.53.25.01</b>		Edition:	1.0
		Page 1 of 5	


### Instruction of RF.53.25.01



Figure 1

## Item

### 1.1 Light button 1

 <p><b>OKIN REFINED</b> A Phoenix Mecano Company</p>	Issue Department: Bedding Division	Date:	2024-05-22
	<b>System Instruction</b>	Author:	
	<b>Instruction of RF.53.25.01</b>		
			Page 2 of 5

Press the light button to turn on the light in the remote.

### 1.2 Lock button 2

Long press the Lock button for 3 seconds to unlock/lock the remote.

### 1.3 Pair button 3

Long press the pair button to pair the signal between the remote and control box.

### 1.4 Head pillow up button 4

Press the head pillow up button to move out the head pillow actuator.

### 1.5 Head pillow down button 5

Press the head pillow down button to move in the head pillow actuator.

### 1.6 Waist up button 6

Press the waist up button to move out the waist actuator.

### 1.7 Waist down button 7

Press the waist down button to move in the waist actuator.

### 1.8 Fifth up button 8

Press the fifth up button to move out the fifth actuator.

### 1.9 Fifth down button 9

Press the fifth down button to move in the fifth actuator.

### 1.10 Head up button 10

Press the head up button to move out the head actuator.

### 1.11 Head down button 11


Press the head down button to move in the head actuator.

### 1.12 Foot up button 12

Press the foot up button to move out the foot actuator.

### 1.13 Foot down button 13

Press the foot down button to move in the foot actuator.

 <p><b>OKIN REFINED</b> A Phoenix Mecano Company</p>	Issue Department: Bedding Division	Date:	2024-05-22
	<b>System Instruction</b>	Author:	
	<b>Instruction of RF.53.25.01</b>		
			Page 3 of 5

#### **1.14 Memory 1 position button 14**

Click the Memory 1 position button to make the head actuator move the memory 1 position; and long press the memory 1 position button until the remote background light flash to set the memory 1 position.

#### **1.15 Memory 2 position button 15**

Click the Memory 2 position button to make the head actuator move the memory 2 position; and long press the memory 2 position button until the remote background light flash to set the memory 2 position.

#### **1.16 ZG button 16**

Click the ZG button, the actuators move to ZG position.

#### **1.17 AntiSnore button 17**

Click AntiSnore button, the actuators move to AntiSnore position.

#### **1.18 Massage head 18**

Click massage head button, head massage motor switches massage intensity, massage intensity switches among 0-1-2-3;

#### **1.19 Massage timer 19**

If the massage motors work, click the button to switch the massage time, when massage time switch to 0, turn off the massage;

#### **1.20 Massage foot 20**

Click massage foot button, foot massage motor switches massage intensity, massage intensity switches among 0-1-2-3;

#### **1.21 Massage switch 21**


Click massage switch button to turn on/off the massage.

#### **1.22 Light under the bed 22**

Click the button turn on/off the light under the bed;

#### **1.23 Massage mode 23**

Click massage button switch the massage mode;

 <small>A Phoenix Mecano Company</small>	Issue Department: Bedding Division	Date:	2024-05-22
	<b>System Instruction</b>	Author:	
<b>Instruction of RF.53.25.01</b>		Edition:	1.0
		Page 4 of 5	

#### 1.24 Flat 24

Click FLAT button, the bed goes flat, stop when click any button during the process of going flat;

#### 1.24 A/B bed control select 24

Set the A/B bed control select button to control the A bed or B bed or AB together;

#### FCC:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### IC RSS warning

This device complies with Industry Canada licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.


#### ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

 <p><b>OKIN REFINED</b></p> <p>A Phoenix Mecano Company</p>	Issue Department: Bedding Division	Date:	2024-05-22
	<b>System Instruction</b>	Author:	
<b>Instruction of RF.53.25.01</b>		Edition:	1.0
		Page 5 of 5	

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.