Cleaning and Storage:

- Disassemble harness completely by pressing down on attachment tabs to separate it from the silicone section, and undo the snaps to remove the elastic waistband.
- Clean each piece according to individual instructions:

Elastic Waistband: Hand wash with mild soap and warm water and lay flat to dry.

Silicone Vibrating Harness: Spray with Doc Johnson Toy Cleaner or wash with mild soap and warm water. Do not submerge.

Hollow Silicone Attachment: Spray with Doc Johnson Toy Cleaner, wash with mild soap and warm water, boil for 5-10 minutes, or clean in top rack of dishwasher.

Allow each piece to air-dry completely before storing separately from other toys in a cool, dry place. Use with water-based lubricant/glide. Doc Johnson Toy Cleaner sold separately.

Do not attempt to warm this product in a microwave or conventional oven. Warning for Vibrating Products: To avoid injury or aggravation of pre-existing conditions, this product should not be used on swollen or inflamed areas or skin lacerations. No medical claims are warranted or implied by the use of this product. For warranty information, please visit us online at docjohnson.com

> Copyright © 2018. Doc Johnson Enterprises. All Rights Reserved. docjohnson.com INS-0801-00

> > FOR 2-PIECE BOX ONLY

To Power Vibrations On:

On Silicone Harness:

Press and hold U until the LED button lights up.

FRONT

DOCJOHNSON®

body extensions

hollow silicone strap-on set

with rechargeable vibrating

harness

Care and Usage Instructions

Body Extensions Hollow Strap-On System by

Doc Johnson is a collection of harnesses and

hollow silicone attachments designed to

stimulate the body and allow penetration play.

FOR 2-PIECE BOX ONLY

OUTSIDE

Press (b) again to change vibration pattern.

On Wireless Remote:

- After completing step 🕕 , <u>press</u> 🖰 to power on wireless remote.
- Press **W** to change vibration pattern.
- Product can be used with or without wireless remote.

To Power Vibrations Off:

On Wireless Remote:

Press U to power off vibrations TEMPORARILY.

On Silicone Harness:

Press and hold 🖒 to power off product AFTER USE.

• Make sure to power off both wireless remote and silicone harness after use.

FOR 2-PIECE BOX ONLY

To Assemble Product for Use:

- Make sure the tabs on the base of your silicone attachment are aligned to the notches in the silicone front piece of your harness.
- Place the attachment behind the silicone front piece and push the tip of the attachment through the large hole (for larger attachments, insert through front of harness).
- Press the attachment's tabs into the front piece's grooves until they push all the way through and lock in place.
- Use multiple snaps to adjust harness to your ideal fit.



and connect other end to a standard USB port to charge the internal battery.

Charge time: 60 minutes Usage time: 50 minutes

INSIDE

FOR 2-PIECE BOX ONLY

Die #: 11" x 8.5" **Artist: LMYOUNG** Date: 10/12/2020 Item #: INS-0801-00 Substrate: Paper **INKS: CMYK COATING:** TREATMENTS:

* PLEASE REFER TO LAYERS IN THE FILES FOR TREATMENTS *

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment offand on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.