



 
4.Factory Reset

Restart or restore the factory settings when you encountered some problems such as crashes during operation.




Factory reset:

1. iWawa Syterm--Parental control--Setup-- Android settings--Backup & reset-Factory data reset--RESET TABLET--ERASE EVERYTHING
2. Repeat the above settings when you want to run Android OS.






4.1 After restoring the factory settings, iWawa system requires some setup in order to re-enable. After restored the factory settings successfully, the interface will be displayed as follows:

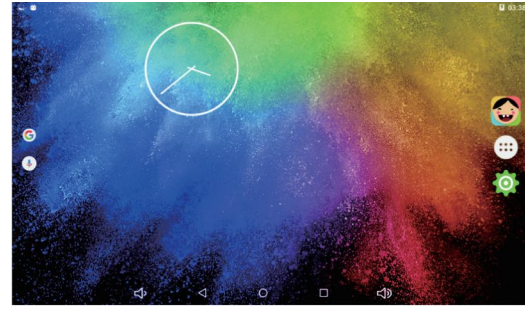

   Click iWawa APP (right side of the desktop) to start setting up accordingly.

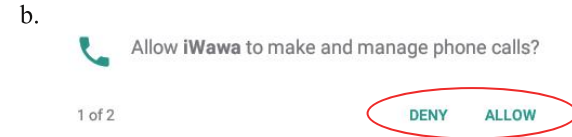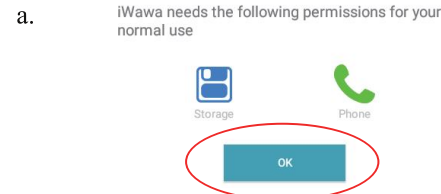

     4.2 Exit to desktop after finished WI-FI Settings, and click iWawa to go on your settings.

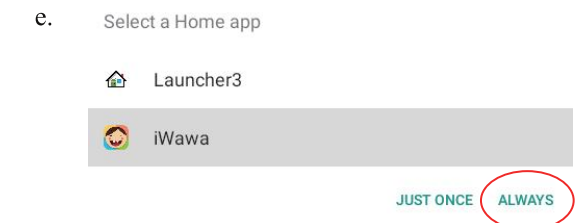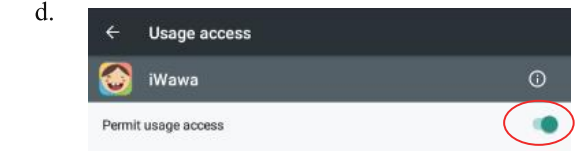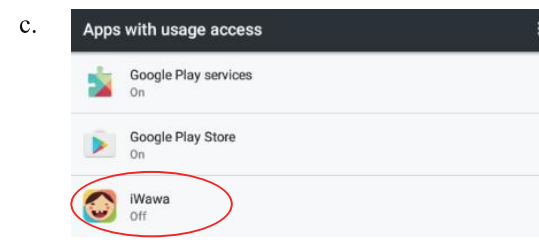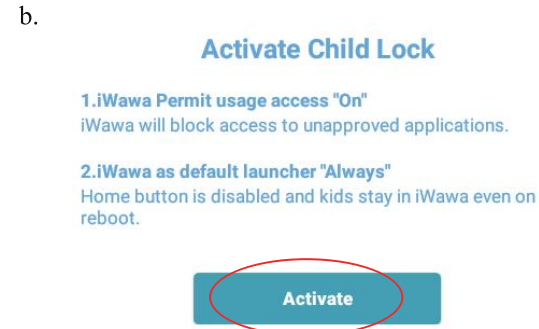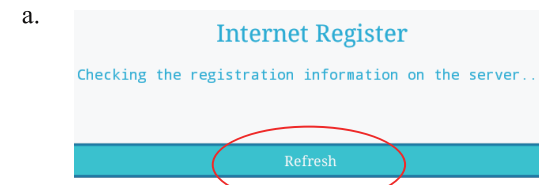

4.3 After completing all the above settings, the tablet will always run iWawa system if the user does not exit to Android OS.

WARNING:
The battery cannot be replaced.

Manufacturer: SHENZHEN YNC ELECTRONIC CO., LTD
Address: Room501, Building 9, Long jun Industrial zone, Longping community, Dalang street, Longhua district, Shenzhen city
Model: KIDS707A
Importer: AUOKE INC.
Address:10611 HARWIN DR., SUITE 406 HOUSTON TX 77036 UNITED STATES



TOPELOTEK

 
MID KIDS707A

Thank you for your recent purchase of our Topelotek product. We hope you will be pleased with both the product and service you received. If not, please give our helpful customer service team an opportunity to improve your experience right away; our team members are more than happy to help.


Our email: service@topelotek.com

User Manual

1.Description of product

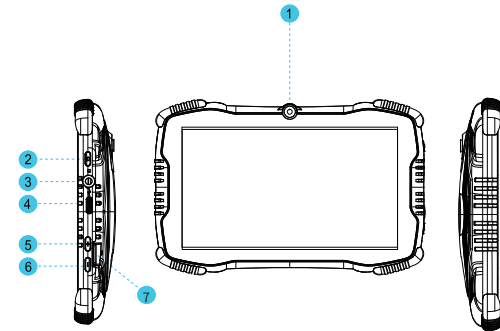


- | | | |
|-------------------------|---------------|----------------|
| ① Front Camera | ④ Type-C Port | ⑦ TF Card Slot |
| ② Power Button | ⑤ VOL+ | ⑧ Flash Light |
| ③ 3.5mm Earphone Jacket | ⑥ VOL- | ⑨ Rear camera |

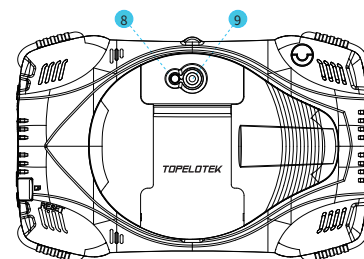 

2.Parental Control Settings

 
Press the Power button for 2-3 seconds to turn on the tablet, then you will enter into below interface.

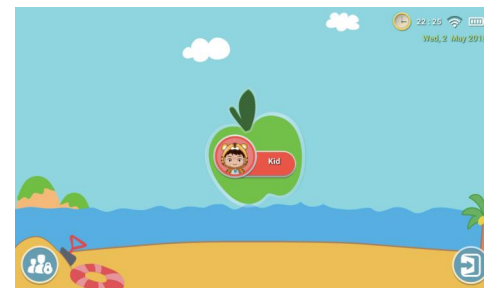

2.1 Enter into Parental Control

The kids educational application named iWawa. Please set up kids educational applications as following:

 
Click , you will see this:

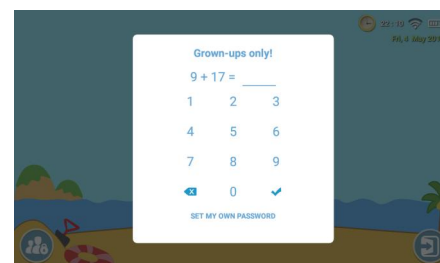

After you input the correct result, please click to start setting. (You need to calculate the formula again when you every time enter into the parental control interface . You can also set up a password, then enter the password directly. Please remember your password after set up the password.)

2.2 Brief Introduction of Parental Applications:

	Kids Store More optional kids educational applications for free usage.
	Applications Setting on downloaded applications (Notification, Running, Uninstalling, etc)
	Websites Restricted/Unlimited/Prohibited/Add website
	Media Content Select whether to show Kids Photos & Public Photos,Kids Music & Public Music,Kid Pictures & Public Pictures,Kids Movies & Public Movies in this OS.
	White list White listed packages(apps) are not shown on Kids Home Screen.
	Account Create/delete parent account password. Add/Edit children account.
	Time Limit Whole week:Restricted/Unlimited/Prohibited. Single day(7days From Sunday to Saturday):Restricted/Unlimited/Prohibited.
	Statistics Statistics of used applications in a specified time(Last day/week/month/three months/six months/year/all time), and each app's occupied/running Percent/Time/Count.
	Setup Basic Settings. Language/Wi-Fi/Disable status Bar Drop down/Storage path/Android settings/Feedback/App Update.

 

3.Introduction of Kids Applications

3.1 Enter Into Kids Applications Interface

After finished Parental Control settings, click enter into interface as below:



This OS contains a lot of applications such as Games, Learning, Story, Art, Browser, Camera, Gallery, Video, Music, Calculator, Draw, Theme, and you are able to download more applications in Kids Store.

Click (upper left corner) to exit the kid desktop.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.