

# Wireless Smart Glasses

## SD-G3 User Manual

### SPECIFICATIONS

Model Number	SD -G3
Product Name	Wireless Smart Glasses
Bluetooth	V5.0
Speaker Type	Bone Conduction / Audio Speaker
Charging Method	Magnetic Charging
Work Range	≥10M
Working Voltage	3.1V-4.2V
Frequency	2402/2480MHz
Play Time	5hours
Battery Capacity	110mAh*2
Standby	100hours
Charging Time	2hours
Packaging Size	80*77*180mm
Net Weight	43±5g

### USER INSTRUCTION

#### ☉ Power On/Off

- △ Power on: After opening the frame's leg for 3 seconds, red light will flash 3 times with "power on" sound.
- △ Power off: Fold the frame's leg, then the red light will flash 3 time with "power off" sound.

△ Automatic power off: If the glasses is power on without Bluetooth connection, it will turn off automatically after 5 minute with "power off" sound.

#### ☉ Pairing

- △ Right and left leg pairing: When open the frame's leg, both legs will pair automatically. During the pairing mode, both legs' red and blue lights flicker alternately. After both legs connected, left leg stop flickering, but right legs' red and blue lights still flicker alternately and wait for connection with user's phone.
- △ Initial connection: After open the frame's leg, turn on user's Bluetooth device and search for "SD-G3". Once the light stop flickering and hear "Connected" sound, SD-G3 and user's device are connected.
- △ Automatic connection: Open the frame's leg and it will automatically connect your previous Bluetooth device. (The latest Bluetooth device has priority to connect). It will have "connected" sound.
- △ Re-connection: If user didn't turn on Bluetooth device, press touch panel area for 1 seconds within 5 minutes. Red and blue lights will flicker alternately with "Pairing" sound.
- △ Clear connection record: If user want to clear connection record, please don't connect with Bluetooth device when open the frame's leg and press right and left leg touch panel area for 10 seconds. it will erase the connection record and automatically power off. Red and blue lights will flicker alternately 1 time with indication sound.

#### ☉ Phone Call Answering, Rejecting or Ending

- △ Answer a phone call: Short press the right touch panel area
- △ End a phone call: During a call, short press the right touch panel area.
- △ Reject a phone call: Long press the right or left touch panel area for about 3 seconds.

#### ☉ Adjusting volume

- △ Increase volume: When the glasses is playing music, long press the left touch panel area to increase volume. When the volume reaches maximum, it will have "DU DU" indication sound.
- △ Reduce volume: When the glasses is playing music, short click the left touch panel area to reduce volume.

#### ☉ Music Play/Pause

- △ Play/Pause: Short press the right touch panel area when playing music.

#### ☉ Voice Assistant Control

- △ After connected with user's phone, Long press the touch right panel area for 3 about seconds to activate voice assistant.

#### ☉ Charging and Low Battery Indication

- △ Charging: When the glasses is charging, red light will always on. When the battery is full (voltage reaches 4.2V), blue light will be on for 60 seconds and then turn off.
- △ Low power reminder: When battery voltage is lower than 3.4V, red light flickers every 10 seconds and have "Low battery" warning every 60 seconds.
- △ Low battery and power off: When the battery voltage is lower than 3.1V, red light flicker 1 time with "Power off" sound.

### SAFETY GUIDE

 
 
- △ Please use this product under local laws and regulations. Caution safety while driving and cycling in wearing this product.
- △ To assure your safety, please do not listen to music in high volume under some complicated environment.
- △ Keep it away from kids because small parts may cause injuries, asphyxia and so on.

- △ Pay attention to the warning signs in some places before using this product, such as hospital, gas station, and any potentially explosive environment.
- △ Do not disassemble or damage the internal battery. Handle the battery under the local regulations. Do not throw it away as waste.

### MAINTENANCE ISSUES

- △ Turn off the power when do not use this product.
- △ Do not put this product in liquid or moist place.
- △ Do not put this product near fire, to avoid explosion.
- △ Do not bump this product against sharp objects, to avoid scratches or damage.

### USER GUIDE

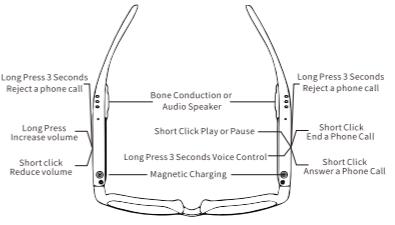

#### FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Wireless Smart Glasses

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.

### 产品参数

型号	SD -G3
产品名称	无线智能眼镜
蓝牙规格	V5.0
扬声器类型	骨传导/喇叭
充电接口	磁吸式充电
传输距离	≥10米
工作电压	3.1V-4.2V
频率	2402/2480MHz
通话时间	5小时
电池容量	100mAh*2
待机时间	100小时
充电时间	2小时
包装盒尺寸	80*77*180mm
净重	43±5g

## 无线智能眼镜

### SD-G3 使用说明书

### 使用说明

#### ☉ 开关机

- △ 开机: 打开镜腿, 蓝灯快闪3次, 并带有 "Power on" 提示音。
- △ 关机: 开机状态下合起镜腿, 红灯快闪3次, 并带有 "Power off" 提示音。
- △ 自动关机: 开机后在未连接状态下, 5分钟之后, 自动关机, 红灯快

闪3次, 并带有 "power off" 提示音。

#### ☉ 配对

- △ 左右互配: 左右两边开机后, 眼镜会自动进入左右互配模式, 当进入左右互配模式时, 两边红蓝灯交替闪烁, 左右互配成功后左边副机将会灭灯, 而右边主机依然红蓝灯交替闪烁, 等待与手机配对。
- △ 首次连接: 开机后, 在等待与手机配对时, 打开手机蓝牙, 搜索 "SD-G3" 蓝牙设备名并选择与其连接, 连接成功后, 指示灯停止闪烁, 并带有 "connected" 提示音。
- △ 自动回连: 打开镜腿佩戴即可回连之前连接过的蓝牙设备 (最后一次连接的设备优先), 若回连成功, 指示灯停止闪烁, 主机 (R) 和副机 (L) 都会带有 "Connected" 提示音。
- △ 重新配对: 开机后在未连接蓝牙状态下, 5分钟之内, 长按触摸区域1秒左右, 耳机即可重新与手机配对, 进入配对时红蓝灯交替闪烁, 并带有 "pairing" 提示音。
- △ 清除配对记录: 开机还没有连接蓝牙时, 长按左右两边触摸区域10秒, 清除配对记录并自动关机, 红蓝灯同时闪1次, 并带有提示音。

#### ☉ 电话接听、拒接、挂断

- △ 接听电话: 来电时, 单击右触摸区域
- △ 挂断电话: 通话时, 单击右触摸区域
- △ 拒接电话: 来电时, 长按任意一边触摸区域约3秒

#### ☉ 音量调节

- △ 增加音量: 在音乐播放时, 长按左触摸区域; 当加到最大音量时会有 "B" 提示音。
- △ 减少音量: 在音乐播放时, 单击左触摸区域。

#### ☉ 音乐播放与暂停

- △ 播放/暂停: 在音乐播放时, 单击右触摸区域

#### ☉ 语音控制

- △ 手机连接成功后 (或播放音乐时), 长按右触摸区域约3秒即可启动语音助手

#### ☉ 充电和低电量指示

- △ 充电: 眼镜接通充电时, 红灯常亮; 眼镜充满电时 (电压到达4.2V时), 蓝灯常亮。
- △ 低电报警: 眼镜在开机状态下, 电池电压低于3.4V时, 每隔10秒红灯快闪1次, 每隔60秒会有 "Low battery" 报警提示音。
- △ 低电关机: 眼镜在开机状态下, 电池电压低于3.1V时, 红灯快闪1次, 并带有 "Power off" 提示音。

 
### 注意事项

- △ 请根据当地法律法规, 正确使用本产品; 如果在驾车或骑车时使用本产品, 请保持足够的专注力以确保行车安全。
- △ 为保障你的安全, 在一些影响安全的环境下请勿大音量使用本产品。
- △ 不要将本产品给儿童玩耍, 细小零件可能导致划伤、碰撞等等。
- △ 用户请保留一些特定区域的指示, 按规定使用本产品 (这些区域包括医院, 加油站及有潜在爆炸危险的环境)。
- △ 切勿拆开或损坏内置电池。对于废弃电池, 请合理处置, 不可随意丢弃。

### 保养事项

- △ 不用本产品时, 请关闭电源
- △ 请勿将本产品置于液体或潮湿的地方
- △ 请勿将本产品放在火上, 以免爆炸。
- △ 请勿将本产品撞击尖锐的物体, 避免造成划伤或损坏

### 使用指南

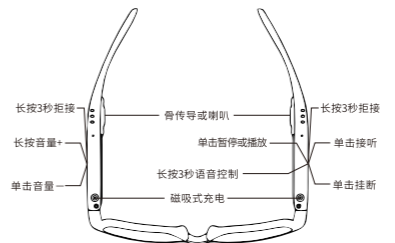

## 无线智能眼镜