
无线收音麦克风 _{Type-c接收端}	产品介绍 感谢您选择我们的产品。 本产品为无线收音麦克风,可提供专业级别的录音输出。即插即用,无需APP 。多种用途:可实现网络直播、视频Vlog拍摄、节目访谈、采访录音、视频教 学等场合的使用。 无线收音麦克风由两部分构成,麦克风发射端,Type-c接收端。 (如下图所示)	
使用说明书		② ⑧ ⑨ ③ 收纳盒指示灯 ⑥ 麦克风金属触点 ③ 收纳盒Type-C充电接口 ⑦ Type-C接口 ③ 麦克风指示灯 ⑧ 接收端指示灯 ④ 麦克风复位键 ⑨ 接收端复位键 ⑤ 麦克风夹 ⑤ 麦克风生
CEFC C III CHINA	(麦克风发射端) (Type-c接收端)	 备注: 1.将麦克风放入充电仓时请注意指示灯(③)朝外,否则不能正常充电。 2.将接收端放入充电仓时请注意指示灯(③)朝外,否则不能吸住(内置磁吸)造成盒内晃动。 *****部分安卓手机因系统原因会出现不兼容问题,详情请咨询经销商*****

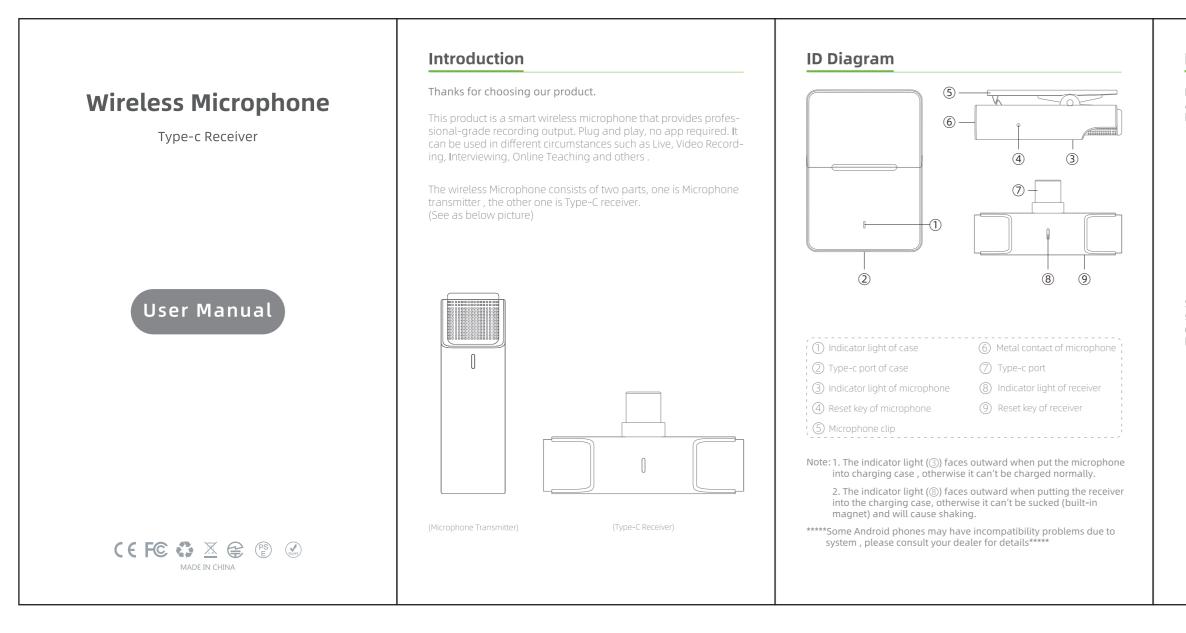


(中英文)EP033A安卓版说明书(风琴折)155*100MM


1.15.070062

使用方法

第一步:首先把收纳盒打开,麦克风即开机且慢闪绿灯,Type-C接收端无灯效。

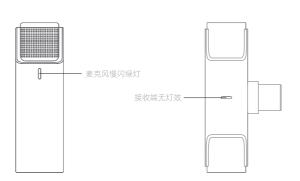

第二步:把Type-C接收端接入手机的Type-C接口,接收端绿灯常亮,麦克风 绿灯常亮,配对成功。手机打开相机、直播视频等APP即可使用麦克风收音。

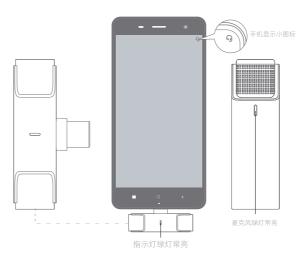

UI功能

麦克风发射端

功能/状态	操作	灯效
开 机	打开收纳盒开机	绿灯慢闪
关 机	a.放入收纳盒并关盖 b.无连接超过3分钟自动关机	/
充电	放入收纳盒并关盖	/
复位	长按复位键三秒	/
低电报警	电量低于20%	蓝灯慢闪
搜索配对	开机自动搜索配对	绿灯慢闪
配对成功	自动配对	绿灯常亮
清除配对	快速按两次复位针孔键	绿灯快闪

Type-c接收端

功能/状态	操作	灯效
开 机	插入设备开机	绿灯常亮
关 机	拔掉设备关机	/
复位	长按复位键三秒	/
搜索配对	开机自动搜索配对	绿灯慢闪
配对成功	自动配对	绿灯常亮
清除配对	快速按两次复位针孔键	绿灯快闪

收纳盒功能和指示灯

功能/状态	指示灯状态
收纳盒充电	充电中: 红灯长亮,充满电: 红灯灭
收纳盒给麦克风充电	充电中:绿灯慢闪,充满电:绿灯灭
收纳盒电量指示	绿灯常亮: 100%-75% 蓝灯常亮: 74%-36% 红 灯 闪: 35%-0%

包装清单


- (1) 麦克风发射端 (2) Type-C接收端 (3) 收纳盒
- (4) Type-C充电线

(5) 用户说明书




How to use

First: Open the storage case. The microphone will be turned on and the green light will flash slowly. The Type-C receiver has no light indicating.

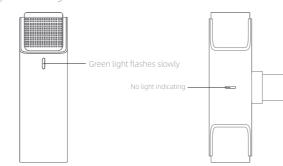

Secondly: Connect the Type-C receiver to phone . It is paired successfully when the green light of receiver and the green light of microphone keeps always on. Then open the phone camera, live Apps or others to use the microphone to receive sound.

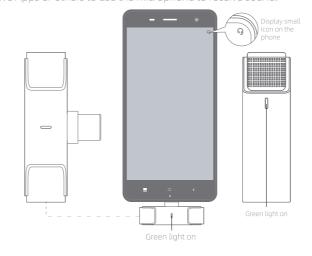

About UI

Microphone Transmitter

Function	How to use	Light
Power on	Open the case	Green light on
Power off	a.Put it into the case and close the cover b.Auto power off if no reconnection in 3 min	/
Charging	Put it into the case	/
Reset	Press reset key for 3 seconds	/
Low battery alarm	Battery is below 20%	Blue light flashes slowly
Pairing	Automatically search for pairing once starting-up	Green light flashes slowly
Paired	Auto pairing	Green light on
Clear pairing	Press reset key twice quickly	Green light flashes quickly

Type-C Receiver

Function	How to use	Light
Power on	Plug in the device	Green light on
Power off	Plug off the device	/
Reset	Press reset key for 3 seconds	/
Pairing	Automatically search for pairing once starting-up	Green light flashes slowly
Paired	Auto pairing	Green light on
Clear pairing	Press reset key twice quickly	Green light flashes quickly

Indicator light of case

Function	Light
Case charging	Charging :red light always keeps on Fully charged: red light off
Storage case recharges microphone	Charging :Green light flashes slowly Fully charged: Green light off
Battery level of case indicating	Green light on:100%-75% Blue light on: 74%-36% Red light flashes: 35%-0%

Packing List

(1) Microphone transmitter

- (2) Type-Cre
- (3) Sturaye case

(5) User manual


FCC Requirement


Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

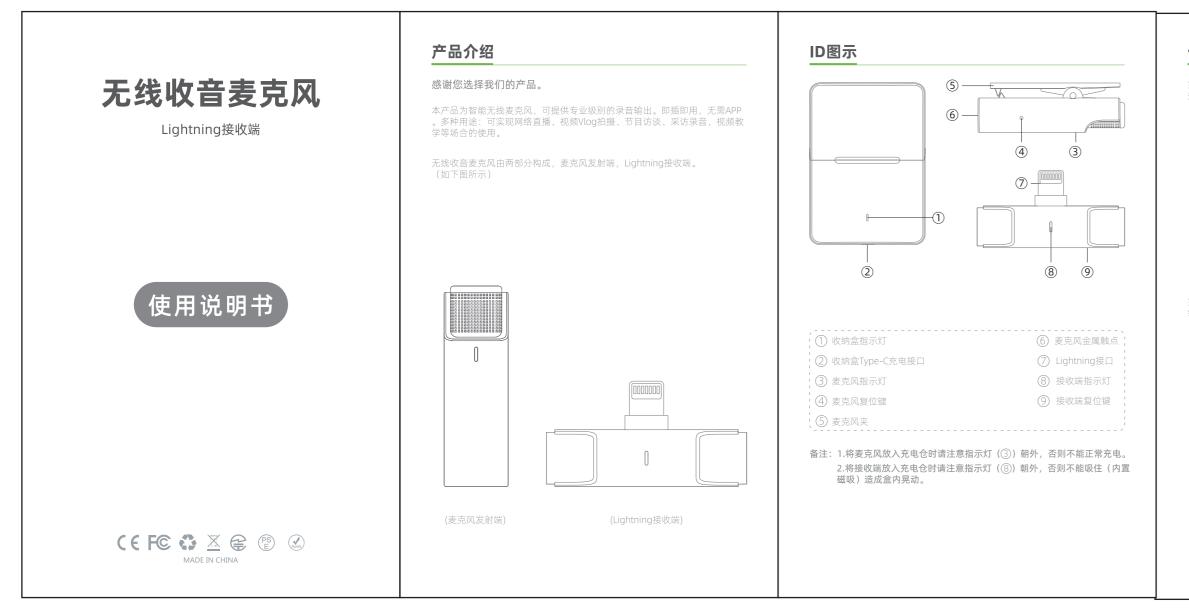

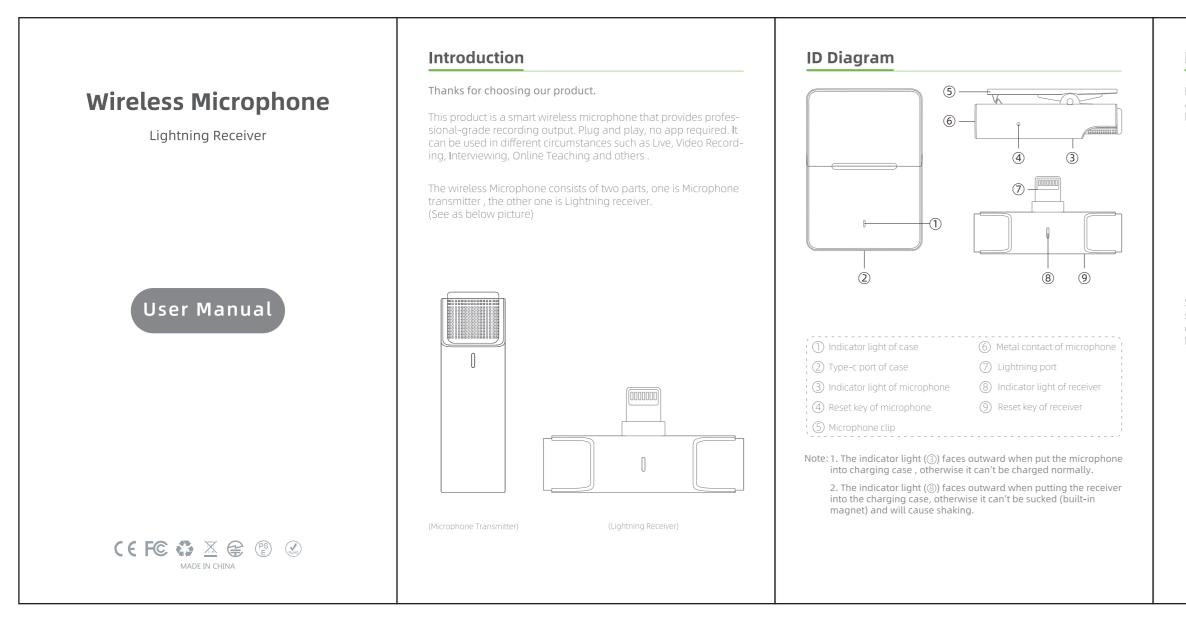


(中英文)EP033A苹果版说明书(风琴折)155*100MM


1.15.070063

使用方法

第一步:首先把收纳盒打开,麦克风即开机且慢闪绿灯,Lightning接收端无灯

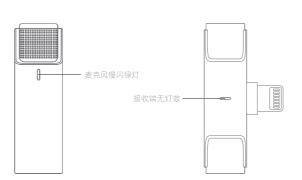

第二步:把Lightning接收端接入手机的Type-C接口,接收端绿灯常亮,麦克风 绿灯常亮,配对成功。手机打开相机、直播视频等APP即可使用麦克风收音。

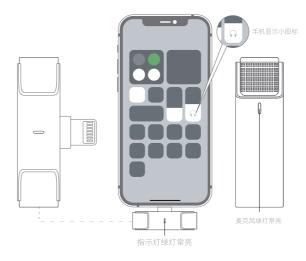

UI功能

麦克风发射端

功能/状态	操作	灯效
开机	打开收纳盒开机	绿灯慢闪
关 机	a.放入收纳盒并关盖 b.无连接超过3分钟自动关机	/
充电	放入收纳盒并关盖	/
复位	长按复位键三秒	/
低电报警	电量低于20%	蓝灯慢闪
搜索配对	开机自动搜索配对	绿灯慢闪
配对成功	自动配对	绿灯常亮
清除配对	快速按两次复位针孔键	绿灯快闪

Lightning接收端

功能/状态	操作	灯效
开 机	插入设备开机	绿灯常亮
关 机	拔掉设备关机	/
复位	长按复位键三秒	/
搜索配对	开机自动搜索配对	绿灯慢闪
配对成功	自动配对	绿灯常亮
清除配对	快速按两次复位针孔键	绿灯快闪

收纳盒功能和指示灯

功能/状态	指示灯状态
收纳盒充电	充电中: 红灯长亮,充满电: 红灯灭
收纳盒给麦克风充电	充电中:绿灯慢闪,充满电:绿灯灭
收纳盒电量指示	绿灯常亮: 100%-75% 蓝灯常亮: 74%-36% 红灯闪: 35%-0%

包装清单


- (1) 麦克风发射端
- (2) Lightning接收端
- (3) 收纳盒 (4) Type-C充电线
- (5) 用户说明书






How to use

First: Open the storage case. The microphone will be turned on and the green light will flash slowly. The lightning receiver has no light indicating.

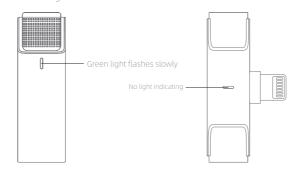

Secondly: Connect the lightning receiver to phone . It is paired successfully when the green light of receiver and the green light of microphone keeps always on. Then open the phone camera, live Apps or others to use the microphone to receive sound.

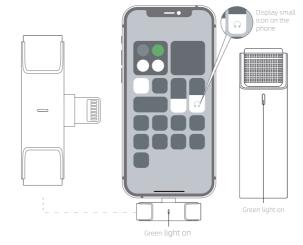

About UI

Microphone Transmitter

Function	How to use	Light
Power on	Open the case	Green light on
Power off	a.Put it into the case and close the cover b.Auto power off if no reconnection in 3 min	/
Charging	Put it into the case	/
Reset	Press reset key for 3 seconds	/
Low battery alarm	Battery is below 20%	Blue light flashes slowly
Pairing	Automatically search for pairing once starting-up	Green light flashes slowly
Paired	Auto pairing	Green light on
Clear pairing	Press reset key twice quickly	Green light flashes quickly

Lightning Receiver

Function	How to use	Light
Power on	Plug in the device	Green light on
Power off	Plug off the device	/
Reset	Press reset key for 3 seconds	/
Pairing	Automatically search for pairing once starting-up	Green light flashes slowly
Paired	Auto pairing	Green light on
Clear pairing	Press reset key twice quickly	Green light flashes quickly

Indicator light of case

Function	Light	
Case charging	Charging :red light always keeps on Fully charged: red light off	
Storage case recharges microphone	Charging :Green light flashes slowly Fully charged: Green light off	
Battery level of case indicating	Green light on:100%-75% Blue light on: 74%-36% Red light flashes: 35%-0%	

Packing List

(1) Microphone transmitter

- (2) Lightning receiver
- (3) Storage case
- (4) Type-C charging cable (5) User manual


FCC Requirement


Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

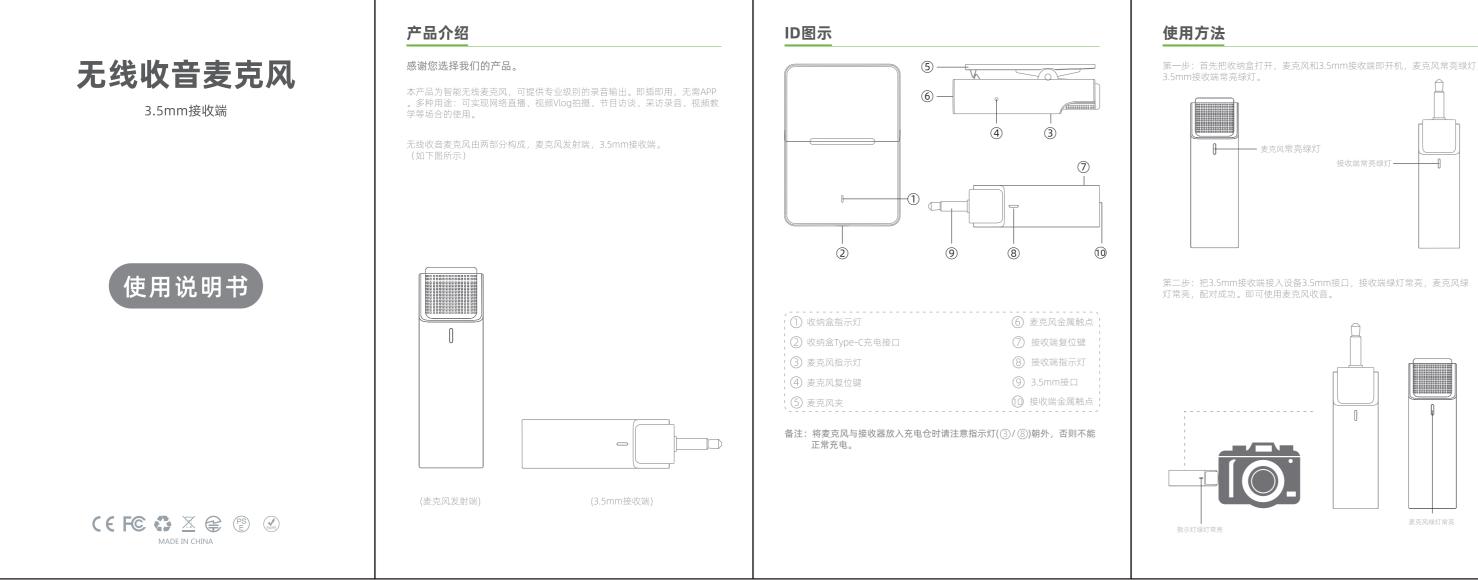

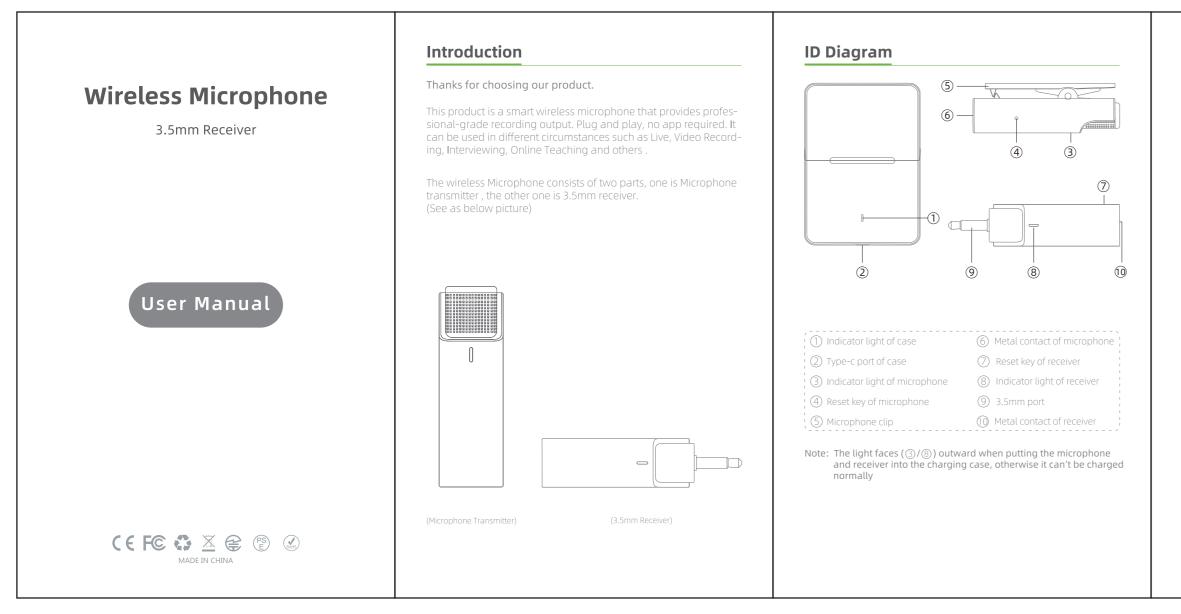

(中英文) EP033A安卓版说明书(风琴折) 155*100MM

1.15.070064



第二步:把3.5mm接收端接入设备3.5mm接口,接收端绿灯常亮,麦克风绿

UI功能

麦克风发射端

功能/状态	操作	灯效
开 机	打开收纳盒开机	绿灯常亮
关机	a.放入收纳盒并关盖 b.无连接超过3分钟自动关机	/
充电	放入收纳盒并关盖	/
复位	长按复位键三秒	/
低电报警	电量低于20%	蓝灯慢闪
搜索配对	开机自动搜索配对	绿灯慢闪
配对成功	自动配对	绿灯常亮
清除配对	快速按两次复位针孔键	绿灯快闪

3.5mm 接收端

功能/状态	操作	灯效
开 机	打开收纳盒开机	绿灯常亮
关机	放入收纳盒并关盖	/
复位	长按复位键三秒	/
低电报警	电量低于20%	蓝灯慢闪
搜索配对	开机自动搜索配对	绿灯慢闪
配对成功	自动配对	绿灯常亮
清除配对	快速按两次复位针孔键	绿灯快闪

收纳盒功能和指示灯

功能/状态	指示灯状态	
收纳盒充电	充电中: 红灯长亮,充满电: 红灯灭	
收纳盒给发射端充电	充电中:绿灯慢闪,充满电:绿灯灭	
收纳盒给接收端充电	充电中: 蓝灯慢闪,充满电: 蓝灯灭	
收纳盒同时发射端/ 接收端充电	充电中:蓝绿灯交替闪,充满电:灯灭	
收纳盒电量指示	绿灯常亮: 100%-75% 蓝灯常亮: 74%-36% 红 灯 闪: 35%-0%	

包装清单


- (1) 麦克风发射端
- (2) 3.5mm 接收端
- (3) 收纳盒 (4) Type-C充电线
- (5) 用户说明书




录灯慢闪
录灯常亮
录灯快闪
闪为'以来
灭
灭
灭
灯灭

How to use

First: Open the storage case. The microphone and 3.5mm receiver will be turned on and the green light of microphone and the green light of 3.5mm receiver always keeps on.

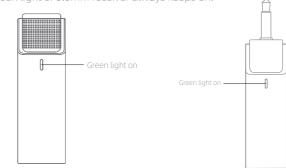

Secondly: Connect the 3.5mm receiver to the device . It is paired successfully when the green light of receiver and the green light of microphone keeps always on. And then to use the microphone

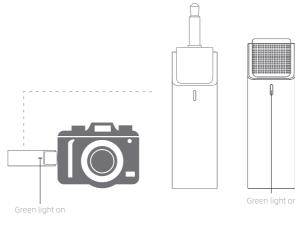

About UI

Microphone Transmitter

Function	How to use	Light
Power on	Open the case	Green light on
Power off	a.Put it into the case and close the cover b.Auto power off if no reconnection in 3 min	/
Charging	Put it into the case	/
Reset	Press reset key for 3 seconds	/
Low battery alarm	Battery is below 20%	Blue light flashes slowly
Pairing	Automatically search for pairing once starting-up	Green light flashes slowly
Paired	Auto pairing	Green light on
Clear pairing	Press reset key twice quickly	Green light flashes quickly

3.5mm Receiver

Function	How to use	Light
Power on	Plug in the device	Red light on
Power off	Plug off the device	/
Reset	Press reset key for 3 seconds	/
Low battery alarm	Battery is below 20%	Blue light flashes slowly
Pairing	Automatically search for pairing once starting-up	Red light flashes slowly
Paired	Auto pairing	Red light on
Clear pairing	Press reset key twice quickly	Red light flashes quickly

Indicator light of case

Function	Light
Case charging	Charging :red light always keeps on Fully charged: red light off
Storage case recharges	Charging :Green light flashes slowly
microphone	Fully charged: Green light off
Storage case	Charging :Blue light flashes slowly
recharges receiver	Fully charged: Blue light off
Storage case recharges	Charging : blue and green light flashes
both devices	alternately
simultaneously	Fully charged : light off
Battery level of case indicating	Green light on: 100%-75% Blue light on: 74%-36% Red light flashes: 35%-0%

Packing List

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particula installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to
- which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.