

BUFFBEE

Alarm Clock with Wireless Charger User Manual



1 Year Warranty

If a faulty product is found when setting up please
Email us at Contact@buffhomes.com

TIPS: Please use the original adapter, otherwise the wireless charging pad will not be powered.

TIPS: Battery backup is for saving TIME and ALARM settings only. It cannot be used to charge your device. Please keep plugged in!

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna.- Increase the separation between the equipment and receiver.- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.– Consult the dealer or an experienced radio/TV technician for help.

Instructional Video



Power Specifications

Input: 100-240V, 50/60Hz 0.5A Max

Output: 9.0V-2.0A

 
Features

- Wireless Charging (Phone/Watch)
- 9 Minutes Snooze
- 1-3 Level Adjustable Volume
- 0-100% Display Dimmer
- 12/24H Mode
- Battery Backup (Only Memory Function)
- LED Indicator Light


Package Include

- 1* Alarm Clock with Wireless Charger
- 1* Adapter
- 1* User Manual
- 1* CR2032 Battery

Front View

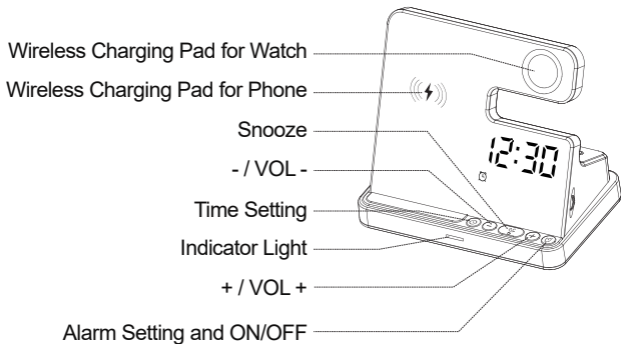


Back View

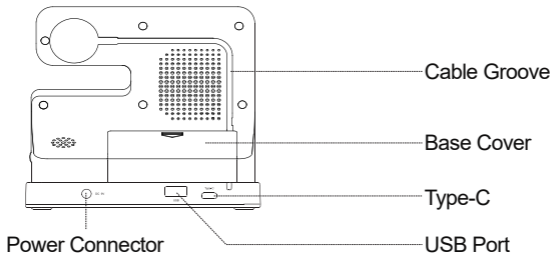 

Right View



 Bottom View

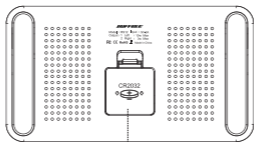

Battery Compartment
(Battery is built in already)




Getting Started

 
1. Plug the adapter into a standard household outlet, you will see 12:00 on the display and the clock is ready to be set.
2. Please remove the battery tab before use.

Notice:


1. If the display is “blank” after power on, please check whether the DISPLAY DIMMER is in a HIGH position.
2. Under the battery power, the display will go blank and the preset alarm will not go off.
3. Once the battery is removed and the power is interrupted, the TIME and ALARM need to be reset when the power is restored.

Time Setting

1. Press the “” button to enter HOUR setting. The HOUR digits will flash on the display. Press “” or “” button to advance to the correct hour.

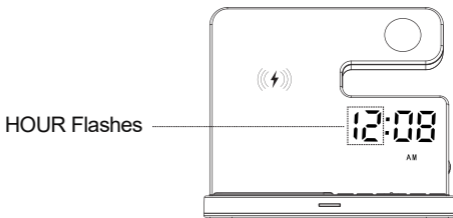

 
2. Press the “ ⌚ ” button to confirm and enter MINUTE setting. When the MINUTE digits flash, press “ + ” or “ - ” button to advance to the correct minute.

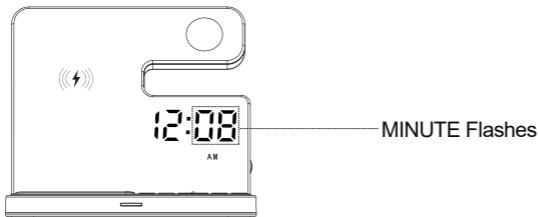


3. Press the “⌚” button to confirm and enter time format (12/24H) setting. Press “+” or “-” button to select time format. When using the 12-hour time format, AM/PM icon will appear on the display to suggest morning/afternoon time.
4. Press the “⌚” button to confirm and exit the time setting mode.

Alarm Setting

 1. Press the “🕒” button to enter ALARM HOUR setting. The HOUR digits will flash on the display. Press the “+” or “-” button to advance to the desired hour.

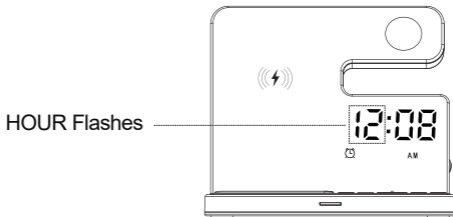

 
2. Press the “🕒” button to enter ALARM MINUTE setting. The MINUTE digits will flash on the display. Press the “+” or “-” button to advance to the desired minute.

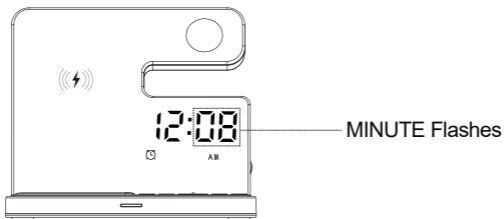

3. Press the “🕒” button to confirm and exit the alarm setting mode.



 
Alarm Volume Setting

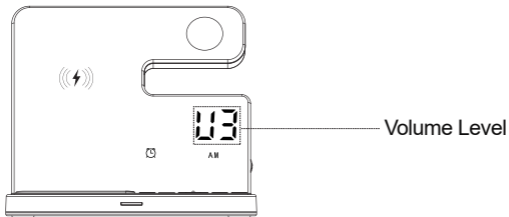When you exit the time/alarm setting, press the “+” or “-” button to select the volume from 1-3 level and a number will be shown on the display.






Alarm Pause & Snooze

When the alarm goes off, you have two options:

1. Press “” button to stop the alarm when it's ringing. Alarm will go off on the next day.
2. Press “” button to snooze, the indicator “” will flash on the display. The alarm will go off again 9 minutes later.

Alarm ON/OFF

 
1. When the alarm time is set, press and hold the “” button for 2 seconds to turn on the alarm.
2. Press and hold the “” button for 2 seconds to completely turn off alarm and the indicator “” will disappear on the display. The alarm will NOT go off on the next day.

Display Brightness Control

Slide the “DISPLAY DIMMER” slider to adjust the display brightness of the alarm clock. (It can be adjusted from 0 to 100%)

Wireless Charging for Phone

Place your device in the correct position, and the indicator light will turn off after 5 seconds.

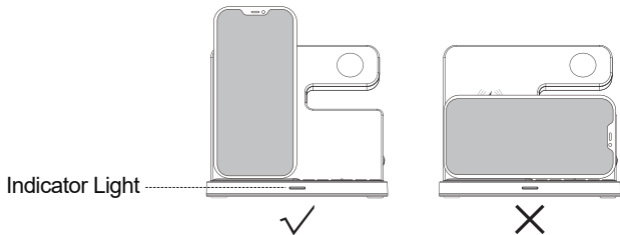

Notice:

1. The indicator light will alert you by flashing if there is a foreign object on the wireless charging pad.
2. Please remove any protective cases containing magnets, metals, or materials with a thickness of more than 0.19"

How to Install Your Watch Charging Cable

Make sure that the length of the cable you leave at both ends is around 6.3"(16 cm) before installing your watch charging cable



Use a cable tie to organize your watch charging cable (with a length of 6.3" at each end)



Open the base cover



Install the watch charging cable along the groove



Insert the watch charging cable into the USB port



Place the watch charging cable in the slot



Close the base cover

Notice:

1. The wireless charging for your watch is only available for Apple Watch.
2. The charging indicator will not light up when the watch is successfully connected.
3. USB and Type-C ports are only suitable for charging your Apple Watch. Please do not use it for charging other devices.

Wireless Charging Compatible Models

1. Compatible phones: iPhone 14/14 Plus/14 Pro/14 Pro Max/13/13 Pro Max/13 Mini/SE 2022/12/12 Mini/12 Pro Max/X/XS/XS Max/XR/8 Plus/8; Samsung Galaxy S22/S22 Ultra/S21/S20/S10/S10 Plus/S10E/S9/S9 Plus/Note 9/S8/S8 Plus/Note 8/S7 Edge/S7/S6 Edge plus/Note 5, and other enabled wireless charging phones.
2. Compatible watches: iWatch Ultra/8/7/6/ SE/ SE 2/ 5/ 4/ 3/ 2

Battery Operated Setting

Install 1* CR2032 battery into Battery Compartment. (Battery is built in already)

Notice:

Battery backup is for saving TIME and ALARM settings only. It cannot be used to charge your device.

Support

The alarm clock with wireless charger comes with one year warranty. If you have any issue with this alarm clock, please contact us at **Contact@buffhomes.com**. We will address your issue within 24 hours.