



RS5 User Manual

Reminder:

- 1) If the display is “blank” after plugging in, please check whether the DISPLAY DIMMER on the back is at the HIGH position.
- 2) When the lightning icon appears on the display, it means that the phone is charging.
- 3) Under the battery power, the display will go blank and preset alarm will not go off. Battery backup is for saving TIME and ALARM settings only.

If a faulty product is found when setting up
please email us at Contact@buffhomes.com

Please read all the instructions carefully and keep this in a safe place for future reference.

Instructional Video

Please scan the QR code here to access the instructional video of this product.



 
Catalog

Front View / Top View	1
Back View / Bottom View	2
Features / Power Specifications	3
Getting Started	4
Time Setting.....	5
Alarm On / Off.....	6
Alarm And Ringtone Setting	7
Snooze / Alarm Using.....	10
Manual-scan Radio Station	11
Auto-scan Radio Station	11
Radio Alarm Setting	12
Sleep Timer Setting.....	13
Wireless Charging / USB Charging Port	13
Battery Operated Setting	15
Warranty / Support	15


Front View




Top View

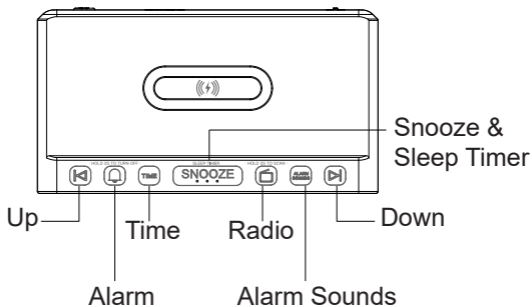

Back View

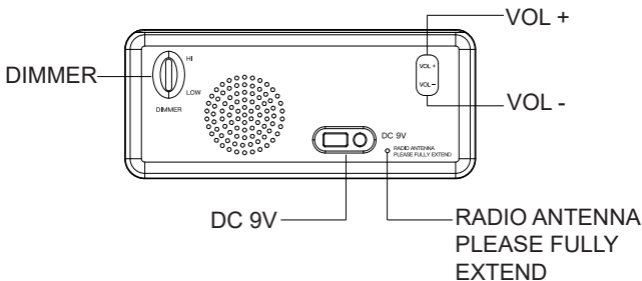 

Bottom View

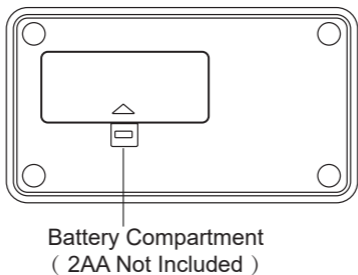 

Features

- FM Radio
- 12/24H Mode
- 9 Minutes Snooze
- 0-100% of the Display Dimmer
- Wireless Charging
- USB Charging Port
- Sleep Timer (In FM Mode)
- Battery Backup(Only Memory Function)

Power Specifications

AC100-240V, 50-60Hz

DC, 9V-2A 18W, Class 2




Getting Started

 
1. Plug in the adaptor into a standard household outlet to get the clock working firstly;
2. Insert 2 AA batteries(Not included) to preserve the time and alarm settings in case of the power outage.
Please extend the FM antenna on the back of the clock.




Note:

- 1) If the display is “blank” after plugging in, please check whether the DISPLAY DIMMER on the back is at the HIGH position.
- 2) Under the battery power, the display will go blank and preset alarm will not go off.
- 3) Once the battery is removed and with an interruption of power, the time and alarm need to be reset when the power.



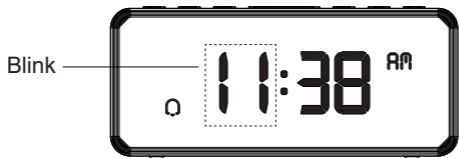

Time Setting

1. Press the “  ” TIME button to enter HOUR setting. Press “  ” or “  ” button to advance to the correct hour.



2. Press the “  ” TIME button to confirm and enter MINUTE setting. Press “  ” or “  ” button to advance to the correct minute.






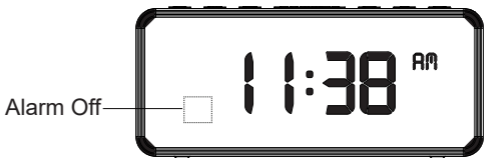 
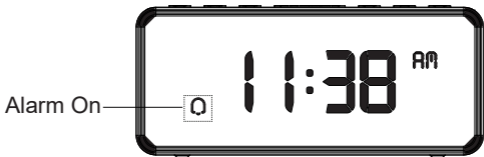 
3. Press the “  ” TIME button to confirm and enter time format (12/24H) setting. Press “  ” or “  ” button to set time format.
4. Press the “  ” TIME button to confirm and end the time setting mode.

Note:



- 1) The clock will exit automatically from the TIME setup mode if no action is taken within 5 seconds.
- 2) In 12 hour mode, “AM” will appear in the morning and “PM” will appear in the afternoon.

Alarm On / Off




1. Press the “  ” ALARM button, if the “  ” icon displays on the screen, it means the alarm is on.
2. Press and hold for 2 seconds “  ” ALARM button to turn off the alarm. The alarm will NOT go off in the next day.




Alarm Setting

1. Press the “” ALARM button to enter ALARM HOUR setting. Press “” or “” button to advance to the desired hour.






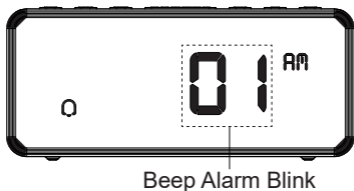 
2. Press the “  ” ALARM button to confirm and enter MINUTE setting. Press “  ” or “  ” button to advance to the desired minute.



3. Press the “  ” ALARM button to confirm and end the alarm setting mode.

Ringtone Setting

1. Press the “  ” ALARM SOUNDS button to confirm and enter ringtone setting. A number will be shown on the display and sound will be played accordingly to indicate the alarm ringtone (# 01 is beep, #02 is birds, #03 is bells, #04 is piano music, #05 is FM radio). Press “  ” or “  ” button to select your preferred ringtone.



Note:

This alarm sounds has a 5 second trial sound, you can also confirm the ringtone you want in advance by pressing the ALARM SOUNDS button.

2. Press the “VOL + ” or “VOL - ” button on the back to adjust the volume from 0-15 level and a number will be shown on the display.



Snooze / Alarm Using


 

1. When the alarm is going off, press the “SNOOZE” button to activate the snooze. It will ring again after 9 minutes.
2. When the alarm is going off, Press the “🔔” ALARM button to turn off the alarm. But the alarm will be go off on the next day.

Note:




All alarm sounds will last 30 minutes, if you don't turn off the alarm, it will turn off after 30 minutes automatically.

Manual-scan Radio Station

Please extend the FM antenna on the back of the clock.

1. Press the “  ” button to turn the radio mode on or off.
2. When the radio is on, press the “  ” or “  ” button to manual select your favorite channel.

Auto-scan Radio Station

1. When the radio is on, press and hold the “  ” button 2S, FM radio will scan and auto-store the scanned stations. Once the station search is completed, the first station will be played automatically. Then press the “  ” or “  ” button to select your favorite channel.



Blink Once

 
2. Press the “ VOL + ” or “ VOL - ” button to adjust the Radio Volume.

Note:

When the radio is on, the volume adjustment is only used for FM radio volume. When the radio is off, the volume adjustment is only used for alarm sounds, the volume of the radio will not be affected.

Radio Alarm Setting

When the radio is on, you can select the channel you want, then press and hold the “SNOOZE” button until the icon “AL” blinks on the display. The clock immediately saves this station as Wake Up Radio Alarm Sound.

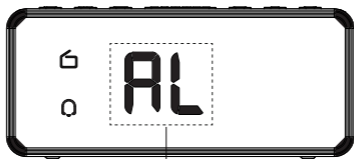


Blink Once

Sleep Timer Setting

You can use sleep timer to turn off radio automatically when the present sleep timer comes.

 1. Press the “Sleep Timer” button to enter the sleep timer setting. You can select the sleep time from 10 to 120 minutes.

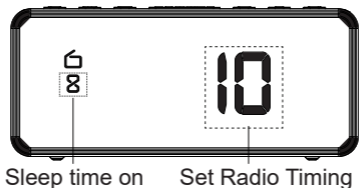

Wireless Charging Function

Place your phone on the center of the wireless charging pad, a lightning bolt icon will appear on the display to indicates the phone is charging.



Note:

- 1) The charging icon will alert you by flashing if your phone is not placed in the right place or if there is a foreign object on it.
- 2) Remove any protective cases containing magnets, metal, or materials thicker than 0.12'(5mm)
- 3) Compatible products with wireless charging: iPhone 12/12 Pro/iPhone 11/11 Pro/11 Pro Max/XS Max/XS/XR/ X/8/ 8 Plus, Samsung Galaxy Note 9/ Note8 /S8/S8 Plus/ S7/ S7 Edge/ S6 Edge Plus/ S9/ S10/ S10 Plus/S10E, LG V30,Nexus 7/6/5, and other enabled wireless charging phones and devices.

USB Charging Function

The unit is added with one USB output interface for other devices.

Output: 5V /1A.

Brightness Control

Slide the Dimmer slider at the back of the clock to adjust 0-100% brightness of the display brightness.

Battery Operated Setting

Install 2* AA batteries(Not included) into Battery Compartment.

Note:

Under the battery power, the display will go blank and preset alarm will not go off. Battery backup is for saving TIME and ALARM settings only.

Support

If any questions with the clock, please contact our customer support team through Contact@buffhomes.com. We will deal with your issue within 24 hours.

FCC ID:2AVMZ-RS5CLOCK

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.