

White Noise Machine with Alarm Clock

TS1

User Manual



If a faulty product is found when setting up
please Email us at Support@keviec.com

TIPS:

1. Battery backup is for saving TIME/ALARM settings only, the display will go blank and preset alarm will not go off under the battery power.
2. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.

Thank you for purchasing on HOUSBAY! Please read these instructions carefully and keep the user manual in safe place for future reference.



Features

- 25 Soothing Sounds
- 7 Colorful Night Light
- Bluetooth for Streaming Music and Synchronizing Time from phone
- 8 Alarm Sounds & 9 Minutes Snooze
- 0-100% Brightness Control For Display
- 1-30 Level Adjustable Volume
- Sleep Timer
- Battery Backup (Only Memory function)
- 12/24H Mode

Package Include:

- 1* Sound Machine with Alarm Clock
- 1* 1.5m DC Adapter
- 1* User Manual
- 1* CR2032 Battery

Power Specifications


AC 100-240V, 50/60Hz.

DC 5V/2A


Front View



 
Top View

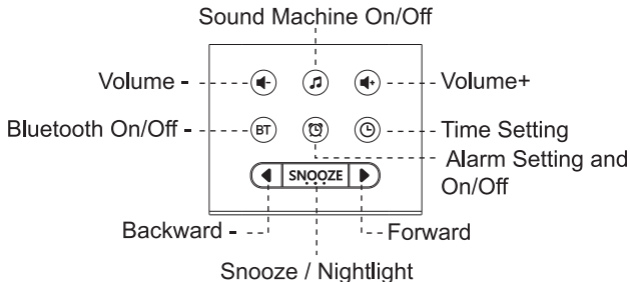

Back View

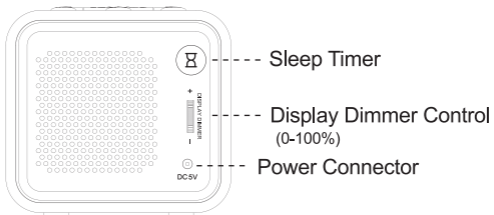 

Bottom View

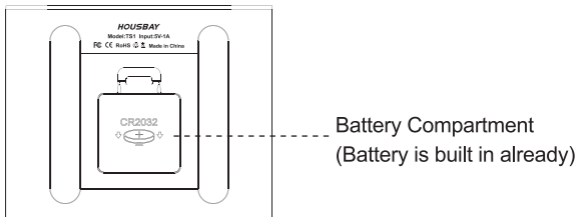 

Getting Started

1. Plug the adapter into a standard household outlet, you will see 12:00 on the display and the clock is ready to be set.
2. Please remove the battery tab before use.

Notice :

- If the display is “blank” after plugging in, please check whether the DISPLAY DIMMER on the back is at the HIGH position.
- Under the battery power, the display will go blank and preset alarm will not go off.
- Once the battery is removed and with an interruption of power, the TIME and ALARM need to be reset when the power comes back.

 
Time Setting

1. Press the “🕒” button to enter HOUR setting. The HOUR digits will flash on the display. Press “◀” or “▶” button to advance to the correct hour.

HOUR Flashes



2. Press the “🕒” button to confirm and enter MINUTE setting. When the MINUTE digits flash, press “◀” or “▶” button to advance to the correct minute.

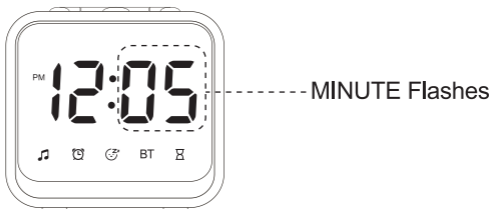


3. Press the “🕒” button to confirm and enter time format (12/24H) setting. Press “◀” or “▶” button to select time format. When using the 12-hour time format, AM/PM icon will appear on the display to suggest morning/afternoon time.
4. Press the “🕒” button to confirm and exit the time setting mode.

Notice:

The clock will exit automatically from the TIME setup mode if no action is taken within 5 seconds.
(Action refers to pressing the desired button for setup)

Alarm Setting

 1. Press the “🕒” button to enter ALARM HOUR setting. The HOUR digits will flash on the display. Press the “◀” or “▶” buttons to advance to the desired hour.

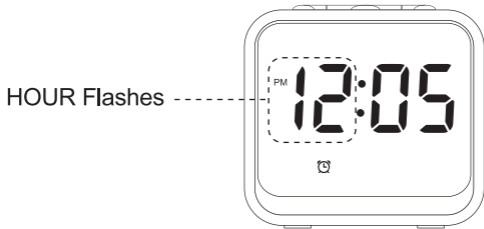

2. Press the “🕒” button to confirm and enter ALARM MINUTE setting. The MINUTE digits will flash on the display. Press the “◀” or “▶” buttons to advance to the desired minute.



3. Press the “🕒” button to confirm and enter WAKE UP SOUND setting. The alarm icon will flash on the display. Press the “◀” or “▶” buttons to choose from 01) Bird Chirping Sound, 02) Piano Sound, 03) Soft Music, 4) Frog Sound, 5) Brook Sound , 06) Ocean Wave , 07) Honey Bee Sound , 08) Beep sound



4. Press the “🕒” button to confirm and enter ALARM VOLUME setting. The volume level will be shown on display. Press “🔊-” or “🔊+” button to select the alarm volume level (1-30 adjustable).
5. Press the “🕒” button to confirm and exit the alarm setting mode.

Notice:

 
The clock will exit automatically from the ALARM setup mode if no action is taken within 5 seconds.

(Action refers to pressing the desired button for setup)

Alarm Volume Setting

When sound machine and bluetooth connection is OFF, press the “🔊-” or “🔊+” button to select the alarm volume level (1-30 adjustable).

A number will be shown on the display.

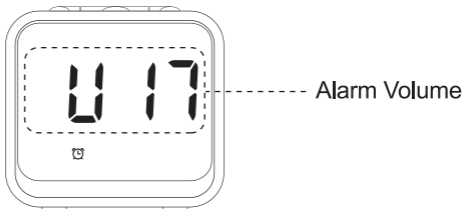

Alarm Pause & Snooze

When the alarm goes off, you have two options:

1. Press “🕒” button to stop the alarm when it’s ringing. Alarm will go off on the next day.
2. Press “SNOOZE” button to snooze, the indicator “🕒” will flash on the display. The alarm will go off again 9 minutes later.

Notice:

The alarm will automatically turn off after 30 minutes if no action is taken.

 
Alarm On/Off



1. When the alarm time is set, press and hold the “🕒” button for 2 seconds to turn on the alarm.
2. Press and hold the “🕒” button for 2 seconds to completely turn off the alarm and the indicator “🕒” will disappear on the display. The alarm will NOT go off on the next day.

Sound Machine Setting

1. Press the “🎵” button, sound machine will be ON/OFF.

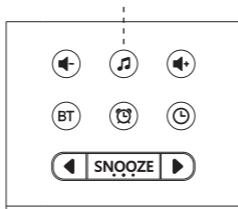Sound Machine On/Off



2. Press the “  ” button to decrease the volume.
Press the “  ” button to increase the volume.
(1-30 adjustable)

Notice:

When the sound machine is on, the volume adjustment is only used for sound machine, the volume of the alarm will not be affected.

Picking Your Sounds

When sound machine is on, press the “◀” and “▶” button to switch among all the 25 sounds in sequence.

Here is the list of tracks



S01	White Noise 1	S14	Campfire
S02	White Noise 2	S15	Heart Beat
S03	White Noise 3	S16	Rain
S04	Pink Noise	S17	Thunderstorm
S05	Brown Noise	S18	Brook
S06	Blue Noise	S19	Summer Night
S07	Fan 1	S20	Train
S08	Fan 2	S21	Jungle
S09	Fan 3	S22	Wind
S10	Fan 4	S23	Piano
S11	Bird Chirping	S24	Yoga Music
S12	Lullaby	S25	Meditation
S13	Ocean Wave		

Bluetooth Connection Setting

1. Short press the button “ BT ” to turn on/pause Bluetooth. Long Press the button “ BT ” for 2 seconds to turn off Bluetooth. When Bluetooth is ON, the “ BT ” icon will flash on the display.



2. Turn on Bluetooth on your phone and connect with the device “ TS1 ”. The “ BT ” icon will stop flashing on the display upon connecting successfully.
3. When music is playing, press the “ ◀ ” or “ ▶ ” button to change the music. Press the “ BT ” button to pause the music and press again to play.

4. Press the “  ” or “  ” button to select the volume level. (1-30 level adjustable) A number will be shown on the display.

Notice:


1. The Bluetooth will automatically turn off if fails to connect to the phone within 2 minutes.
2. If a call comes in, the Bluetooth will stop playing the music.
3. When the clock is connected to the phone via Bluetooth, it will auto-sync the phone time to the alarm clock. It may fail to auto-sync the time due to incompatible situations on different phone version.
4. When the Bluetooth is on, the volume adjustment is only used for the Bluetooth speaker, the volume of the alarm and sound machine will not be affected.

 
Display Brightness Setting

Scroll the DISPLAY DIMMER dial at the back of the machine to adjust the display brightness. (It can be adjusted from 0 to 100%)

Sleep Timer

You can use sleep timer to turn off nightlight and sound machine automatically when the preset sleep timer comes.

1. Press repeatedly the “” button to select the sleep timer ranging from 30, 60, 120, 180 minutes to OFF. The sleep timer will be shown on display.

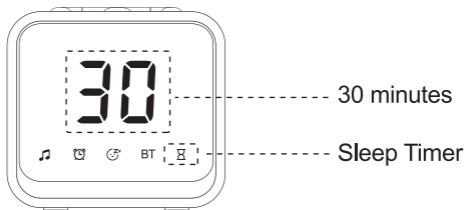


2. When the sleep timer is set, please wait for 5 seconds to exit from the setup. The “⌚” indicator will be shown on the display.
3. Press repeatedly the “⌚” button to select “OFF” option to turn off sleep timer.
4. When sleep timer is on, press “⌚” button to see the sleep timer remained.

Note:

When the nightlight and the sound are both on, the sleep timer can only be set for both.

Nightlight Setting

 1. Press the “SNOOZE” button to turn on the nightlight. Then press the “SNOOZE” button to change the color of the nightlight.

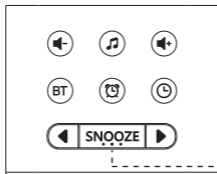

Change Color

2. Press and hold the “**SNOOZE**” button for 2 seconds, the nightlight will be turned off.

Battery & Memory Function

Install 1* CR2032 battery into Battery Compartment for memory function. (Battery is built in already)

Notice:

Under the battery power, the display will go blank and preset alarm will not go off. Battery power is for saving TIME/ALARM settings only.

Support

The sound machine with alarm clock comes with one year warranty. If you have any issue with this machine, please contact us at **Support@keviec.com**. We will address your issue within 24 hours.

FCC Statement:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.