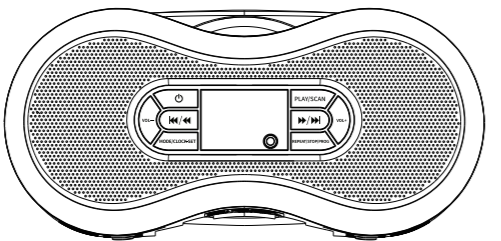 
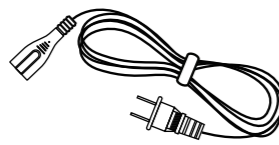 

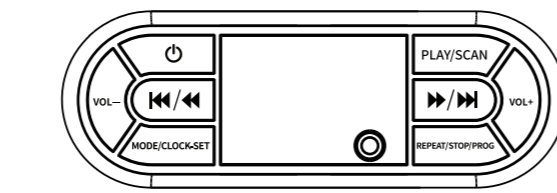 




## Portable Bluetooth® CD Boombox with Digital FM Radio Quick Start Guide

100043854

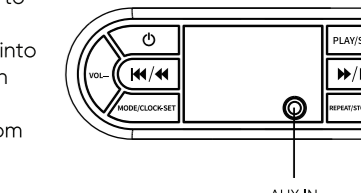 
<b>What's in the Box?</b>	Check to make sure you have everything below.
<b>A</b> 	
<b>B</b> 	<b>C</b> 
A. 1 Portable Bluetooth® CD Boombox B. 1 AC Power Cable 4.92 ft (150 cm) C. 1 Quick Start Guide	

<b>Product Overview</b>	
	
<b>POWER</b> Standby/power on	<b>REPEAT/STOP/PROG</b> In CD mode: Repeat a track/stop playback In Radio mode: Save the station as a preset
<b>MODE/CLOCK-SET</b> Switch to a different mode or set the clock	<b>VOL-</b> Decrease the volume
<b>PREVIOUS/BT/TWS</b> Play previous track/BT/TWS	<b>VOL+</b> Increase the volume
<b>PLAY/SCAN</b> Play/pause/autoscan for a station	
<b>NEXT</b> Play next track	

<b>Setting Time</b>
<b>To set the time on your device:</b> 1. Enter Standby mode 2. Press and hold the CLOCK-SET button 3. Press the <b>PREVIOUS</b> or <b>NEXT</b> buttons to select 12/24 hour format 4. Press the CLOCK-SET button 5. Press the <b>PREVIOUS</b> or <b>NEXT</b> buttons to select the desired hour/minute 6. Press the CLOCK-SET button to confirm

<b>FM Mode</b>
<b>To enter FM Mode:</b> 1. Press the MODE button to switch to FM mode 2. Press and hold the SCAN button to automatically search through stations 3. Press the <b>PREVIOUS</b> or <b>NEXT</b> buttons (the adjusted FM frequency will jump to 0.1MHz) to choose station. Press and hold <b>PREVIOUS</b> or <b>NEXT</b> to stop at the nearest station.
<b>Setting and Selecting Presets</b>
<b>To set a preset:</b> 1. Enter FM mode 2. Press and hold the REPEAT/STOP/PROG button 3. The screen will begin to flash 4. Press the <b>PREVIOUS</b> or <b>NEXT</b> buttons to store your desired radio stations (1-20) 5. Press the REPEAT/STOP/PROG button to confirm
<b>To select a preset:</b> 1. Enter FM mode 2. Press the REPEAT/STOP/PROG button 3. Press the <b>PREVIOUS</b> or <b>NEXT</b> buttons to select the pre-stored station (1-20) 4. Press the REPEAT/STOP/PROG button to confirm

<b>CD Mode</b>
Press the MODE button to switch to CD mode, then insert your CD.
<b>Button Functions in CD Mode:</b>
<b>PLAY/PAUSE</b> Press to play; press again to pause.
<b>REPEAT</b> Pressing the REPEAT button cycles through the following options: • Repeat current track • Repeat all • Automatic song selection
<b>STOP</b> Press to STOP playing a track

<b>Bluetooth® Mode (BT)</b>
1. Press the MODE/CLOCK-SET button to switch to Bluetooth® mode. The Bluetooth® icon will flash on the display. 2. Turn on Bluetooth® on your mobile device and search for "onn cd bmbx rd" to connect. 3. The Bluetooth® icon on the display will stop flashing once connection is successful. 4. You may now stream content from your mobile device to the boombox.
<b>AUX Mode</b>
Press the MODE button to switch to AUX mode. Connect an AUX cable into the AUX jack located on the front panel of the device to play music from external devices.


We'd love to hear from you. Scan with your Walmart app and let us know what you think.

## TWS Mode

This device features **TWS (True Wireless Stereo)** technology, which allows you to play music on two onn. CD boomboxes simultaneously, creating a surround sound experience.

1. Make sure both boomboxes are turned on and Bluetooth® mode is enabled. The Bluetooth® icon will flash on both boombox displays.
2. Press and hold the PLAY button on either unit to connect to another onn. CD boombox. A prompt will play, sending a pairing request to your mobile device.
3. Once you accept the request, another prompt will play, indicating a successful connection.
4. You may now stream content from your mobile device, and it will play on both boombox units.

## The Specs

- Digital FM Radio
- Function Modes: FM/CD/BT/AUX/TWS
- Bluetooth® 5.0
- 3.5 mm AUX In
- RMS: 5W (2.5W x 2) output
- Range: 33 ft (10 m)
- AC input: 100–240V
- Requires 6 C-cell batteries (not included)

## The Fine Print

### FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

## The Fine Print

- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

### Additional Warnings and Precautions

**CAUTION:** To prevent electric shock, match the wide blade on the plug to the wide slot on the outlet and fully insert.

- The mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

- Caution marking is located at the rear or bottom of the apparatus.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.

**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with

## The Fine Print

oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.

**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

**WARNING:** Shock hazard – Do Not Open

- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

**WARNING:** DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- If the coin/button cell battery supplied with this product is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Completely replace all old batteries with new ones.
- Batteries should be recycled or disposed of as per state and local guidelines.

• This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

- This lightning flash with arrowhead symbol within an equilateral triangle is

## The Fine Print

intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

NOTE: Exposure to certain lasers can cause eye damage.

Do not mix old and new batteries and do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

### Need help?

We're here for you every day from 7 a.m. – 9 p.m. CST. Give us a call at 1-888-516-2630