



Round Stereo Speaker with Bluetooth® Wireless Technology Quick Start Guide

100092910

What's in the Box?

Check to make sure you have everything below.

A **B**

C **D**

A. 1 Round Stereo Speaker
B. 1 USB-C® Charging Cable
C. 1 FM Antenna
D. 1 Quick Start Guide

Buttons Overview

- Mode / Power Button**
Press and hold to turn the speaker on/off.
Press to switch between modes.
(Modes: AUX / Memory Card / Bluetooth® / FM Radio)
- Volume Down/Previous Button**
Press and hold to turn down the volume.
Press to go to previous song.
- Pause/Play Button**
Press to pause/play current song.
- Volume Up/Next Button**
Press and hold to turn up the volume.
Press to go to next song.
- Bluetooth® Button**
Press and hold to enter TWS Pairing Mode. This allows you to connect and play music on two **onn.™** Round Speakers simultaneously.
Press to disconnect paired devices.

Back Ports

A. Memory card slot
Insert a memory card (sold separately) to play music files.

B. USB-C® charging port
Use the included USB-C® cable to charge the speaker.

C. AUX In / FM Antenna Jack
Connect external devices via AUX cable (sold separately) to stream music.

Insert the included FM Antenna cable into the AUX In / FM antenna jack while in FM mode to improve the radio reception.

Indicator Lights

The Round Speaker has two light indicators – one on the left side and the other on the right.

Battery Light Indicator

- Steady - Charging
- Steady - Fully Charged

Mode Light Indicator

- Steady - TWS Mode
- Flashing - TWS Pairing
- Steady - AUX / Memory Card Mode / FM Radio Mode
- Flashing - Low Battery
- Steady - Bluetooth® Mode
- Flashing - Bluetooth® Pairing

Charging Your Device

Plug the included USB-C® end of the USB cable into the charging port, and connect the other end of the cable to a power adapter (sold separately). Allow approximately four hours to fully charge the battery.

Note: We recommend using a USB wall adapter with a 5V output.

Initial Setup

1. Once your device is fully charged, press and hold the **POWER button** until you hear a voice prompt indicating the device has entered Bluetooth® pairing mode.

2. On your smartphone or tablet, search for the Bluetooth® device named **"Onn rnd speaker"** and tap to connect.

3. A prompt will play once pairing is successful.

We'd love to hear from you. Scan with your Walmart app and let us know what you think.



 
TWS Mode

This device features **TWS (True Wireless Stereo)** technology, which allows you to play music on two of these speakers simultaneously, creating a surround sound experience.

1. Make sure both speakers are turned on.
2. Press the **Mode button** on both speakers to enter Bluetooth® Pairing Mode.
3. On your smartphone or tablet, search for the Bluetooth® device named "**Onn rnd speaker**" and tap to connect to one of the speakers.
4. Press and hold the **Bluetooth® button** on the speaker that is connected to your smartphone or tablet. The status light will flash purple.
5. You will hear a sound prompt while the speakers are pairing. The status light will turn purple on both speakers once connected.




Memory Card Mode



Memory Card Slot

Insert a memory card (sold separately) into the memory card slot. The speaker will automatically detect memory card playback and will begin to play music files.

 AUX Mode



AUX In

Connect your external device to the AUX input at the back of the speaker via AUX cable (sold separately) to enter AUX mode and start streaming audio from your device.

Press the **Mode button** to exit AUX mode.

NOTE: An AUX cable must be connected to detect AUX mode.

FM Radio Mode

1. Press the **Mode button** until you reach Radio mode. FM radio will begin playing automatically.
2. Press and hold the **Pause/Play button** to auto-scan radio stations. The speaker will pause on stations with a clear signal, and the full scan will complete after a couple of minutes. Any stations with a clear signal will automatically save.
3. Press the **Previous button** or **Next button** to play the previous or next saved station.
4. Press and hold the **Volume Down button** or **Volume Up button** to adjust the volume.

Note: When in FM radio mode, insert one end of the external FM antenna into the FM antenna jack, straighten it, and adjust it to a position in which the audio is clear. Pointing the antenna towards a window usually provides optimal results.

Resetting Your Device

If your speaker is not operating properly, you may reset it. To do so, use a small object – such as a paper clip – to press the button inside the AUX In port. Press and hold the button for approximately 2 seconds until the speaker powers off, and then power it on again as usual.

The Specs

- Bluetooth® Wireless Technology
- TWS Sync Mode (pair 2 of these speakers together)
- IPX4 water-resistant, rainproof, and splashproof
- Built-in rechargeable battery
- FM Radio
- Up to 10 hours of playtime
- Range 33 ft (10m)
- Memory card slot
- AUX In
- Output Power 5W*2
- Frequency Response 140Hz-18KHz

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

FCC Warning (Continued)

the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

FCC ID: 2AVRV100092910

Need help?
We're here for you every day from 7 a.m. – 9 p.m. CST. Give us a call at 1-888-516-2630