



# CRTB7001

## User Manual

7" Quad-Core Tablet with Android™ 10 (Go Edition)



## Table of Contents

---

Read Before Use.....	2
Proper Disposal.....	2
Tablet Overview.....	3
Touchscreen Basics.....	4
Initial Setup .....	5
Charging .....	5
Powering On .....	5
Setting Up Your Google Account .....	5
Getting Started.....	5
Homescreen.....	6
Adding Icons .....	7
Moving Icons .....	7
Removing Icons .....	7
Taking a Screenshot.....	7
Sleep Mode .....	7
Quick Settings and Notifications .....	7
Managing Notifications and Interruptions .....	8
Changing the Wallpaper.....	8
Network Connection.....	9
Turning On Wi-Fi .....	9
Turning Off Wi-Fi .....	9
Adding a Wi-Fi Network.....	9
Forgetting a Wi-Fi Network.....	9
Connecting to a Computer .....	10
Using the On-Screen Keyboard .....	11
Camera.....	13
Taking Photos.....	13
Recording Video.....	13
Uninstalling Apps.....	14
Google Accounts.....	15
Voice Actions.....	17
Tablet Settings .....	19
Reset and Restore .....	20
Troubleshooting .....	21
Specifications .....	22
Need Help?.....	23
Warranty Information .....	24

## **Read Before Use**

---

As the tablet software is updated regularly, this User Manual may not cover all aspects of the new features.

- After fully charging and draining 2-3 times, the new battery is in its best condition.
- Listening at excessive volumes when using headphones may cause hearing damage.
- Do not disconnect the tablet during formatting, uploading or downloading.
- Do not disassemble the tablet.
- Clean only with a clean, soft cloth. Do not use alcohol to clean the surface.
- Do not use the tablet while driving or walking.
- The tablet is not resistant to water or moisture. Avoid using the tablet in a humid environment.
- Do not drop the tablet or impact it against a hard surface.
- Do not update the firmware manually. The tablet should be updated with the appropriate firmware and the appropriate methods we provide. Should an upgrade be necessary, please do not hesitate to contact us.

 
## **Proper Disposal**

---

In most states, there are laws governing the disposal of computers, televisions and other electronic products, often referred to as “e-waste.” Laws may vary from state to state, yet most states prohibit the disposal of e-waste as ordinary garbage that is disposed of in municipal landfills. If you live in a state with e-waste restrictions, when you discard this product at the end of its useful life, do not dispose of it with your regular trash. Instead, it should be discarded at approved e-waste repositories or collection points or taken to a local Goodwill Recycling Center for recycling.

## Tablet Overview

---

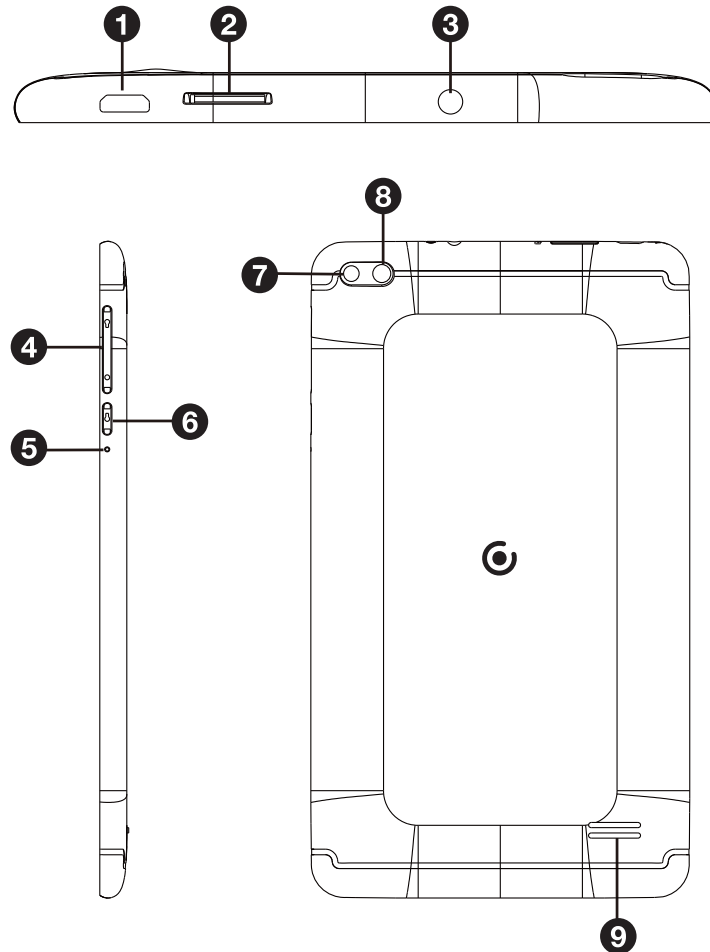

1. Micro USB Port
2. Micro SD Card Slot
3. Headphone Jack
4. VOL+/VOL-
5. Reset

6. Power
7. Camera
8. Flashlight
9. Speakers

## Touchscreen Basics

---



Tap the screen once to activate an item.



Touch and hold to move an item by dragging.



In many apps, touch and hold can offer more options.



Zooming: Double tap quickly to zoom into a webpage, picture, or map.



Some apps allow you to zoom in and out by touching the screen with two fingers and spreading them apart or pinching them together.



TIP: You can flick the screen with your finger to quickly scroll through a long list, such as a library of music.

### ENTER TEXT



Tap a specific point on the screen where you intend to enter text. The on-screen keyboard will pop up.

## **Initial Setup**

---

### **Charging**

Fully charge your tablet for at least six hours before initial use.

Use the included wall charger. The battery indicator will confirm that your device is charging.

NOTE: Charging by connecting to a computer causes slower charging. We recommend using only the provided wall charger.

### **Powering On**

To turn on your tablet, press and hold the power key for approximately two seconds. The Core Innovations logo indicates that the tablet is loading.

Once the screen loads, choose your language and connect to your Wi-Fi network. You will then be prompted to sign in to your Google Account.


### **Setting Up Your Google Account**

Sign in using the email address and password from your Google Account. If you don't have one yet, please create one now.

An email address that you use for any of the following counts as a Google Account: Gmail™, YouTube™, Google Apps™, AdWords™, any other Google product.

 
When you sign in with a Google Account, all your email, contacts, calendar events, and other data associated with that account automatically sync with your tablet. You can also add multiple Google Accounts later.

### **Getting Started**

Once your tablet loads, you will see a welcome screen. Tap "OK" to begin using your tablet. Tap  to customize your home screen with apps and widgets.

## Homescreen



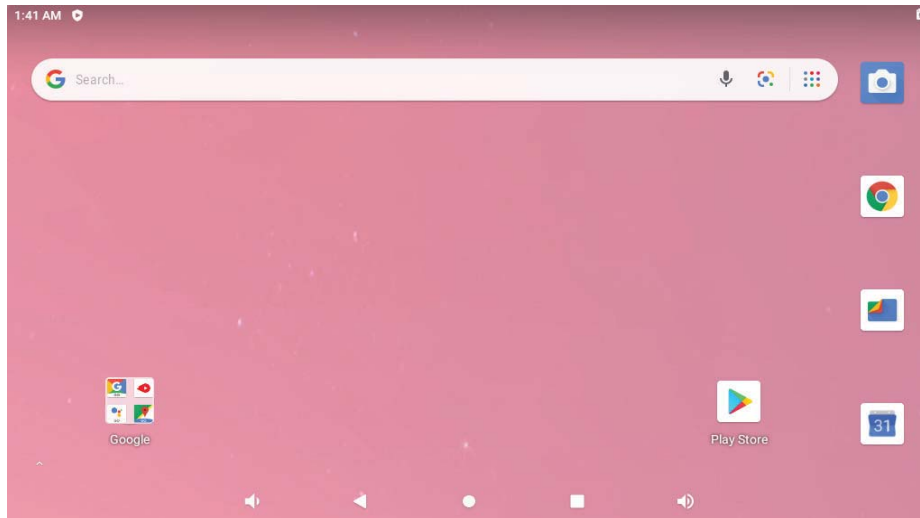





---



### **Icons**

You can fill the home screen with any combination of shortcuts, widgets, and folders you like.

When you turn on your tablet for the first time, you'll see the main home screen panel. This panel is typically centered; you can access additional panels on either side of the main one by swiping your finger left or right.

-  **Battery Level:** The white battery level indicator will decrease and change to red as the battery is drained.
-  **Wi-Fi Signal:** As the Wi-Fi signal strength decreases, the blue bands will change to grey.
-  **All Apps:** Tap to view all apps.
-  **Back:** Go back to the previous screen.
-  **Recent apps:** Open a list of recent apps. Tap an app to open or swipe left/right to remove the thumbnail.
-  **Home:** Go back to the home screen. Hold and slide up to open Google Now.
-  **Increase Volume**
-  **Decrease Volume**



## Homescreen (Continued)

---



### **Adding Icons**

Within the All Apps menu, choose an app or swipe right to choose a widget. Tap and hold the desired app or widget for about two seconds, until the home screen appears. Slide it wherever you wish to place it and let go.

### **Moving Icons**


Touch and hold the icon. Slide your finger to the new position. To move between home screens, slide toward the edge of the screen. To bump another icon out of the way, slowly slide towards it. Lift your finger to drop the icon into its new position.



### **Removing Icons**

Touch and hold the app or widget. Drag to the “X” icon at the top of the screen.

### **Taking a Screenshot**

Make sure the image you want is displayed on the screen. Press the screenshot icon  on the status bar to take a screenshot.

You can display or hide the screenshot icon on the status bar in the settings menu. Screenshots are automatically saved in your gallery.



### **Sleep Mode**

To save battery, you should put your tablet in sleep mode by turning off the display. To do this, press the power key and immediately release it. Press the button again to wake your tablet and bring up the lock screen.



### **Quick Settings & Notifications**

Swipe down from the top of your homescreen to view your notifications.



Use two fingers to swipe from the top of your homescreen, or swipe down again from notifications, to view your quick settings.

 
## Homescreen (Continued)

---


### **Managing Notifications and Interruptions**

Tap “Sounds and Notifications” in the Settings menu. You can choose which notifications to display, define the priority level of the notification per app, and specify which apps have access to your notifications. You can set your device to display notifications only at specific times, for specific types, and from specific contacts.

### **Changing the Wallpaper**

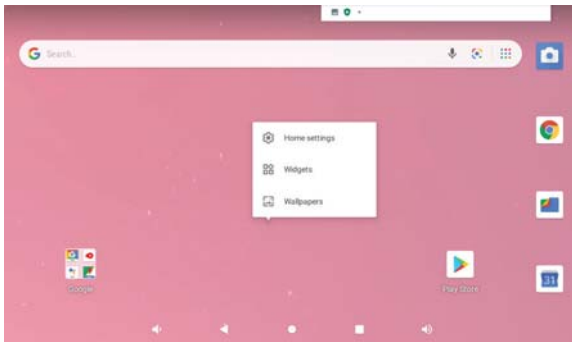

 Tap and hold your finger on any empty space on your homescreen, and a list of options will appear. Tap Wallpapers.

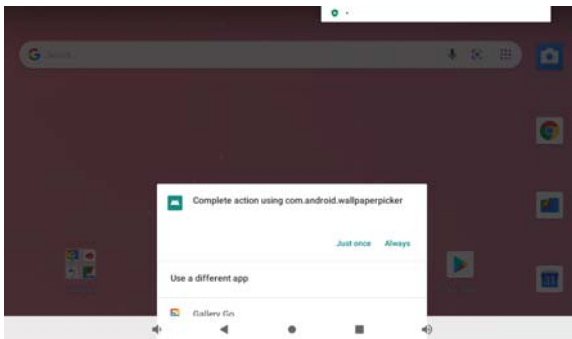

Select “Just once” if you’d like this action to prompt every time you change the wallpaper. Select “Always” to skip this action in the future.




Tap My Photos to select a wallpaper from Gallery Go. Choose the image you’d like to use and tap Set Wallpaper to confirm the change. You may now pick whether you’d like the new wallpaper to appear on the homescreen, lock screen, or both.

## Network Connection

---

Wi-Fi can only be used when it connects with a Wi-Fi Access Point (AP) or a free, unsecured Wi-Fi hotspot.

### **Turning On Wi-Fi**

Within the All Apps menu, tap the Settings  icon. Under Wireless & Networks, tap “Wi-Fi”.

Your tablet displays a list of networks within range. To connect to a network, toggle the button at the top of the screen to ON and choose a network you wish to connect to.

 
When connected, the wireless indicator appears in the status bar. The white lines indicate connection strength.

### **Turning Off Wi-Fi**

Under Wireless & Networks, toggle the Wi-Fi button to OFF. Turn off Wi-Fi when you’re not using it to extend the life of your battery between charges.

### **Adding a Wi-Fi Network**

You may also add a Wi-Fi network by pressing the menu icon in the top right corner and selecting “Add Network”.

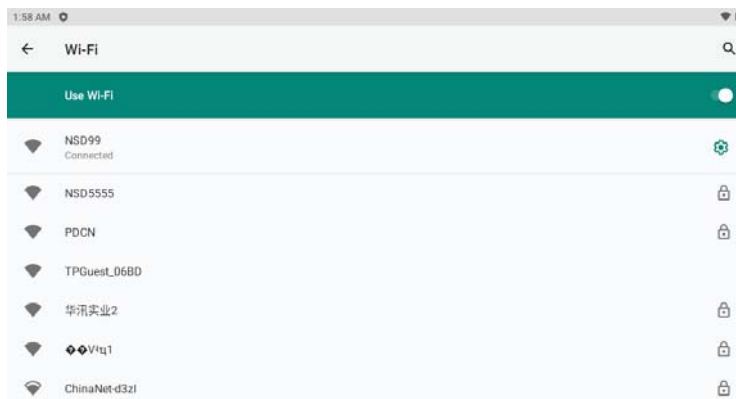



### **Forgetting a Wi-Fi Network**

In the Wi-Fi Settings window, select the network name. A dialog will appear in which you can tap “Forget”.

## Connecting to a Computer

---
  
### On a PC

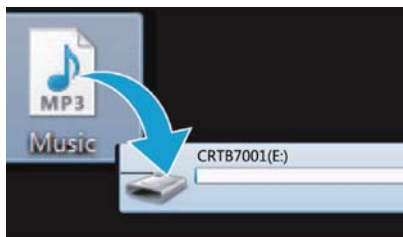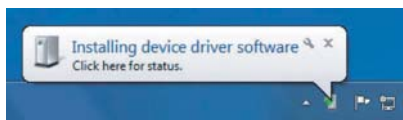

Connect your tablet to a PC using the included Micro USB cable. The device driver will automatically install.

Choose “Open folder to view files” or select the removable disk.


You will now be able to drag and drop the files from your computer onto your tablet, just as you would with a USB flash drive.

### On a Mac



 First, install the Android File Transfer application for Mac. Go to [android.com/filetransfer](http://android.com/filetransfer) on your Mac and choose “Download Now”.

The Android File Transfer application will automatically launch when you connect your tablet.

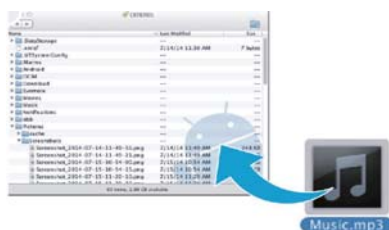

Drag and drop files to transfer.


## Using the On-Screen Keyboard

 
---

### Entering Text

Enter text using the on-screen keyboard. It will automatically open in most applications. Should it not automatically pop up, simply open the keyboard by touching where you want to enter text.

NOTE: Depending on what you are doing, some of the keys on the keyboard may look different. Keyboards A and B appear when you are searching or browsing the web. Keyboard C appears when you are writing emails, documents, or messaging.

To hide the keyboard, touch the modified Back button  at the bottom of the screen.

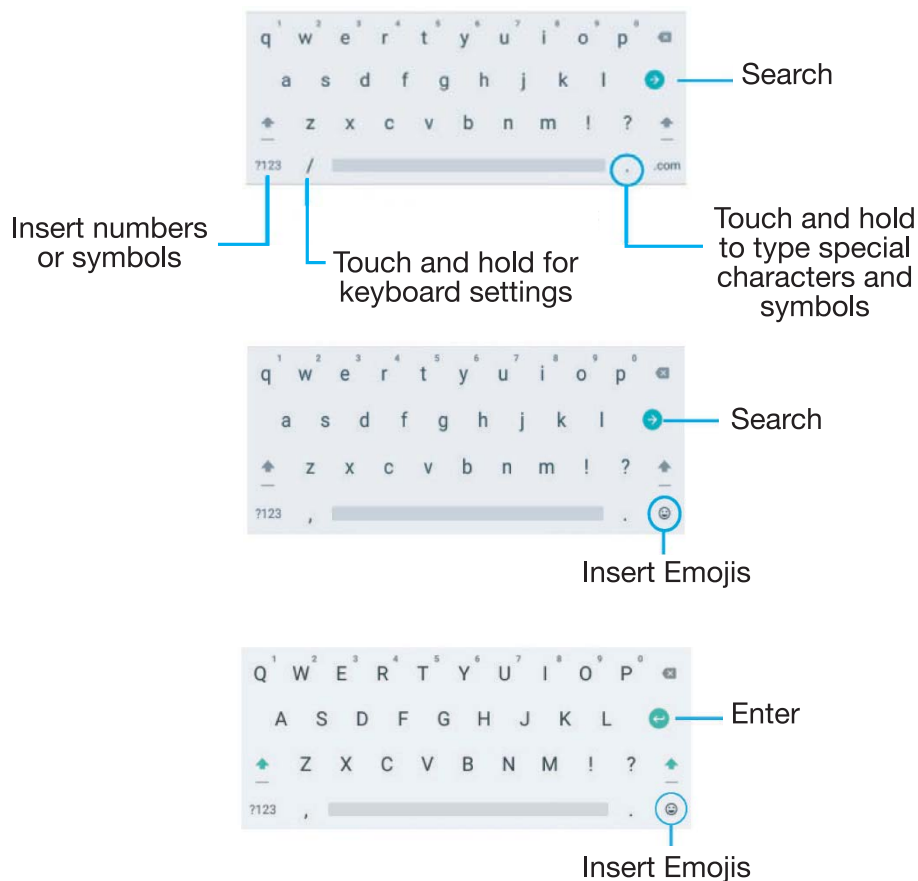


## Using the On-Screen Keyboard (Continued)





 
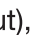 


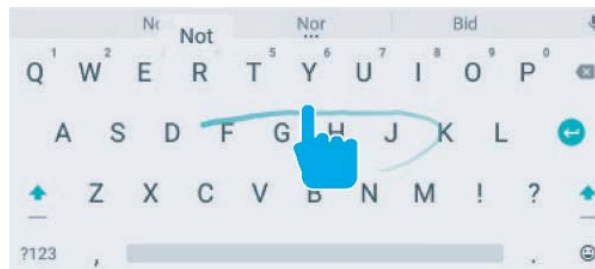---

### Gesture Typing

Swipe your finger over letters you want to type, lifting your finger after each word. The keyboard will anticipate and predict the next word in your sentence.



### Basic Editing

- **Move the Insertion Point:** Tap where you want to type. The cursor will blink in the new position and a blue tab will appear below it. Drag the tab to move the cursor.
- **Select Text:** Tap and hold or double-tap within the text. The nearest word will be highlighted and blue tabs will appear. Drag tabs to edit the selection.
- **Delete Text:** Tap  to delete characters or selected text.
- **Insert Capital Letters:** Tap the  key once to insert one capital letter, or hold the key while you type.
- **Turn on Caps Lock:** Double-tap the  key. It will turn into a shaded arrow (). Tap again to return to lowercase.
- **Cut Copy, Paste:**  Select the text you want to manipulate. When highlighted, tap  (Cut),  (Copy), or  (Paste).

### Keyboard Settings

- **Input Languages:** Select different languages to be included when typing.
- **Android Keyboard Settings:** Edit keyboard settings, such as auto-capitalization, sound and auto-correction, as well as input methods and styles.

## **Camera**

---

Tap the camera app to take pictures and videos to share with your friends and family.

### **Taking Photos**

- Make sure the icon bar on the left shows the camera icon.
- Tap the camera icon to take a photo.
- Pinch two fingers together on the screen to zoom.
- Tap the menu icon in the top right corner for camera settings.

To switch to video record mode, swipe right from the left icon bar. Select the video icon. You can also change the resolution settings and try advanced features.


### **Recording Video**

- Make sure the icon bar on the left shows the video icon.
- Tap the video icon to start recording.
- Tap the video icon again to stop recording.
- Pinch two fingers together or spread them apart on the screen to zoom.
- While recording you can tap anywhere on the screen to take a picture.
- Tap the menu icon in the top right corner for video settings.

## Uninstalling Apps

---

To Uninstall an Unwanted App:

- Tap the Settings icon 
- Under **Device**, tap **Apps**
- Tap the app you wish to uninstall
- Tap **Uninstall**

## Google Accounts

---

### **Why use a Google Account?**

Google Accounts let you organize and access your personal information from any computer or mobile device.

 
**Sync & Back-Up:** Whether you draft an email, add a contact, or add an event to your calendar, your work continuously gets backed up and synchronizes with any device using the same Google Account.

**Accessibility:** Check your latest emails, events, or text messages wherever you are on any computer or mobile device.


**Security:** Google works around the clock to ensure your private information stays secure.

**Shopping:** Connect your Google Account with your Google Wallet™ to easily purchase music, books, apps, and more on Google Play and other online stores.

**Services:** Your Google Account also lets you take full advantage of other Google apps and services such as YouTube, Google, and more!

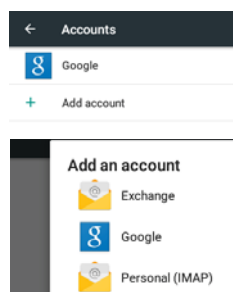

### **Adding a Google Account**



- Tap Settings 
- Under **Accounts**, tap **Add Account**
- Tap the type of account you want to add and sign in.



## Google Accounts (Continued)

---

### Removing a Google Account

- Tap Settings 
- Under **Accounts**, tap **Google**.
- Tap the account that you want to remove.
- Tap Menu icon  and then **Remove Account**.



### Google Play



Google Play brings together all of your favorite content in one place. Access movies, TV shows, music, books, magazines, apps, and more when you sign in with your Google Account.

You can also shop for and purchase additional games, books, magazines, and more in the Google Play Store app.

### Google Now™

Google Now uses contextual data from your tablet, and from other Google products, to supply you with just the right information at just the right time.

You can download the Google Search app on Google Play.

After you have downloaded and installed the Google Search app, tap the  icon on the home screen, or swipe up from the  icon, to open Google Now.

Find out what the weather is like, how much traffic to expect before you leave for work, or how your favorite sports team is doing.

To dismiss a card from the Google Now screen, swipe it away. The card will return the next time it's relevant, which may be hours or days from when you dismissed it.

You can turn Google Now cards on or off at any time. To do so from the main Google Now screen, choose a specific card from **Menu > Settings > Google Now**. You can check or uncheck when you'd like that card to appear.

## Google Accounts (Continued)

---

### Google Now Settings

- **Voice Settings:** Voice settings control different aspects of speech input and output.
- **Language:** Select a language to use for Voice Searches. The Voice Search language can be different from the language displayed on your tablet.
- **Speech Output:** Select “Hands-Free” to turn on speech output when using a headset.
- **Block Offensive Words:** Check to ensure that search results with offensive language are blocked.
- **Hotword Detection:** When this is checked, you can say “Google” when viewing the Google Now screen to initiate a Voice Search or Voice Action.
- **Tablet Search:** Select which apps in your tablet are included in Google searches.
- **Privacy & Accounts:** Control search-related privacy options for your Google Account.
- **Manage Location History:** Opens Google Maps settings, where you can turn location settings and location reporting on or off.
- **Location:** Allows you to turn location access by all Google apps on or off.
- **Show Recent Searches:** Check if you want search suggestions based on your recent searches.
- **Manage Web History:** View your web history after signing in.

## Voice Actions

---

After installing the Google Search app, you can use Voice Actions to get directions, send messages, and perform a number of other common tasks.

### To initiate a Voice Action, you can:

1. Tap the microphone icon in the Google Search Bar on your homescreen.
2. Tap the microphone on your keyboard. Next, speak the Voice Action you want to use. Here are some typical examples:
  - “Set alarm for 8:30 a.m.”
  - “Send email to Marcus Foster.  
Subject: Coming tonight?  
Message: Hope to see you later.”
  - “Navigate to Mike’s Bikes in Palo Alto”

As you speak, Voice Search analyzes your speech and initiates the action. If Voice Search doesn’t understand you, it lists a set of possible meanings. Just tap the one you want.

Some Voice Actions, such as “send email” and “note to self”, open a panel that prompts you to complete the action by speaking or typing more information.

### When prompted, you can:

- Touch any text already in the panel to add, or edit the text by typing. (You can tap the microphone icon again to continue speaking instead of typing)
- Touch underlined words or phrases, drag across multiple words to view a list of alternate transcriptions, or edit by speaking or typing.
- Touch a button at the bottom of the window to add any optional fields. (You can also speak the name and content of any of these fields.)
- When you are done, touch the appropriate button to complete the action, such as “Send”.

## Voice Actions (Continued)

---



### **Voice Commands**

To initiate a Voice Action, touch the Mic icon. Voice Actions will only be available after downloading the Google Search app. Below are some handy Voice Commands.

<u>Say:</u>	<u>Followed by:</u>	<u>Examples:</u>
[Words you want to search for]		“bike shoes”
‘Map of’	Address, name, business name, or other destination	“Navigate to Union Square”
“Go to”	Search String or URL	“Go to Google.com”
“Note to self”	Message text	“Note to self: buy milk.”
“Define”	Word to define	“Define campanile”
“Weather”	Location	“Weather Detroit”
“Movie”	Movie Title	“Movie, Los Angeles, London After Midnight”
“Pictures of”	Topic	“Pictures of cats”
“Translate to”	Language or phrase	“Translate to French, Where is the restroom?”
“What is”	[Math phrase]	“What is 183 plus 26?”

---

## **Tablet Settings**

---

### **Device Settings**

- **Home:** Google Now Launcher
- **Display:** Adjust brightness, change your wallpaper, sleep settings, font size, HDMI settings, and device rotation.
- **Storage:** Provides storage use data.
- **Battery:** Provides battery usage data.
- **Apps:** Tap an app to force quit, uninstall, clear data, or move to SD card.
- **Sound:** General audio settings.
- **Notifications:** Adjust notifications.
- **Memory:** Show the amount of memory used.

### **Personal Settings**

- **Location:** Allow Google to use data to determine your location for improved search results.
- **Security:** Adjust settings to make your tablet more secure. Allow installation of non-market apps.
- **Accounts:** Tap to add or remove email accounts.
- **Language & Input:** Set language, spelling correction, keyboard and voice settings.
- **Backup & Reset:** Backup data and reset your tablet.
- **Google:** Provides Google services.

### **System Settings**

 
- **Date & Time:** Set the date, time, and time zone.
- **Accessibility:** Adjust settings to accommodate your needs. Turn on/off screen rotation.
- **Printing:** Print services
- **About Tablet:** Model number and general tablet information.

## Reset and Restore

---

### **Reset Device**


Reset the device by pressing and holding the reset button with a small object such as a paper clip.

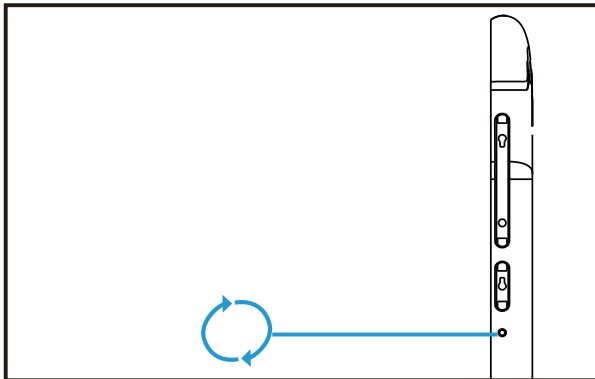

### **Factory Restore**

Tap “Backup & Reset” in the settings app. Then select “Erase all data (factory reset)” to restore factory settings. This will erase all data on the tablet.

 NOTE: Be sure to backup all contents on your device before performing a factory reset.

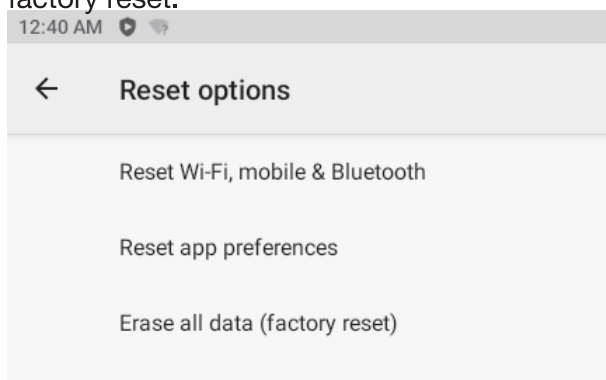

## **Troubleshooting**

---

### **Tablet will not power on**

Check the tablet's power level. Make sure it is fully charged. If your tablet still does not turn on, try resetting it.

### **No sound from headphones**

Check to see if the volume has been set to "0". Test to see if the headphones are broken by trying another set.

### **Loud static noise**

Check if there is dust in your headphones or in the speaker. Check if the file is broken.

### **Unresponsive to any operation**

Press and hold the power button for six seconds to reset the device.

### **Application is not working**

This app may not be compatible with your OS or the downloaded .apk file is broken. You may need to download a full version.

### **Deleting a Google Account**

Any Google accounts that have been added will be shown under **Settings > Accounts**. To delete an account, tap the account, then tap the menu icon in the upper right hand corner and choose **Remove Account**.

## Specifications

---

- Android 10 (Go Edition)
- 7" 1024x600 Screen
- 1.5 GHz Quad-Core Processor
- 1GB RAM
- 16GB Flash Memory
- 0.3MP front camera
- 2.0MP rear camera with flash
- Micro SD Card Slot (supports up to 64GB)
- USB 2.0
- Accelerometer
- Wi-Fi (802.11b/g/n)
- Bluetooth
- Manufacturer: Shenzhen NST Industry and Trade Co. Ltd

## In the Box

---

- Tablet
- Micro USB Cable
- Wall Charger
- Headphones and Tablet Sleeve
- User Manual
- Quick Start Guide
- Warranty Card





## Need Help?

---

For customer support regarding your device, please submit a request by emailing **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a Core Innovations customer service representative by calling **1-833-909-CORE (1-833-909-2673)**. We are available Monday - Friday, 9am - 5pm PST, except major holidays. Core Innovations strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing a Core Innovations product.

## **Warranty Information**

---

### **Limited Warranty**

Core Innovations (the “Company”) warrants the product purchased and contained in this package (the “Product”) against defects in material or workmanship for 90 Days (Parts & Labor) and 1 Year (Limited). In order for the Company to honor this limited warranty, you must present a valid proof of purchase (i.e. a receipt) of this Product.

This warranty is void if the Company deems, in its discretion, that the Product may have been damaged through modification, improper use, end user negligence, water damage or tampering of the barcode of the Product. This warranty is a limited warranty for repair/replacement of the Product, subject to the conditions set forth herein.

The Company is not liable for consequential, indirect, incidental, special or punitive damages and the Company’s total liability hereunder shall not exceed an amount greater than the retail purchase price of the product.

### **90 Days Parts & Labor**

The Company warrants to you as the original retail purchaser of the Product, that should the Product have any defect, under normal conditions, such defect(s) will be repaired or replaced with a new or refurbished part (at the Company’s sole discretion) without charge, if the Product is submitted to the Company within a period of ninety (90) days from the date of purchase of the Product. The customer is responsible for transportation cost and insurance charges (if applicable) to the Company. It is the customer’s responsibility to retain original packaging or provide like packaging in order to facilitate the warranty process. The Company will incur no liability whatsoever to provide packaging for warranty items. Should the product be damaged due to insufficient packaging, the warranty may be voided. You must receive a return authorization number (RMA#) before sending the unit in for service. This warranty only applies to manufacturer defects, and the Product must be returned to the Company in its original condition.

### **1 Year Limited Parts**

The one (1) year limited parts warranty gives you the option to return the Product to the Company for repair or replacement. The customer will be responsible for labor charges. This warranty does not cover any incidental or indirect costs incurred as a result of a defect in the Product, including any consequential, incidental or indirect damages.





*Core Innovations intends to make this manual accurate and complete. However, Core Innovations makes no claim that the information contained herein covers all details and conditions. The information in this document is subject to change without notice at any time. Core Innovations assumes no responsibility for accuracy or completeness of the information contained in this manual.*

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.