

FRONT

80mm

100mm

Packed Party
TURN IT UP!
WIRELESS SPEAKER

QUICK START GUIDE
PKBT300

Overview

Buttons

Power / Pause & Play Button
Press and hold to turn the speaker on/off. Press to pause/play current song.

Volume Down/Previous Button
Press and hold to turn down the volume. Press to go to previous song.

Volume Up/Next Button
Press and hold to turn up the volume. Press to go to next song.

Mode/Answer Button
Press and hold to reject an incoming call. If a call is coming in, press to answer and press again to hang up. Press to switch between Bluetooth®/FM Radio/AUX/Memory Card modes.

Bluetooth® Setup

1. Press and hold the Power button until you hear the "Bluetooth® Setup" voice prompt.

2. Enter the Bluetooth® settings on your Bluetooth® device, and look for "Turn It Up Wireless Speaker". Tap to connect.
3. A "Bluetooth® device is connected" prompt will play once connection is successful.

Pair Two Packed Party Speakers

Packed Party Wireless Speakers feature TWS (True Wireless Stereo) technology, which allows you to play music on two Packed Party Wireless Speakers simultaneously, creating a surround sound experience.

1. Make sure both Packed Party Wireless Speakers are turned on.
2. Press the Power button on both speakers to enter "Bluetooth® Setup".
3. Connect your Bluetooth® device to one of the Packed Party Wireless Speakers.
4. Press and hold the Mode button on the connected Wireless Speaker. You will hear a sound prompt while the speakers are pairing.
5. The status light will illuminate on both Wireless Speakers, indicating that the two speakers are connected.

BACK

FM Radio Mode

Switch to FM radio by pressing the Mode button .

Press the Pause/Play button to scan radio stations automatically.

If you want to search radio stations manually, press the Prev/Next buttons .

NOTE: You may insert the included micro USB cable when in FM mode to improve radio reception.

Hands Free Calling

Previous/Volume-
Press once to decrease volume.

Mode/Answer Button
Press once to answer a call. Press again to hang up. Press and hold to reject a call.

Next/Volume+
Press once to increase volume.

Charging the Speaker

1. Plug the included micro USB end of the USB cable into the charging port, and plug the other end of the cable into a wall charger (not included).
2. Allow approximately four hours to fully charge the battery. A full charge powers the speaker for over 10 hours of play time based on a 70% volume level.

Note: We recommend using a USB wall adapter with a 5V output.

Resetting the Speaker

If your speaker is not operating properly, you may reset it. To do so, press and hold the Power button for approximately 8 seconds until the speaker powers off, and then power it on again as usual.

Need Help?

For customer support regarding your device, please submit a request by emailing support@dpaudiovideo.zendesk.com. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a DP AV customer service representative by calling **1-833-909-2673**. We are available **Monday-Friday, 9am - 5pm PST**, except major holidays. DP AV strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Specifications

- Bluetooth® Wireless Technology
- TWS Pairing (pair 2 wireless speakers)
- 5W RMS Power/ 10W Peak Power
- 3.7V/2550mAh Rechargeable Battery

In The Box

- Wireless Speaker
- Micro USB Cable
- Quick Start Guide
- Warranty Card

Designed in Austin, Texas. Made in China. All designs © 2022 Packed Party, Inc. © 2022 DP Audio Video LLC. All Rights Reserved. USB is used to identify the compatibility of our technology and is not used to identify or certify on any individual company, logo or any respective intellectual marks. © 2022 Bluetooth SIG, Inc. All rights reserved. The Bluetooth trademarks including the Bluetooth word mark, the figure mark (the "BT" and "and" logos), and the combination mark (Bluetooth word mark and design) are owned by the Bluetooth SIG. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 1 year warranty from date of purchase. 30-day risk-free return. Manufactured/Imported by DP Audio Video LLC, Distributed by DP Audio Video LLC, Los Angeles, CA.

2022 Publishing Terrace, Suite 200, Austin, Texas 78758 Packed Party is a registered trademark of Packed Party, Inc.
A WARNING: Cancer and Reproductive Harm - www.P65Warnings.com. FCC ID: 2AUV918130 | BK2202

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

LOOK!

SCAN ME WITH YOUR SMARTPHONE FOR EXCLUSIVE PARTY HOW-TO TIPS, DOWNLOADS & MORE!

FOLLOW THE PARTY @PACKEDPARTY

LIFE'S A PARTY WHEN YOU MAKE IT ONE!
WWW.PACKEDPARTY.COM

C:100	C:3	C:0
M:90	M:81	M:30
Y:36	Y:10	Y:84
K:30	K:0	K:0

