

Packed Party

TURN IT UP!

PARTY SPEAKER




QUICK START GUIDE


PKDJ200

What's in the Box?

 A

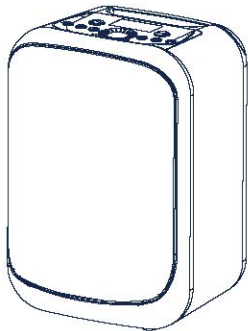

B

 

C



D

 
 
**Quick Start
Guide**

E

**Warranty
Card**

- A. 1 party speaker
- B. 1 charging cable
- C. 1 AUX cable
- D. 1 quick start guide
- E. 1 warranty card

Device Overview

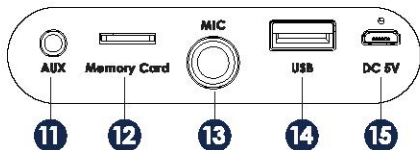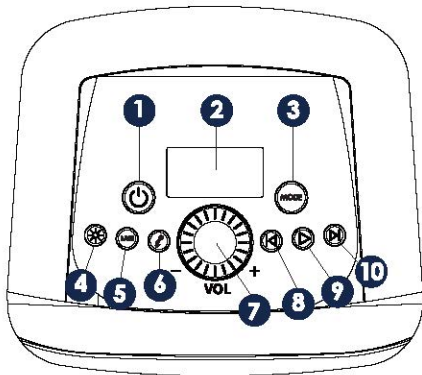

Device Overview (continued)

- 1 Power**
Power on/off your device.
- 2 LED screen**
- 3 Mode**
Press to switch modes.
(Bluetooth® / USB / FM radio / Memory card / AUX)
- 4 Light mode**
Press and hold to turn on/off light mode.
Press to switch between the 5 lighting presets.
- 5 Bass boost**
Press to turn the subwoofer on/off.
- 6 Karaoke mode**
Press to eliminate the original vocals.
- 7 Volume up/down**
Turn knob to adjust volume.

Device Overview (continued)

 
- 8 Previous**
Press and hold to rewind playback. In FM mode, press and hold to manually search for low frequency channels. Press to play the previous track. In FM mode, press to select the previous channel.
- 9 Play/Pause**
In FM mode, press and hold to automatically search for radio channels. In Bluetooth® mode, press and hold for TWS pairing or unpairing. Press to play. Press again to pause.
- 10 Next**
Press and hold to fast forward playback. In FM mode, press and hold to manually search for high frequency channels. Press to play the next track. In FM mode, press to select the next channel.

Device Overview (continued)


- 11 AUX IN**
Stream music from external devices via the included AUX cable.
- 12 Memory card slot**
Stream music from a memory card (sold separately).
- 13 Microphone**
Connect a microphone (sold separately) to sing along to your favorite songs.
- 14 USB input**
Stream music from your USB flash drive (sold separately).
- 15 Charging port**
Charge your speaker by connecting the included charging cable to a power source.

Charging Your Device

Please fully charge your device before using for the first time. Use the included charging cable to connect your device to a power source.

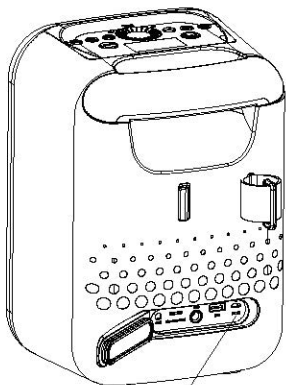

Charging port

 


Charging port

NOTE:

Please charge the battery at least once per month to maintain optimal battery performance. If the battery is stored for a long period without being charged, battery life may be shortened.

Initial Setup

1. Once your device is fully charged, press and hold the  **POWER** button to turn it on. Your speaker will enter Bluetooth® pairing mode automatically and **"bt"** will flash on the screen.

2. On your smartphone or tablet, search for the Bluetooth® device named **"Turn It Up Party Speaker"** and tap to connect.

3. A sound will play once pairing is successful, and **"bt"** will stop flashing on the screen.



Bluetooth® Mode (BT)

After initial Bluetooth® pairing, your speaker will automatically connect to the previously paired device when turned on.

To pair your speaker to a new device:

1. Disable Bluetooth® on your previously connected device.
2. Press the **MODE** button on your speaker to switch to Bluetooth® mode. "**bt**" will flash on the LED screen, indicating that pairing mode is activated.
3. On the new smartphone you wish to pair, search for the Bluetooth® device named "**Turn It Up Party Speaker**" and tap to connect.
4. A sound will play once pairing is successful, and "**bt**" will stop flashing on the screen. You are now ready to stream music from your new device.

USB Mode

Insert a flash drive or other USB device (sold separately) into the USB input. The speaker will automatically detect USB playback and will begin to play music files.

Press the **MODE** button to exit USB mode.

Memory Card Mode

Insert a memory card (sold separately) into the memory card slot. The speaker will automatically detect memory card playback and will begin to play music files.

Press the **MODE** button to exit memory card mode.

Party Sync Mode (TWS)

This device features **TWS (True Wireless Stereo)** technology, which allows you to play music on two Packed Party party speakers simultaneously, creating a surround sound experience.

 
1. Make sure both speakers are turned on, Bluetooth® mode is enabled, and that both speakers are not connected to other devices.
2. Press and hold the **PLAY** button on either unit. A prompt will play, indicating that pairing is successful.
3. The speaker that flashes is the primary speaker (the other speaker will not flash, indicating that it is the secondary speaker).
4. You may now connect your mobile device as usual. Content will play on both speakers.
5. Press and hold the **PLAY** button to disable Party Sync mode.

AUX Mode

Connect your external device to the AUX input at the back of the party speaker via the included AUX cable to enter AUX mode and start streaming audio from your device.

Press the **MODE** button to exit AUX mode.

NOTE: An AUX cable must be connected to detect AUX mode.

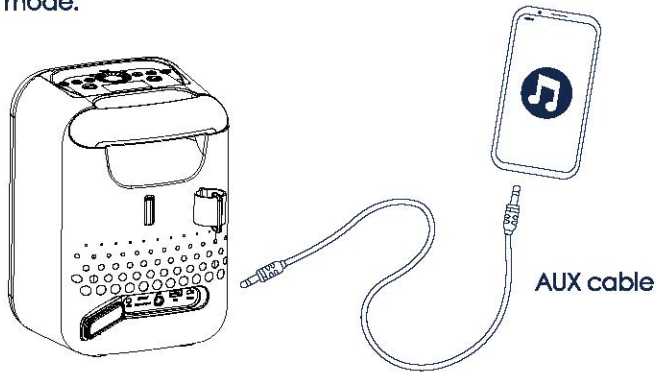

FM Mode

1. Press the **MODE** button to enter FM mode.
2. Press the **PLAY** button to play/pause FM radio. Press and hold the **PLAY** button to automatically search for channels.
3. Press the **PREVIOUS** or **NEXT** buttons to select the previous or next channel.
4. Press and hold the **PREVIOUS** or **NEXT** buttons to manually search for low or high frequency channels.

The Specs

Model	PKDJ200
Bluetooth®	Bluetooth® 5.0
Waterproof Rating	IPX5
RMS Output Power	20W
Working Distance	32.8 ft (10 meters)
Battery	7.4V / 2000mAh
Speaker Diameter	5" Middle & Bass Speaker 1.5" Treble Speaker



KN2201



Bluetooth®

WARNING: Listening to loud audio for extended periods of time may damage your hearing permanently.

Need Help?

For customer support regarding your device, please submit a request by emailing **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a DPAV customer service representative by calling **1-833-909-2673**. We are available **Monday - Friday, 9am - 5pm PST**, except major holidays. DPAV strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing a Packed Party product.

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Designed In Austin, Texas. Made In China. All designs © 2022 Packed Party, Inc. © 2022 DP Audio Video LLC. All Rights Reserved. © 2022 Bluetooth SIG, Inc. All rights reserved. The Bluetooth® trademarks—including the BLUETOOTH word mark, the figure mark (the runic “B” and oval design), and the combination mark (Bluetooth word mark and design)—are owned by the Bluetooth SIG. USB is used to solely describe the compatibility of our technology and in no way is intended to infringe on any intellectual property rights of any respective protected marks. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 1 year warranty from date of purchase, 90 days only on labor. Manufactured/Imported by DP Audio Video LLC. Distributed by DP Audio Video LLC. Los Angeles, CA. 3205 Industrial Terrace, Suite 200, Austin, Texas 78758. Packed Party is a registered trademark of Packed Party, Inc.



LOOK!

SCAN ME WITH
YOUR SMARTPHONE
FOR EXCLUSIVE
PARTY HOW-TO TIPS,
DOWNLOADS, & MORE!



**FOLLOW THE PARTY
@PACKEDPARTY**

LIFE'S A PARTY
WHEN YOU MAKE IT ONE!
WWW.PACKEDPARTY.COM