 




### Instruction Manual

#### TT-601S

You'll soon be enjoying your new Turntable.  
It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

 
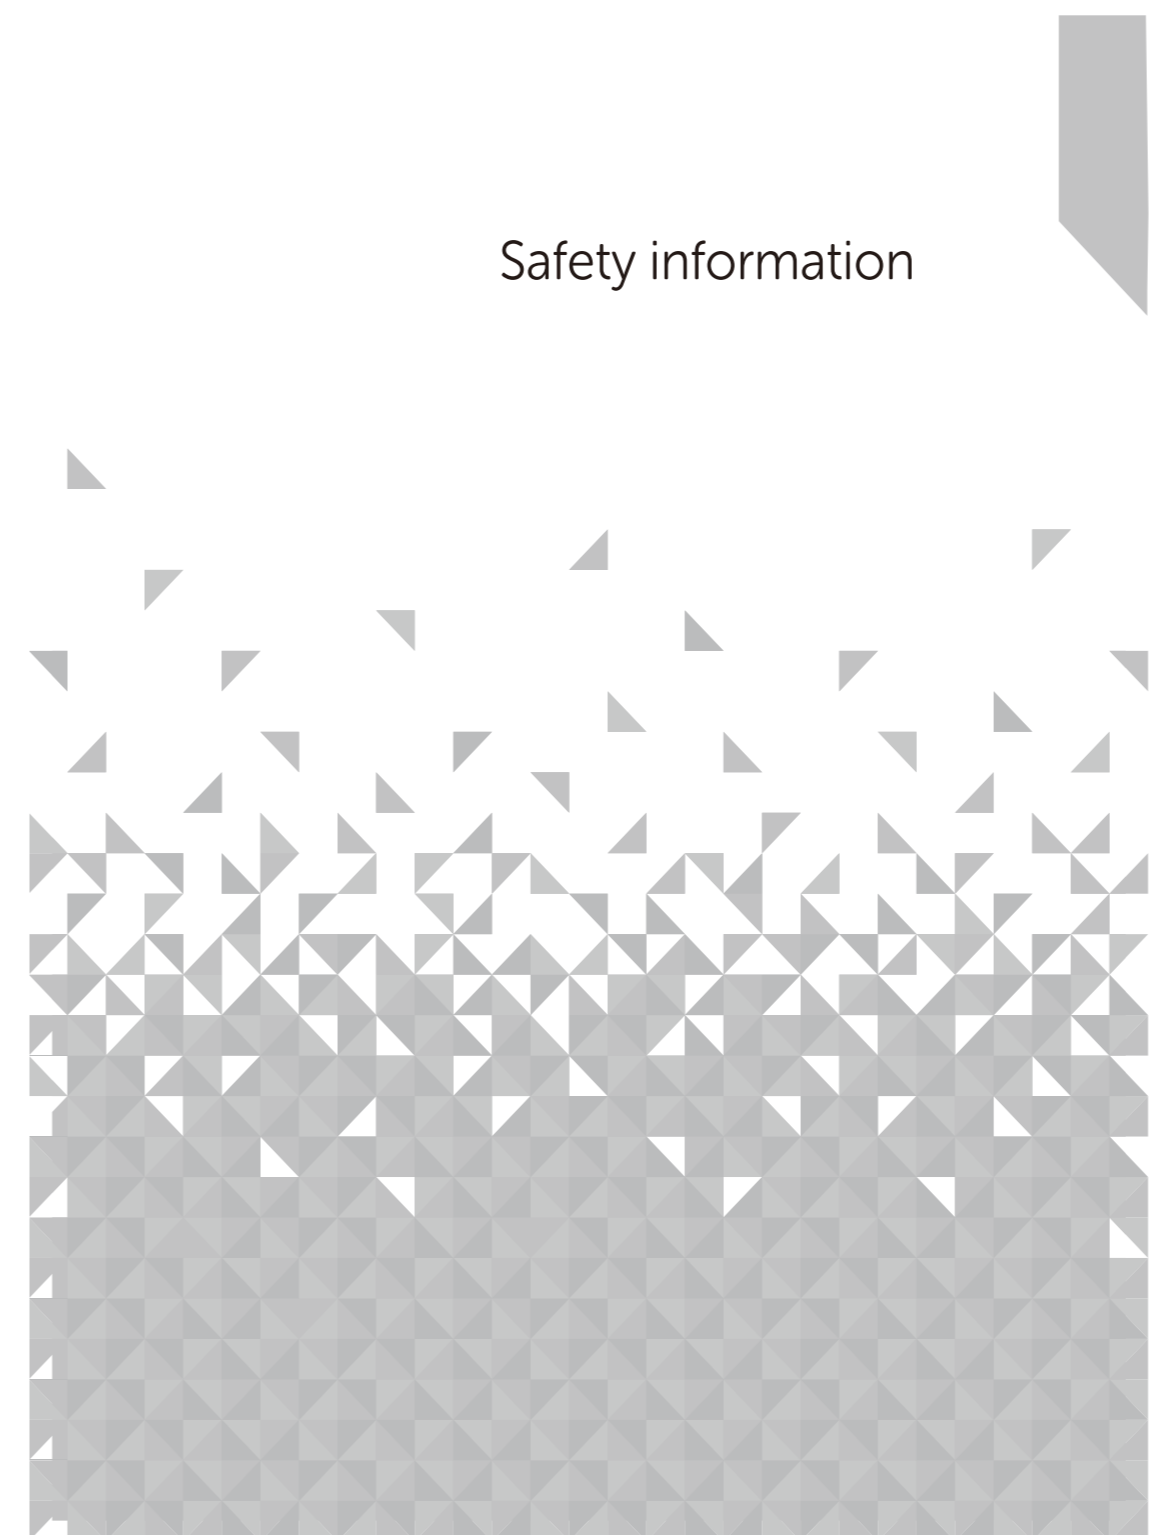


### Safety information

**CAUTION: TURN OFF THE MAIN ELECTRICAL CHECK DO NOT REMOVE ANY COVER HOUSING SERVICEABLE PARTS UNLESS REFERRED TO QUALIFIED SERVICE PERSONNEL.**

#### Power source

- Read the owner's guide.
- Do not use the apparatus near water or moisture.
- Do not use the product near electrical equipment, such as an electric fan, a wall heater, a microwave oven, or a power tool, or near a magnet.
- Do not use the product near a television set.
- Do not use the product during lightning storms or when unusual or long periods of time - to prevent damage to the product.
- Refer all servicing to qualified service personnel.
- Service is required when the equipment has been damaged in any way, such as liquid has been spilled or objects have fallen on the equipment, the power cord or plug has been damaged, or the product does not operate as intended.
- Do not attempt to repair the product yourself.
- Do not use any power source that is not specified in the user's guide.
- To prevent fire or electric shock, avoid covering the main electrical connections with objects.
- Use a suitable power source. If the product is not a suitable power source, as described in the operating instructions, do not use the product.
- The main plug is used as the disconnect device of the disconnect device and never ready accessible.

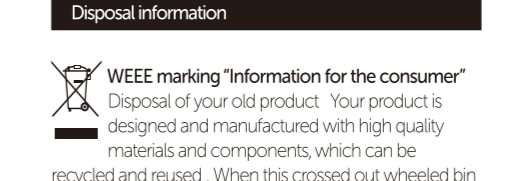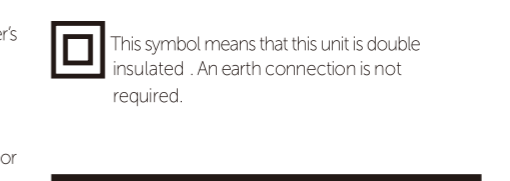

**WEEE marking "Information for the consumer"**  
Detailed information on the disposal of your product is available on the back of the product or in the user's guide. Please act accordingly to your local laws and regulations. The correct disposal of your product is your responsibility. Improper disposal may have potential negative consequences for the environment and human health.

### Contents

Page Contents	5
Warnings	6
Box contents and features	7-8
Caring for the turntable	8
Care and Maintenance	9
Changing the stylus	9
Trouble Shooting Guide	10

 
### Warnings

- No naked flame sources, such as lighted candles, should be placed on or near this equipment.
- Do not place the product in enclosed locations or areas without proper ventilation.
- The main adaptor is used as the disconnect device and must be easily reached to unplug.
- Always use the power adaptor supplied if it needs to be replaced make sure the replacement has the same rating.
- The ventilation should not be impeded by covering the ventilation openings with items, such as photographs, table cloths, curtains, etc.
- Do not expose to dripping or splashed fluids. Objects filled with liquids, such as vases, must not be placed on or near the equipment.
- The unit should not be exposed to direct sunlight, very high or low temperatures, moisture, vibrations or placed in dusty environment.
- Do not use detergents, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe with clean wet cloth and a mild detergent solution.
- Never attempt to insert wires, pins or other such objects into the vents or openings of the unit.
- Do not disassemble or modify the turntable - apart from the stylus which can be replaced. There are no other user serviceable parts.
- The turntable is designed to be used in private homes. It is not intended for use in public places.
- Do not use the product if it has any signs of damage or malfunctions do not use. Consult a qualified service engineer.
- Switch off the mains socket the power adaptor is connected to when the turntable is not in use.
- Do not dispose of the product with household waste at the end of its cycle. Hand over to a collection center for the recycling of electrical and electronic appliances. By recycling, some of the materials can be reused. You are making an important contribution to protect our environment. Please check with your local Authority or recycling advice.

### Disposal of your old appliance

When the crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive:

- All electrical and electronic products should be disposed of separately from household waste at an appropriate recycling point.
- The correct disposal of your old appliance will prevent potential negative consequences for the environment and human health.
- For more detailed information about disposal of your appliance, please contact your local authority or the shop where you purchased the product.

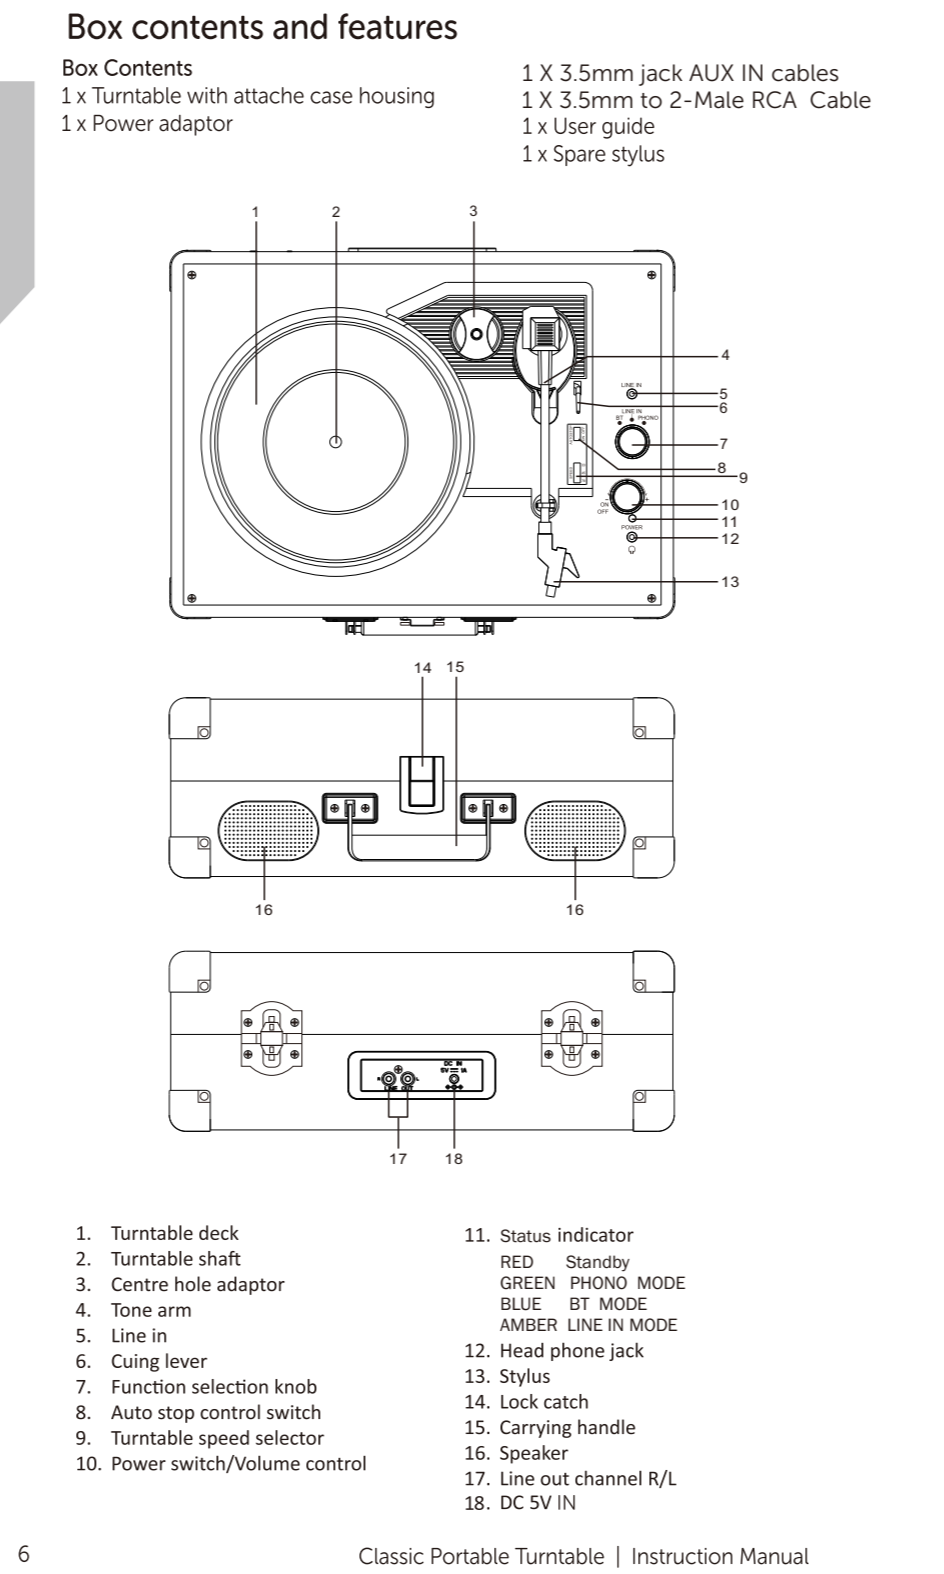

- ### Using the turntable
- Place the turntable case on a flat level surface.
  - Insert the adaptor cord into the DC jack at the rear of the case and plug the adaptor into the mains supply socket.
  - On first use, ensure that the cable tie is removed from the player arm.
  - Remove the stylus cover (fig. 1) and keep in a safe place for future use.
  - Move the speed selector to the speed (33, 45 or 78rpm) corresponding to the record to be played.
  - Turn the **VOLUME** knob to turn the turntable on and the mode indicator will illuminate red.
  - Place a record onto the turntable spindle and unclip the tone arm (fig. 2).
  - Use the cuing lever to lift the tone arm (fig3) and move the arm (fig 4) so that the stylus is positioned just inside the edge of the record or aligned with the start of the track to be played.
  - Slowly lower the arm and after a short interval the record will start to play.
  - Adjust the volume to the desired level by rotating the volume control knob.
  - When the end of the record has been reached the turntable will stop.
  - Use the lever again to lift the tone arm (the deck will start to rotate again), move it back to the clip and lower into the cradle. The deck will stop.
  - Secure the tone arm using the clip and re-fit the stylus cover after use and ALWAYS before moving the turntable.
  - To turn off the turntable at any time, lift the tone arm on the record and turn the **VOLUME** knob fully anticlockwise. A
- 
- 
- 
- 
- Note**  
Some records have a larger centre hole and it may be necessary to fit the centre hole adaptor to the turntable shell before placing the record on the turntable. Always re-fit the stylus cover and secure the turntable arm using the clip before moving the turntable.

- ### Using With Auxiliary Device
- Auxiliary analogue audio equipment can be connected and amplified via the turntable.
- Connect the auxiliary equipment using a 3.5mm jack cable (cable not included) into the LINE IN jack next to the mode knob.
  - Press the **PLAY** button on the auxiliary equipment and use the track controls as usual on the auxiliary device.
  - The volume can be adjusted using the volume knob on the turntable or the controls on the connected auxiliary device.
  - To turn off the unit at any time, turn the volume knob fully anticlockwise.
- ### Using Headphones (not included)
- A stereo headphone jack has been provided so that the turntable can be used without disturbing others. Plug in the headphones at the point marked "HEADPHONE" near the volume knob and adjust the listening volume to your chosen level. Excessive sound pressure from earphones and headphones can cause hearing loss. The turntable speakers will not operate when earphones are fitted.
- ### Bluetooth Operation
- Turn the function selector to the BT position. The blue indicator light will begin to flash.
  - Turn your device Bluetooth setting on and search devices.
  - Select the Bluetooth pairing name "Byron Stables 02" to connect to the record player.
  - Once you are connected the blue indicator light will stop flashing, you can now play music from your device through your record player, use the volume control dial to adjust the volume.
- Note:** After initial pairing the record player will stay paired to your device unless it is unpaired manually or the device is reset.

- ### Connecting the Turntable to External Speaker
- If connecting the turntable to external speakers (via a suitable amplifier) use a twin phono to twin phono lead (not included) to connect the RCA output jacks to the AUDIO IN of the amplifier (see Fig. 5). Ensure red plugs are inserted into the red sockets and white into white.
- 
- ### Care and Maintenance
- #### Changing the stylus
- 
- 
- 
- Ensure the tone arm is secured by the clip.
  - Insert a tip of a small screwdriver as shown and gently push in a downward direction.
  - Remove the old stylus (fig.7).
  - Hold the tip of the new stylus, align the guide pins as shown and clip into position (fig.8).
- #### Caring for the turntable
- Wipe external surfaces with a soft cloth. If the case is very dirty, unplug from the mains supply and use a damp cloth soaked in a weak solution of washing up liquid and water. Allow to dry thoroughly before reusing.

- ### Caring for records
- Hold records by the labels or edges (fig. 9). Oils from clean hands can leave a residue on the record surface that will gradually deteriorate the quality of your record.
- Keep in a cool, dry place and store records in their sleeves and jackets when not in use. Store records upright (on their edges). Records stored horizontally will eventually bend and warp.
- Do not expose records to direct sunlight, high humidity and high temperatures. Long exposure to high temperatures will warp the record. Should the record become dirty, gently wipe the surface in a circular motion using a soft anti-static cloth (fig. 10) suitable for this application.
- 
- 
- ### Trouble Shooting Guide
- | Observation                       | Potential cause / solution   |
|-----------------------------------|--|
| The turntable does not work       | Has the adaptor lead been correctly plugged into the mains and the DC input jack at the rear of the case? Does the socket that is being used have power? Has the volume knob been turned in a clockwise direction to switch the unit on? |
| No sound                          | Is the volume control set at minimum on the turntable or any auxiliary that has been connected?  |
| Nasty sound                       | Has the turntable been placed close to a TV set or similar?  |
| Record does not play              | Has the stylus cover been removed? Is the stylus in contact with the record surface? Check the Aux in cable was removed?   |
| Record sound skips                | Is the stylus damaged? Does the surface of the record need cleaning? Is the record scratched or warped?  |
| Auxiliary equipment does not play | Is the auxiliary equipment correctly connected to the unit?  |

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide if the problem persists, please send email to [CustomerService@byron.com](mailto:CustomerService@byron.com)

### TECHNICAL SPECIFICATION

Power adaptor	100 - 240V - 50/60Hz
Input	2A - 1500mA 0-4A
Output	5V - 500mA 0-4A
Class II (double insulated)	
Power consumption (standby)	1.5W
Power consumption (standby)	4.5W
Cartridge type	Cartrage
Audio output	2W x 2 @ 8Ω
Full input	1000mV impedance 20kΩ
Operating conditions	Temperature: 5°C to 35°C Humidity: 5% to 90%
Operating position	Horizontal

### RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an unrestricted controlled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

### ISED Statement

English: This device complies with the Canadian Interference-Causing Equipment (ICES) Class B limits. This device may not cause interference. (C) This device may not cause interference. (C) This device does not cause any interference, including interference that may cause unwanted operation of the device. The digital apparatus complies with Canadian ICES-3 (B)(N498-308).

Français: Cet appareil conforme des normes d'émission d'émissions électromagnétiques qui sont conformes aux limites d'appareils électromagnétiques de classe B. Cet appareil ne cause pas d'interférences. (C) Cet appareil ne cause aucune interférence, y compris les interférences susceptibles de provoquer le fonctionnement indésirable de l'appareil. (C) Cet appareil ne cause aucune interférence, y compris les interférences susceptibles de provoquer le fonctionnement indésirable de l'appareil. Cet appareil respecte les normes d'émission d'émissions électromagnétiques de classe B. Cet appareil ne cause pas d'interférences, y compris les interférences susceptibles de provoquer le fonctionnement indésirable de l'appareil. Cet appareil ne cause aucune interférence, y compris les interférences susceptibles de provoquer le fonctionnement indésirable de l'appareil. Cet appareil respecte les normes d'émission d'émissions électromagnétiques de classe B. Cet appareil ne cause pas d'interférences, y compris les interférences susceptibles de provoquer le fonctionnement indésirable de l'appareil. Cet appareil ne cause aucune interférence, y compris les interférences susceptibles de provoquer le fonctionnement indésirable de l'appareil.

a5  
材質: 80G 书纸单黑印刷