

4 GUI Operation

NOTE

Slight difference might be found on the interfaces of different models. Following figures are for reference only. The actual product shall govern.

4.1 Boot up

CAUTION

Before the boot up, please make sure:

- The rated input voltage shall match with the device power requirement. Make sure the power wire connection is ready and then turn on the power button.
- For device security, connect the Device to the power adapter first and then connect it to the power socket.
- Always use the stable current. It is recommended to use UPS.
Device of some series does not have the power on-off button. You can boot up the device once the power is connected.

Connect the Device to the monitor, plug into the power socket, and then press the power button to boot up the Device.


4.2 Initializing the Device

When booting up for the first time, you need to configure the password information for **admin** (by default). To guarantee device security, keep the login password for admin properly and modify it regularly.

Step 1 Turn on the Device.


The **Device Initialization** interface is displayed. See Figure 4-1.

 Figure 4-1 Enter password

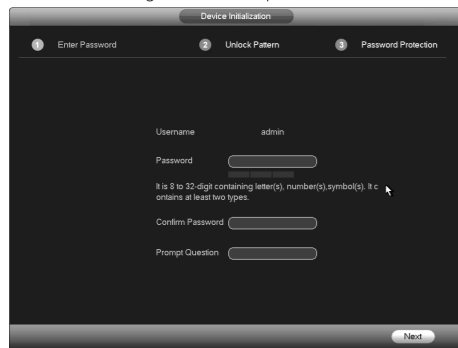

Step 2 Configure the password information for admin. For details, see Table 4-1.


Table 4-1 Password information description

Parameter	Description
User	By default, the user is admin .
Password	In the Password box, enter the password for admin.
Confirm Password	The new password can be set from 8 characters through 32 characters and contain at least two types from number, letter and special characters (excluding "*", "#", "\$", "%", "&" and "&").
Prompt Question	In the Prompt Question box, enter the information that can remind you of the password. NOTE On the login interface, click  , the prompt will display to help you find back the password.

Step 3 Click Next.

The unlock pattern setting interface is displayed. See Figure 4-2.

 Figure 4-2 Unlock pattern

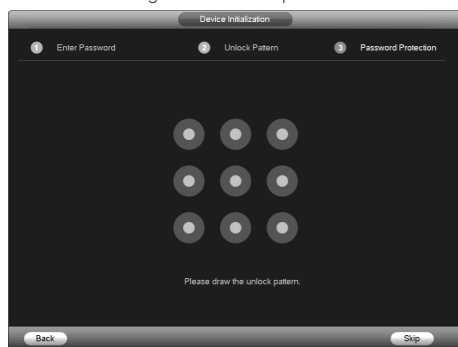


Step 4 Draw an unlock pattern.

After setting unlock pattern, the password protection setting interface is displayed. See Figure 4-3.

NOTE

- Once you have configured the unlock pattern, the system will require the unlock pattern as the default login method. If you skip this setting, enter the password for login.
- If you do not want to configure the unlock pattern, click **Skip**.

 Figure 4-3 Password protection

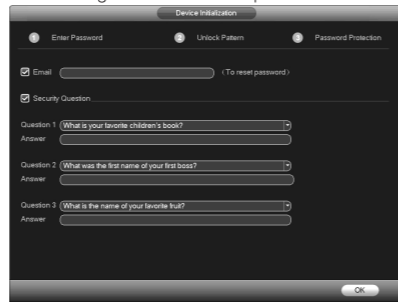

Step 5 Configure the protection parameters for password. For details, see Table 4-2.

NOTE

- After configuration, if you forgot the password for admin user, you can reset the password through the reserved email address or security questions. For details about resetting the password, see *User's Manual*.
- If you do not want to configure the settings, disable the email address and security questions functions on the interface.

Table 4-2 Password protection parameter description

Password Protection Mode	Description
Email Address	Enter the reserved email address. In the Email Address box, enter an email address for password reset. In case you forgot password, enter the security code that you will get from this reserved email address to reset the password of admin.
Security Questions	Configure the security questions and answers. In case you forgot password, entering the answers to the questions can make you reset the password.

NOTE
If you want to configure the email or security questions function later or you want to change the configurations, select **Main Menu > ACCOUNT > USER**.

Step 6 Click OK to complete the settings.

The **Startup Wizard** interface is displayed. For details about quick settings during startup, see *User's Manual*.

4.3 Modifying IP Address

Select **Main Menu > SETTING > NETWORK > TCP/IP**. The TCP/IP interface is displayed. See Figure 4-4. Modify the IP address according to the actual situation (the default IP address is 192.168.1.108).

Figure 4-4 TCP/IP



4.4 Registration

Select **Main Menu > SETTING > CAMERA > Registration**. The Registration interface is displayed. See Figure 4-5.

You can register remote devices through the following two ways:

- Click **Device Search**. In the result list, double-click the remote device or select the check box in front of the device, and then click **Add** to register the remote device.
- Click **Manual Add** and enter the IP address of the remote device to register it.

Figure 4-5 Registration




4.5 Schedule

All channels are 24-hour recording continuously by factory default. You can customize the record period and record type.

Step 1 Select Main Menu > SETTING > STORAGE > SCHEDULE.

The **Rec** interface is displayed. See Figure 4-6.

 
Figure 4-6 Schedule

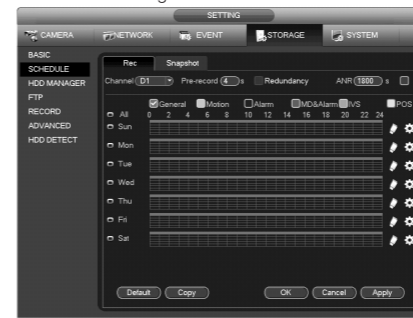

Step 2 Configure parameters such as channel, pre-record, ANR and record type.

- After setting one HDD to be redundant disk, select the **Redundancy** check box to realize video file backup. It is to save video files to different HDDs at the same time. Once one of the HDDs is damaged, there is still a backup file in another disk to ensure data reliability.
- Select the ANR check box to enable this function. When the IPC is out of network access, it keeps on recording and saves the records in the SD card. After the network is recovered, IPC transmits the records during the network outage back to the NVR device to ensure record integrity.

Step 3 Set the schedule period. It includes drawing and editing.

- Drawing: Press and hold down the left button of the mouse and drag the mouse in the time figure to draw the period.
- Editing: Click  to configure the period and then click **OK**.

Step 4 Click Apply or OK to save the settings.


NOTE

The configured record schedule can come into effect only when the auto record function is enabled. For details to enable auto record, see *User's Manual*.

4.6 Playback

Select **Main Menu > Playback** or right-click on the preview interface and select Search. The record search interface is displayed. See Figure 4-7. You can play back records according to the configured record type, record time and channel. For detailed information, see *User's Manual*.

 Figure 4-7 Record search

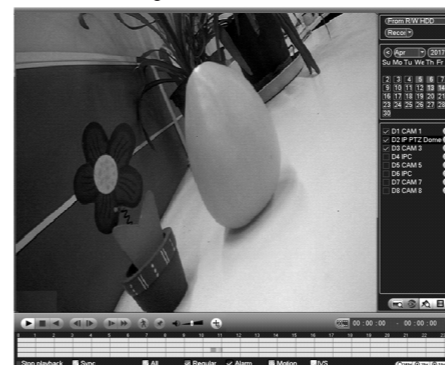

4.7 Shutdown

Select **Main Menu > Shutdown** and the **Shutdown** interface is displayed. Click **Shutdown**.


5 Web Operation

If it is your first time to log in the Device, you shall initialize the Device first. For detailed information, see *User's Manual*.

Step 1 Open the browser and enter the IP address of the Device into the address bar. Press Enter key.

The **Login** interface is displayed. See Figure 5-1.

 Figure 5-1 Login

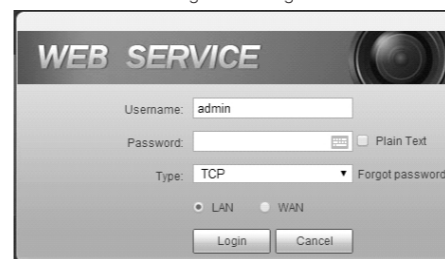

Step 2 Enter the username and password.

NOTE

- The default username is admin, and the login password is the one you set in device initialization. To ensure device security, it is recommended to modify the admin password regularly and keep it properly.
- If you forgot the admin login password, click **Forgot password** to reset it. For detailed information, see *User's Manual*.

Step 3 Click Login.

The **Preview** interface is displayed. On the Web interface, you can perform operations such as system settings, device management and network settings. For details, see *User's Manual*.

NOTE

- When you log in Web for the first time, install the control according to system prompts.

6 P2P

Step 1 Scan the QR code with the cell phone to download and install the mobile APP.

You can get the mobile APP QR code and device SN QR code through the following two ways:

- Log in the local interface and select **Main Menu > SETTING > NETWORK > P2P**.
- Log in the Web interface and select **SETUP > NETWORK > TCP/IP > P2P**.

Figure 6-1 Mobile APP QR code



Step 2 Register device on the mobile APP.


After registering the device successfully, you can view the monitor screen on the cell phone APP.

NOTE

The following figures are for reference only. The actual product shall govern. For detailed information, see *User's Manual*.


1) Tap , select **Device Manager**, and then tap . See Figure 6-2.

 Figure 6-2 P2P (1)

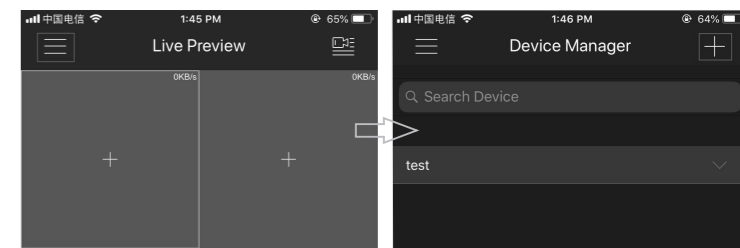

2) Tap the corresponding device type (**WiFi Device** or **Wired Device**) and then tap **P2P** to register the device. See Figure 6-3.

 Figure 6-3 P2P (2)

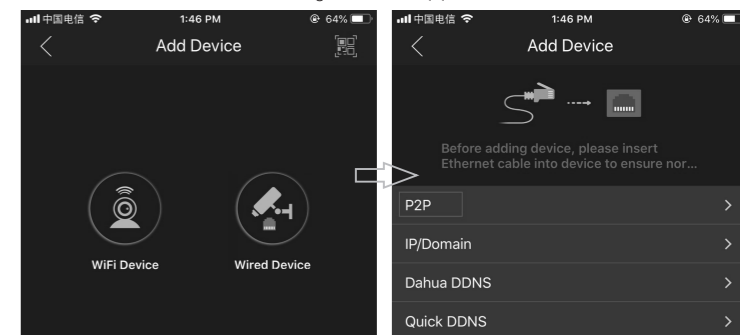

3) Scan the device label or the device SN on the local interface (**SETTING > NETWORK > P2P**) to register the device. See Figure 6-4.

Figure 6-4 P2P (3)



4) After scanning, you can view the device SN. Click **Start Live Preview** and you can see live image on the cell phone.