

# **USER' S MANUAL**


ZIP 19

True Wireless Earphone

Welcome to ZIP19 Wireless Earphones!

In order to let you understand ZIP19 more quickly , please read the following instructions carefully.

## Product Diagram

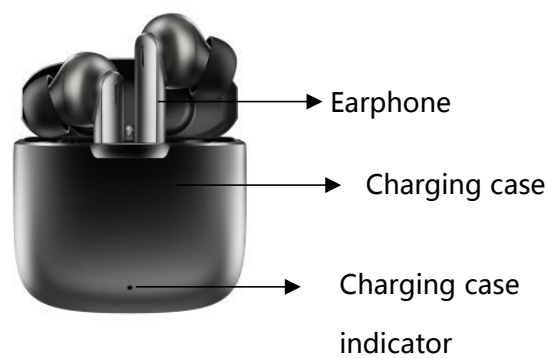

The package box contains a charging case, a pair of wireless earphones and a charging cable

## **Operation**

You can refer to this instruction to perform the following operations on the wireless earphone.

### **1. Turn on and Turn off**

#### **Turn on**

Method 1: When the charging case has remaining power, open the charging case and the earphone will automatically turn on;

Method 2: Press and hold the touch area for 2 seconds in the off state , and the earphone will turn on

Indicator light: The white light and red light are on for 1 second and then goes out when the machine is turned off

Voice reminder: After power on, the voice prompt "Power on"

#### **Turn off**

Method 1: When there is remaining power in the charging box, the earphones will automatically shut down after being placed in the charging compartment;

Method 2: When not connected to the terminal device, the earphone will automatically shut down after 5 minutes or a long press on the touch area for 4 seconds ;

Indicator light: the red light turns off after 2 seconds

Voice reminder: Before shutting down, the voice prompts "Power off"

## **2. Pairing**

Pairing includes the pairing between the left and right earphones, and the connection between the earphones and the terminal device.

### **Pairing between left and right earphones**

The two earphones can be paired automatically after power on

Indicator light before pairing: red light and white light flash alternately.

After the pairing is successful: the white light flashes, and the voice will prompt "DuDu".

### **Connection to terminal equipment**

- Bluetooth on the end device turned on
- After the earphone is turned on, search for the Bluetooth signal on the terminal device , select the corresponding earphone signal name, and then select Connect to pair with the terminal device.

Earphone indicator light: Before the connection is successful, the white light quickly flashes; After the connection is completed, the indicator light goes out.

After the earphone successfully completes a connection with the terminal device, the earphone will automatically find the terminal device that was successfully connected last time when it is used again, and try to connect with it.

### **3. Play music or audiobooks**

#### **Play / Pause**

Double tap on any earbud to play or pause music

Indicator light: no prompt

#### **Switch up and down**

Last song: press the touch area of the left earphone for 1 second

Next song: press the touch area of the right earphone for 1 second

#### **Adjust the volume**

Increase volume: Operate the touch area of the right earphone in the way of interval touch, each touch , the volume of the earphone will increase by 1 unit

Prompt "Dudu" at maximum volume

Decrease the volume: Operate the touch area of the left earphone in the way of interval touch, each touch , the volume of the earphone will increase by 1 unit. There is no prompt tone at minimum volume.

When using a single earphone, the volume cannot be adjusted through the earphone.

### **Voice assistant on/off**

Turn on the voice assistant: touch any earphone touch area 4 times

Turn off the voice assistant: touch the touch area of any earphone twice

When using the voice assistant, the indicator light has no prompt, and the prompt sound comes from the terminal device

## **4. Calls**

### **answering call**

Touch any earphone touch area once.

Indicator light: When there is an incoming call, the white light flashes quickly, and goes off after the call is connected

The prompt tone comes from the terminal device

### **End call**

Touch any earphone touch area twice

When the call ends, there is no indicator light, and the voice prompt is

"Du"

## **Reject call**

Touch any earphone touch area twice

When rejecting a call, there is no indication on the indicator light, and the voice prompt is "Du"

## **5. Restore factory settings**

After the earphone is powered on, when the terminal device is not connected, click the touch area of the two earphones for five consecutive times, and the red and white lights will light up for two seconds at the same time, and return to the factory settings.

## **6. Charging the earphone or charging case**

### **earphone charging**

When the charging case has remaining power, put it into the charging compartment and close the cover to automatically charge

Indicator light: The red light of the earphone is always on, and it will go out when fully charged

**Earphone low battery reminder** : the white light flashes twice every 30 seconds

### **Charging case charging**

When charging the charging box, the red light is always on, but it goes out when fully charged.



Low battery level of charging box: The red light flashes 3 times within 1 second and then goes out (it prompts once every time the headphones are inserted)

After the headphones are placed in the charging box, the green light will light up for 4 seconds and then turn off.

Temperature overheating reminder: The red light flashes 3 times every 2 seconds until the temperature returns to the set range

## The main parameters

model	ZIP19
Dynamic unit size	$\varphi=10\text{mm}$
Earphone battery level	30mAh*2
Earphone single play time	5 hours
Charging case battery	300mAh
Cumulative playback time	about 20 hours
Input Voltage/Current	5V/0.3A

## Precautions

- 1. Try to use the minimum volume that meets the needs. Long-term high-volume use will cause permanent hearing damage.**
- 2. Please keep the device and accessories out of the reach of children, and children should use the device under adult supervision.**
- 3. Do not immerse the device in water for a long time. Avoid using this product while swimming, diving, diving or showering.**
- 4. Do not use this product in places with humidity, dust, or near magnetic fields, so as not to cause internal circuit failure.**
- 5. Avoid storing the earphones in an environment below -15°C or above 50°C.**
- 6. Avoid charging the earphone or charging case in an environment below 0°C.**
- 7. Do not place the earphones on windowsills, car dashboards and other places exposed to direct sunlight for a long time.**
- 8. Do not disassemble, modify the device, or insert foreign objects into the device, as these may cause damage to the device.**

## **FCC Requirement**

**changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment.**

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**

- (1) this device may not cause harmful interference, and**
- (2) this device must accept any interference received, including interference that may cause undesired operation.**

**Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.**

**These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.**

**If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**

- **Consult the dealer or an experienced radio/TV technician for help.**