 


# TWS耳机使用指南

Model No.:ZIP 20

## 產品示意圖

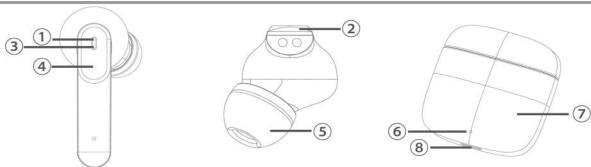

① 麥克風1

② 麥克風2

③ 指示燈1

④ 觸控區域

⑤ 耳帽

⑥ 指示燈2

⑦ 充電盒

⑧ 充電接口

## 配對

開機後，兩個耳機之間會自動配對，配對後兩個耳機交替快閃藍燈。

耳機與手機配對：

- 1) 將耳機從充電盒中取出，確認耳機在待配對狀態，此時兩個耳機快速閃藍燈。
- 2) 打開手機藍牙設置，搜索藍牙信號。
- 3) 找到名為“ZIP20”的藍牙信號名稱，點擊配對連接藍牙耳機，此時會彈出“ZIP20”請求配對的對話框，點擊連接，耳機語音提示“connected”，配對成功。
- 4) 配對成功後，再次使用時耳機和該手機會自動連接。

## 開關機

開機

方法一：將耳機從充電盒取出，耳機會自動開機。

方法二：在關機狀態下，長按耳機3秒鐘。

關機

方法一：將耳機放入充電盒，耳機會自動關機。

方法二：關閉手機的藍牙開關，三分鐘後耳機會自動關機。

## 聽音樂

播放/暫停：輕觸任一耳機2次    上一曲：長按左耳機2秒    下一曲：長按右耳機2秒  
增加音量：輕觸右耳機1下    減小音量：輕觸左耳機1下

## 通話

接電話：輕觸任一耳機1次    挂电话：輕觸任一耳機2次  
取消撥號：在撥號中，長按任一耳機2秒停止撥號  
電話拒接：長按任一耳機2秒鐘

## 語音助手

輕觸任一耳機3次，喚醒或退出語音助手。

## 重置

- 1) 刪除耳機與手機的連接。
- 2) 兩個耳機各輕觸5次，再次開機后，此時耳機會紅藍燈互閃，進入待配對狀態約10秒內，兩個耳機變為藍燈單閃，表示兩個耳機之間已完成重新配對。
- 3) 重新與手機連接後即可使用。

## 充電

耳機：將耳機放入充電盒，充電盒會自動為耳機充電，充電時耳機會顯示紅燈。  
充電盒：請使用隨設備附帶的充電線為充電盒充電。

## 語音提示

狀態	語音提示	狀態	語音提示
開機	power on	調整音量至最大	"Didi"
關機	power off	調整音量至最小	"Didi"
清空配對	power off		
電量低	battery low		
與手機配對中	pairing		
與手機配對成功	connected		
與手機斷開連接	disconnected		

## 充電盒指示燈

 
狀態	指示燈
充電	充電時，指示燈會持續的漸亮漸暗。 電量指示：紅燈5-35%，黃燈35-70%，綠燈70%-100%。
耳機充電	放入充電盒時，充電盒根據自身電量顯示對應顏色燈，先閃2次，然後持續亮燈約8秒鐘。
充電完成	綠燈常亮8秒後熄滅。
缺電提醒	紅燈快閃

## 耳機指示燈

狀態	指示燈	狀態	指示燈
耳機未配對	紅藍交替互閃	待機	指示燈不亮
耳機等待配對	雙耳藍燈單閃	有電話呼入	每隔3秒快閃藍燈2次
配對成功	指示燈熄滅	通話中	指示燈不亮
開機	紅藍快速亮一秒	充電	紅燈常亮
關機	指示燈熄滅	充電完成	指示燈熄滅
播放	指示燈不亮		
暫停	指示燈不亮		

## 注意事項


1. 儘量使用滿足所需的最小音量，長時間高音量使用會導致聽力的永久性損傷。
2. 請將設備及配件放置在兒童接觸不到的地方，兒童應在成人監護下使用設備。
3. 請勿將本設備長時間泡於水中。避免在游泳、潛水、跳水、淋浴時使用本產品。
4. 請勿在潮溼、灰塵多或靠近磁場的場合使用本產品，以免引起內部電路故障。
5. 避免將耳機放置於-15°C以下或50°C以上的環境中保存。
6. 避免在0°C以下的環境中進行耳機或充電盒的充電操作。
7. 請勿將耳機長時間放置在窗臺、汽車儀表盤等陽光直射的地方。
8. 請勿拆解、改裝設備，或在設備中插入異物，這些可能導致設備損壞。

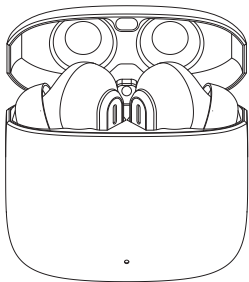

## TWS earphone working instructions

True Wireless Earphone  
Model No.:ZIP 20
 
## Product diagram

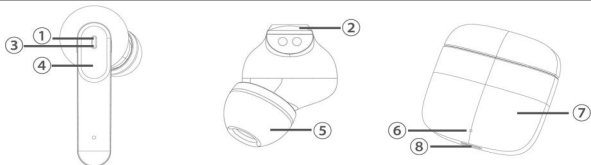

- ①Microphone 1   ②Microphone 2   ③Indicator light 1   ④Operating area  
⑤Ear-tip   ⑥Indicator light 2   ⑦Charging case   ⑧Type-c interface

## Pairing

After being taken out from the charging case, the earphones will be paired automatically. Pairing with the smartphone:

- 1) Take out the earphones from the charging case and confirm that the earphones are waiting to be paired. At this time, the two earphones flash blue lights quickly.
- 2) Turn on the smartphone's Bluetooth, search Bluetooth devices and click 'ZIP20'. A voice prompt as 'Connected' will sound then.
- 3) When you use it again, the earphone will automatically connect with the phone.

## Voice assistant

Touch the left or right earphone three times gently.

## On/off

### Power on

- 1) Take out the earphones from the charging case, the earphones will boot automatically.
- 2) In the off state, press and hold the touch area of the earphones for 3 seconds, the earphones will turn on, and you can hear the prompt "power on".

### Power off

- 1) Put the earphones into the charging box, the earphones will shut down automatically.
- 2) Turn off the Bluetooth switch of mobile phone, and the earphone will automatically shut down in three minutes.
- 3) Turn off the Bluetooth switch of mobile phone, press the earphone for 3 seconds and then it shut down.

## Call

Answer a call:	Touch the left or right earphone once gently.
Hang up:	Touch the left or right earphone twice gently.
Dialing cancellation:	Press the left or right earphone for 2 seconds.
Reject a call:	Press the left or right earphone for 2 seconds.

## Listen to the music

Play/Pause:	Touch the left or right earphone twice gently.
Previous:	Press and hold the touch area of the left earphone for 2 seconds.
Next:	Press and hold the touch area of the right earphone for 2 seconds.
volume+:	Touch the right earphone once gently.
volume-:	Touch the left earphone once gently.



## Charge

### Earphones:

Put the earphones into the charging box, the charging case will automatically charge the earphone, and the earphone will display a red light when charging.

### Charging case:

Use the type-c charging cable which is included in the package to charge the charging case.

## Reset

1. Delete the connection information of the earphone in the phone
2. Touch the left and right earphones 5 times each, and the earphones will turn off after the red and blue lights are on at the same time for one second.
3. After turning on again, the two earphones will flash red and blue lights, and then pair with each other within 10 seconds
4. Connect the phone again to use

## Special Instructions

- 1) Apple iPhones and some Android phones can support the adjustment of phone volume if you need to use headphones to adjust the volume, but for some Android phones, you can only adjust the volume of earphone itself. If you need to restore the default volume, please delete the phone pairing information and reconnect.
- 2) When holding the earphone, do not touch the touch panel area of the earphone to avoid misoperation.

## Earphones indicator

Status	Indicator light
No pairing	Red and blue lights flash quickly
Waiting to be paired	Two blue light flash quickly
Paired successfully	The indicator light is off
Power on	Red and blue light up quickly for 1 second
Power off	The indicator light is off
Play	The indicator light is off
Pause	The indicator light is off
Standby	The indicator light is off
Incoming call	Blue light flashes twice every 3 seconds
Calling	The indicator light is off
Charging	Red light is always on
End of charging	The indicator light is off

## Charging case indicator

Status	Indicator light
Charging	When charging,the indicator light will gradually become bright or dim.Power indicator : Red light :5-35%;yellow light :35 -70%;green light :70-100%.
Earphones charging	When it is put in the charging box, the corresponding color light in it will be on according to its own power, flashing twice firstly and then continuously lighting for about 8 seconds.
End of charging	Green light turns off after 8 seconds.
Power shortage reminder	Red light flashes quickly.

## Voice prompts

Status	Voice prompt
Power on	power on
Power off	power off
Clear all pairings	power off
battery Low	battery Low
Pairing	pairing
Paired successfully	connected
Disconnect	disconnected
Adjust the volume to maximum	"DiDi"
Adjust the volume to minimum	"DiDi"

## Precautions

- 1) Listen with the volume setting as low as possible. Listening at high volume for an extended period may result in permanent damage to your hearing.
- 2) Keep your earphones and accessories out of reach of children. Children should use the earphones only under adult supervision.
- 3) Do not expose the earphones to water for a prolonged period. Do not use it when swimming, diving, or in the shower.
- 4) Using your earphones in a moist or dusty environment, or near a strong magnetic field, may result in an internal circuit failure.
- 5) Do not store your earphones in an environment where the temperature is below  $-15^{\circ}\text{C}$  or above  $+50^{\circ}\text{C}$ .
- 6) Do not charge the earphones and the charging case in an environment where the temperature is below  $0^{\circ}\text{C}$ .
- 7) Do not expose your earphones or charging case to direct sunlight (such as on a window sill or on a car dashboard ) for an extended period of time.
- 8) To avoid damage to your earphones, do not disassemble or tamper with them , and do not insert any foreign matter into them.

## **FCC Requirement**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.