

User Manual

Welcome to use

Thanks for choosing Smart Robot Vacuum Cleaner!

 
It's a programming robot vacuum working base on gyroscope sensor. Working together through navigation algorithms, it is able to program the cleaning path, clean and recharge automatically without manual intervention. It has ultrastrong suction power, high-capacity drawer type dust box, washable HEPA filter screen, split type mopping module and adopts an efficient cleaning mode of first cleaning and then mopping.

You can download the mobile APP by smart phone to check the cleaning map and running status of the robot in APP in real time, define the cleaning area and schedule. You can control the robot remotely. Science and technology make life better.

May you have a nice usage experience!

Product Introduction

Key Function

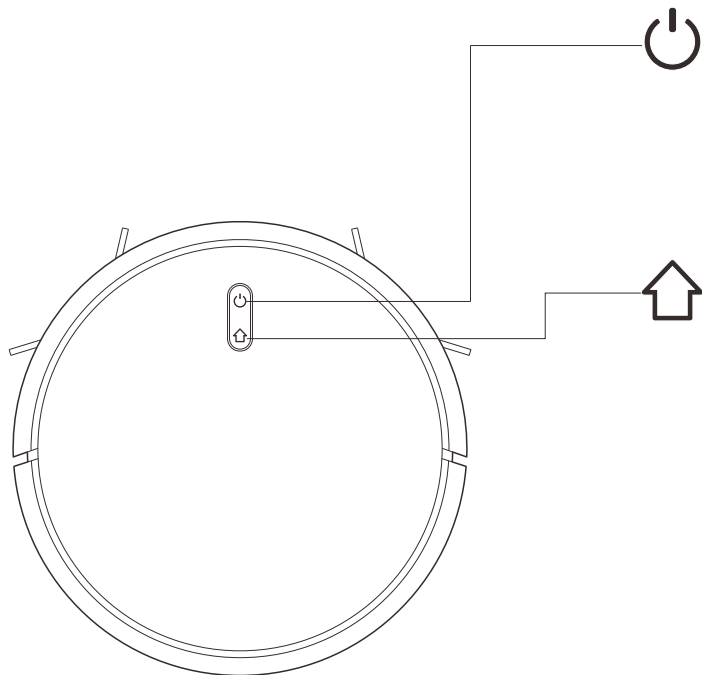

Sweep/ON &OFF

- Short press to start Sweep/Pause
- Long press for 3s for ON/OFF



Recharging/ local cleaning

- Short press Recharge/Pause
- Long press to start local cleaning

Indicator light

 
- Blue: Normal operation or charging
- Red: Abnormal condition or low battery
- Purple: Equipment is not connected to the network

Reset WiFi


- Press two buttons simultaneously for 3s

Product Introduction


Parts List

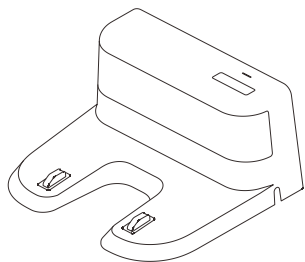


Charging baseX1

 


AdapterX1

 


HEPA filter+sponge filterX1

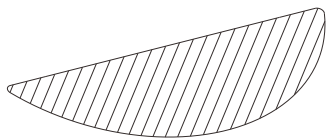 

Duster clothX1

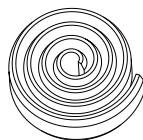 


Virtual wallsX1

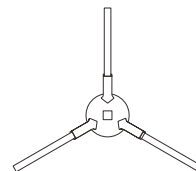 


Left side brushX2
Right side brushX2

Product Introduction

 
Parts List

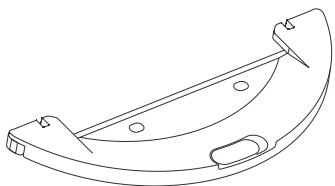

 
Hanging infiltration
type water tank X 1 (optional)

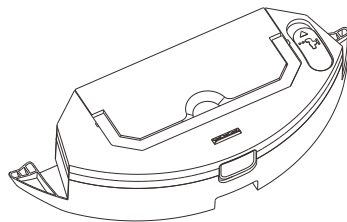

 
2 in 1 electric-controlled
water tank X 1 (optional)

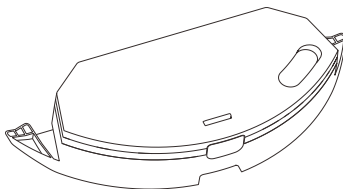

 
Electric-controlled
water tank X 1 (optional)



Remote control
X 1 (optional)

 

 
Cleaning brush with
knife X 1 (optional)



Cleaning brush X 1 (optional)


Product Introduction

 Robot

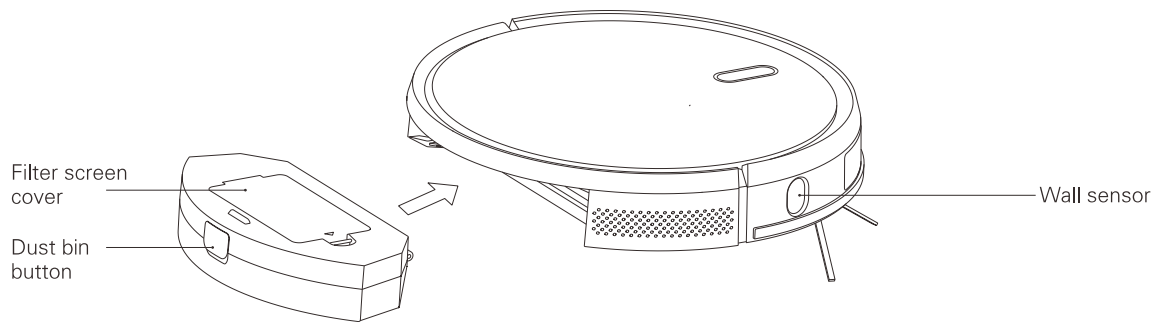



Product Introduction

 Sensor and Structure

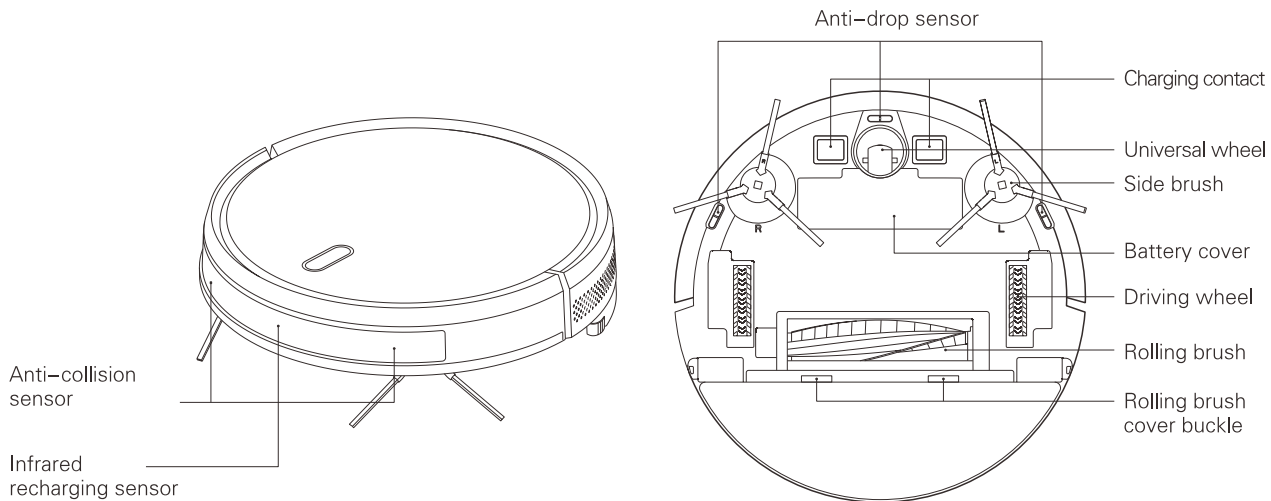


Product Introduction

  Charging Base

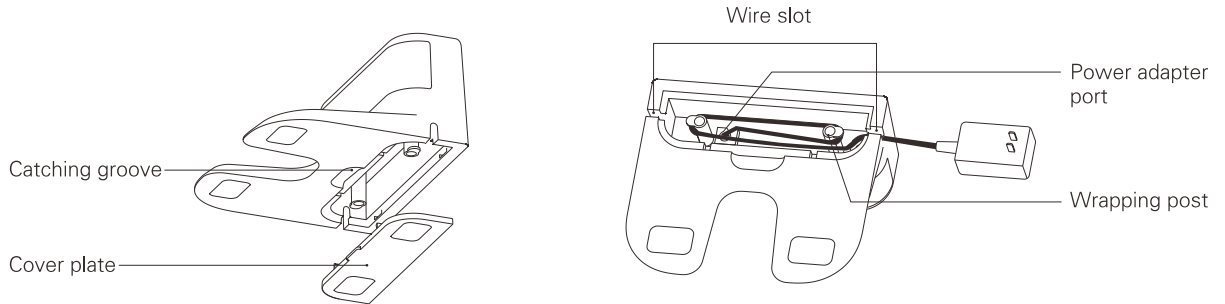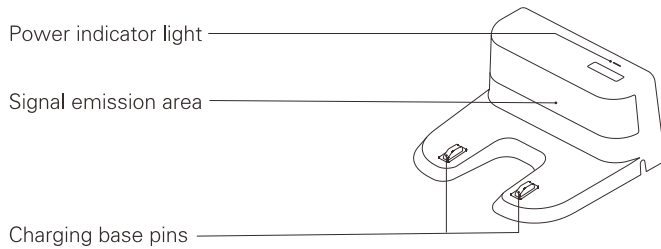


Installation

 - 1、 Connect power line and feed the excess wire into the slot

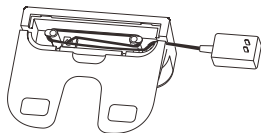

 
- 2、 Place charging base against the wall and connect the power

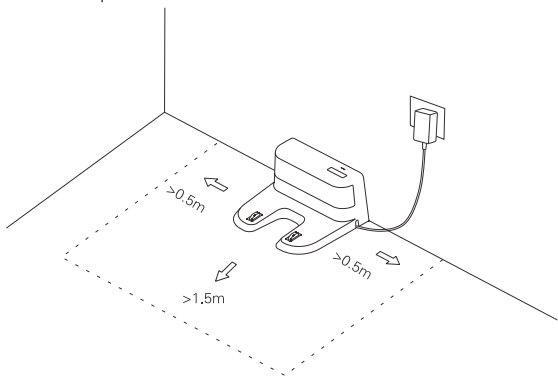

Note :

- Ensure a space of above 0.5m on both sides of the charging base and a space of above 1.5m in the front
- If the power line is vertical to the ground, it may be dragged by the host and consequently the charging base may be powered off
- The charging indicator is normally on when powered on and off when charged

 - 3、 Please do not move the charging base arbitrarily and keep it out of direct sunlight

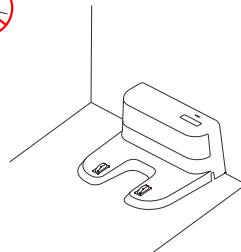


Note :

- Direct sunlight will interfere with recharging signal and consequently the host may be unable to return to the charging base


- 4、 Installation of side brush

 
Make the left side brush (L) and the right side brush (R) correspond to L and R on the bottom casing, press L and R and the side brushes are installed till you hear a “cracking” sound

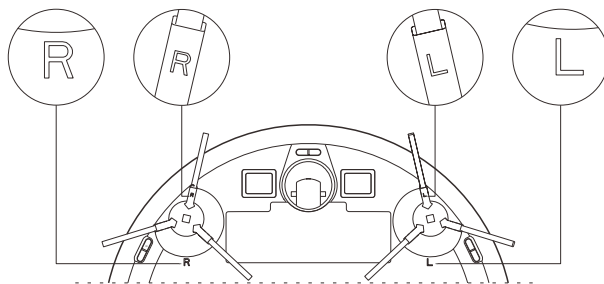

Installation

5、 Starting up and charging

 Long press  to switch on the robot. Charge the robot on charging base when the power indicator light is normally on

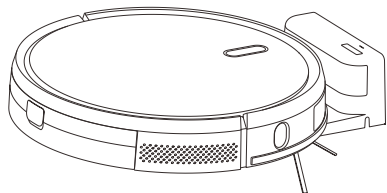


Note : If the machine cannot be started due to low battery, please charge the host on the charging base and the machine will be started automatically. The machine can work normally only when the battery level is $\geq 20\%$

6、 Connect mobile APP(this step can be skipped)

Please refer to WiFi connection guideline, then connect mobile APP

7、 Start cleaning

 
After the robot is powered on, short press key  on the robot or use mobile APP to start cleaning.(press any button to pause during using)

Note:


- The sweeping robot cannot be used to remove liquids
- If the battery level is less than 20, the machine cannot work. Please charge it
- The machine will return to the charging base automatically if the battery level is less than 20%
- Please clear various wires (including power line of charging base) on the ground before use so as to avoid outage and damage of objects or wires when wires are dragged by the host

8、 Installation of mopping module


① Installation of mopping cloth: paste the mopping cloth flatly to the bottom of water tank

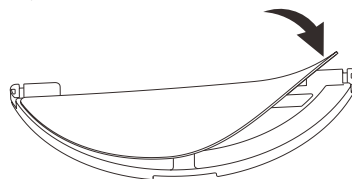

(Hanging permeate type water tank)

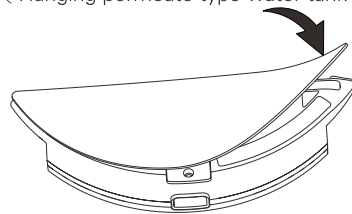 

(Electric-controlled water tank)

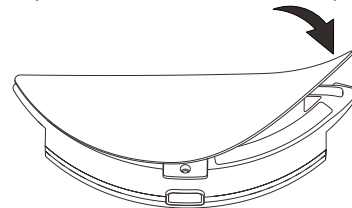 


(2 in 1 electric-controlled water tank)


Note: please clean the mopping cloth after using to keep it in good cleaning condition

Installation

 
② Fill the water tank: uncap the cover and fill with water

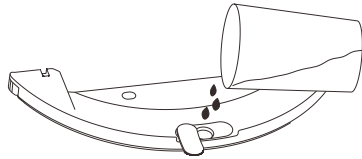

(Hanging permeate type water tank)

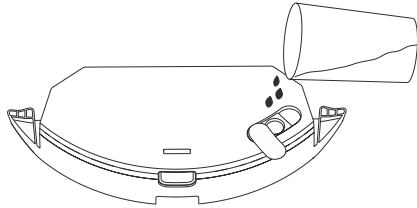 


(Electric-controlled water tank)

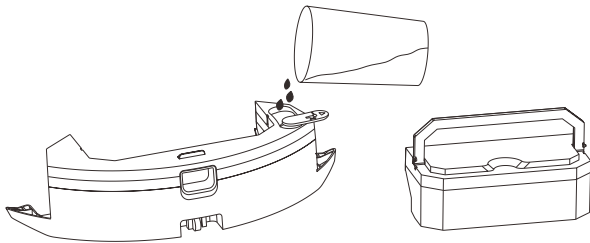 


(2 in 1 electric-controlled water tank)

please take out the dustbin by handle before fill with water

 ③ Intall the module: Push the module horizontally along the rear part of the robot. The module is installed in place if you hear a "click" sound

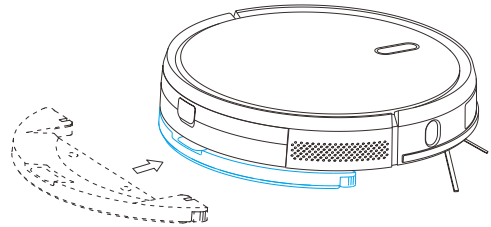


(Hanging permeate type water tank)

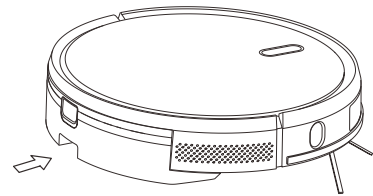 


(Electric-controlled water tank)

 Installation

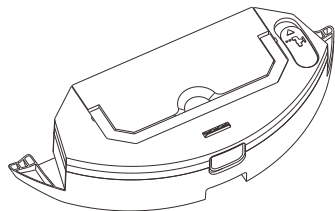

 Please put the dustbin into the water tank and put the handle in the slot

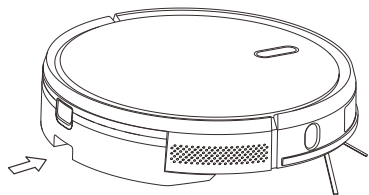


(2 in 1 electric-controlled water tank)

Press and hold the button in the middle of the tank and push it horizontally along the rear of the robot. The module is installed in place if you hear the sound of "click"


9、 Remove the mopping module

 When the robot is finished working, press the clasp on both sides, remove the mopping module backwards, empty the water in water tank, and clean the mopping cloth (do not move or turn the robot over during cleaning)

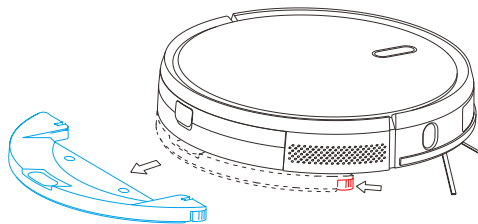

(Hanging permeate type water tank)

 
When the robot is finished working, press the button in the middle of the water tank to remove the mopping module backwards, empty the water in the water tank and clean the mopping cloth (do not move or turn the robot over during cleaning)

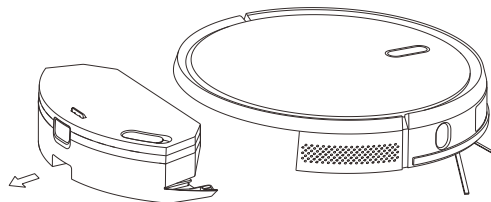

(Electric-controlled water tank)

Installation

 When the robot is finished working, press the button in the middle of the water tank to remove the mopping module backwards, empty the water in the water tank and clean the mopping cloth (do not move or turn the robot over during cleaning)

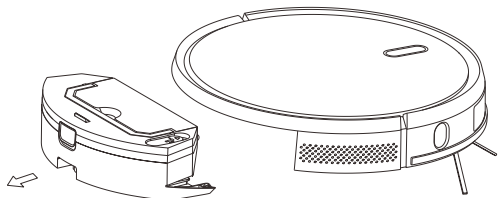

(2 in 1 electric-controlled water tank)


10、Instructions for mopping module

- ①Please do not use the mopping module when it is left unused
- ②For the sake of safety, please be sure to remove the mopping module when it is being charged or left unused
- ③Please do not mop the carpet.
- ④To achieve a better mopping effect, the mopping module should be installed after the floor is swept for three times
- ⑤To add water or clean the dust cloth when the machine works, please pause it, and take out and reassemble the mopping module according to steps 8 and 9. Please do not move or turn over the host so as to avoid failing in positioning and losing the map
- ⑥Mopping function of the machine is intended for wiping and is conducive to deep cleaning, it cannot remove stubborn stain effectively and replace labor force.

Instructions


ON/OFF

Long press  key for 3s, the indicator light is on and the machine is started

Long press  key for 3s when the machine is under standby mode, the indicator light is off and the machine shuts down

NOTE : The machine cannot shut down when the host is being charged

Sweep/Pause

After the machine is started, short press  key on the host or start the machine using mobile APP

(Press any key to pause in use)


Note :

- The cleaning robot cannot be used to remove liquids
- If the battery level is less than 20, the machine cannot work. Please charge it
- The machine will return to the charging base automatically if the battery level is less than 20%
- Please clear various wires (including power line of charging base) on the ground before use so as to avoid outage and damage of objects or wires when wires are dragged by the robot

Instructions

Charging

 
Automatic mode : The host will return to the charging base automatically after work

Manual mode : Under suspended state, short press  key to start recharging or when the recharging host is charged under the control of mobile APP, The indicator light is under breathing mode when the recharging host is charged

Note : If the host fails to locate the charging base, it will return to the original position automatically. Please put the host back to the charging base manually

Virtual walls


Virtual walls can be set up to isolate areas that do not want to be cleaned (such as bathrooms, kitchens, etc.)

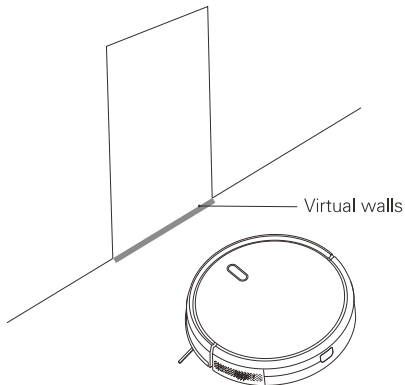

Note : please fix the virtual wall on the ground to prevent it from disengaging, otherwise it will affect the use effect of the virtual wall


Cleaning mode

 
After starting, the machine will follow bow shaped cleaning program to fill up the floor, and finish the cleaning of all room one by one in an orderly, efficient and fully covered manner. The machine will return back to the recharging base and charge automatically after cleaning finished.

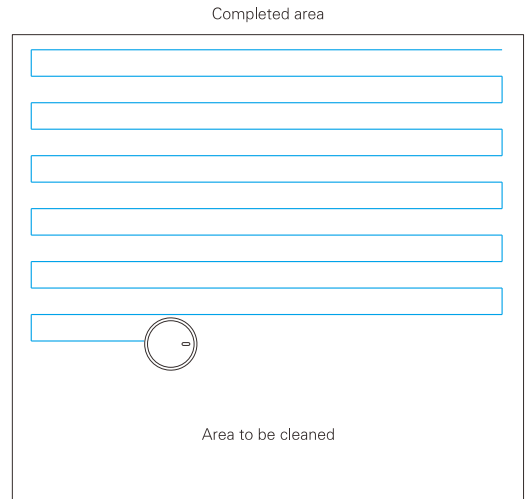

Instructions

 Fixed-point cleaning

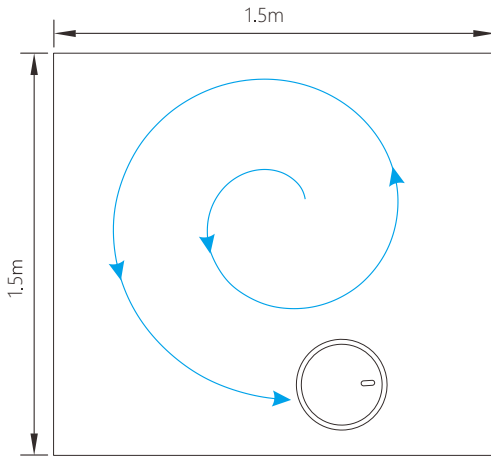

Long press  for 3 seconds, the robot will locating itself, clean the circle area with diameter 1.5m, and the robot will return to the starting location and stop working automatically after cleaning finished.



Fixed-time cleaning

Fixed-time cleaning time can be set using mobile APP. The host will start cleaning automatically at the appointed time and return to the charging base after work

WiFi reset

If the mobile phone cannot be connected to the machine due to modification of router configuration and password or for other reasons, please press  key and  key simultaneously for 3s till a voice prompt "WiFi has been reset" is given and the indicator light turns purple and flickers slowly



Silent mode

You can turn on off the robot voice by mobile APP

Adjustment of suction power

 
You can adjust the suction power to silent level, standard level and high level by mobile APP

Adjustment of water flow (only for electric-controlled water tank)

You can adjust the water flow to low level, standard level and high level by mobile level

Instructions


Remote control instruction

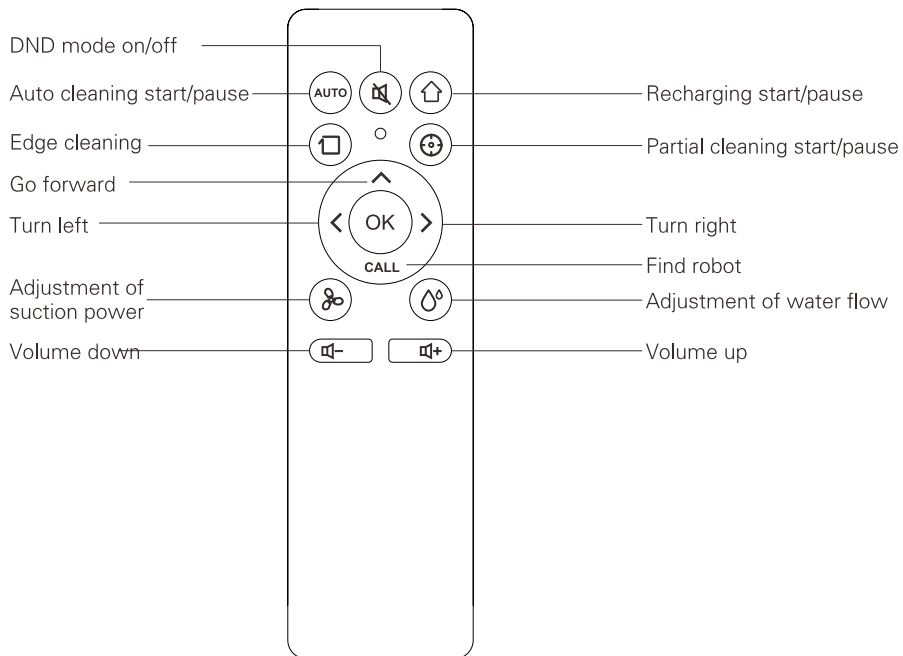

Daily maintenance

Rolling brush (clean it regularly)

 
1. Turn over the machine and press the buckle on the Rolling brush cover to take out the Rolling brush
2. Remove dust outside and inside the Rolling brush using tiny brush and clean the Rolling brush
3. Reassemble the Rolling brush and press the Rolling brush cover tightly to fix the buckle

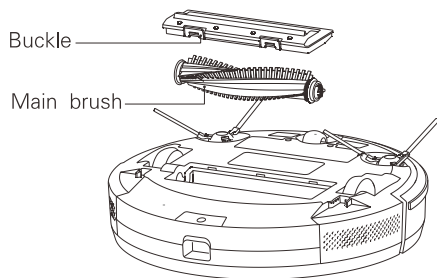

Side brush (clean it regularly)

1. Turn over the machine and pull out the side brush upwards
2. Remove hair and dirt and reassemble the side brush
3. Make the left side brush (L) and the right side brush (R) correspond to L and R on the bottom casing, press L and R to reinstall them

 
Note : Replace the side brush every 3-6 months so as to ensure the cleaning effect

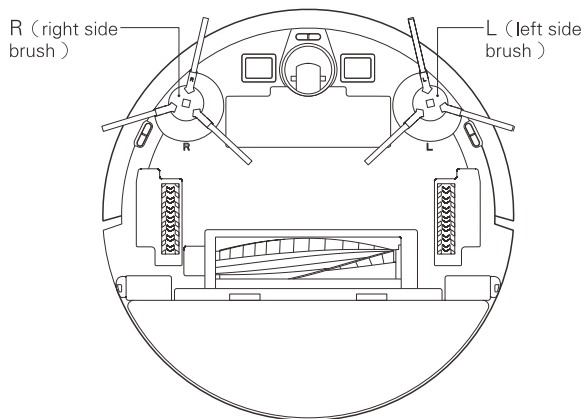


Daily Maintenance

Dust box and filter screen (clean it regularly)

 1. Press the button and pull out the dustbin backward

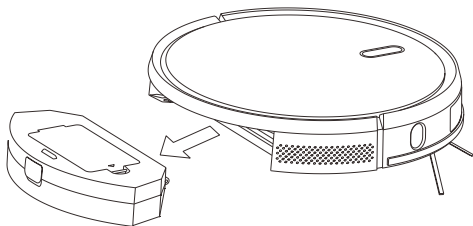


 2. Open and clean dustbin

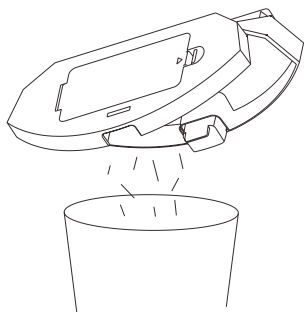

Filter screen cleaning (clean it regularly)

 1. After a long time usage, remove the filter gauze, sponge and HEPA
2. Clean the removed filter gauze, sponge and HEPA under water
3. Shake off the water drops and dry it naturally, then use it after completely dried
4. After dry, install it well in sequence, filter gauze - sponge - HEPA

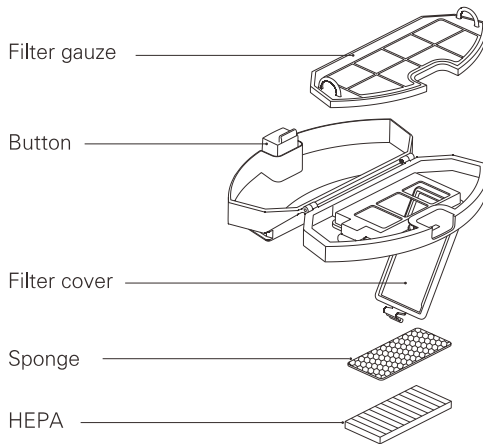


Note :

- Please wash the filter screen using clear water and do not add any detergent
- Please do not clean the filter screen using brush and fingers
- Dry the filter screen in the air for at least 24h
- Replace the filter screen every 3-6 months




Daily Maintenance

 Clean filter (clean it regularly)

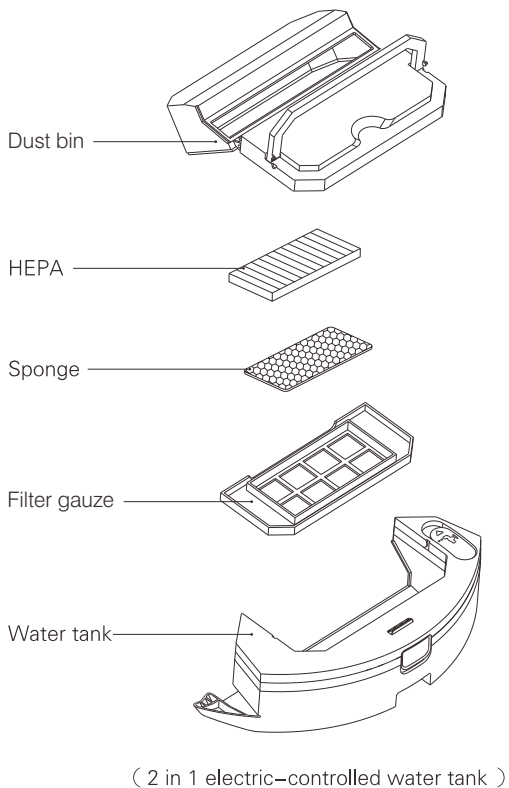




Mopping module (cleaned it every time)

   1. Remove the mop, pure out the water from water tank

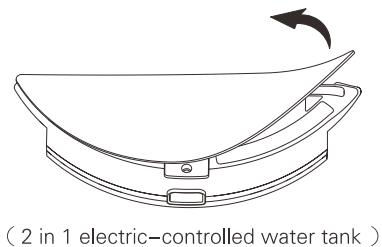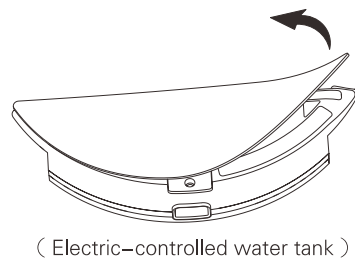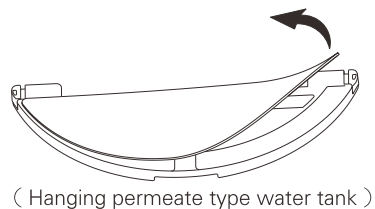


Daily Maintenance

   
2. Clean the mop, dry the water tank and mop

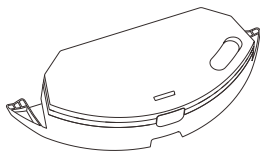


(Electric-controlled water tank)

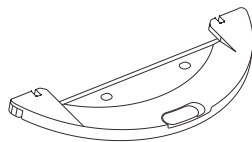 

(Hanging permeate type water tank)

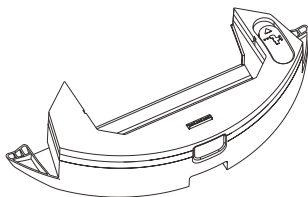 

(2 in 1 electric-controlled water tank)

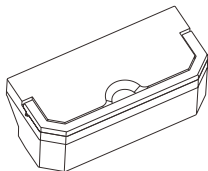 


Pull out the dustbin then pure out the water from water tank

Sensor (clean it regularly)


Clean the sensors by soft mop, include:

 - 1.Clean the sensors along the wall on the right
- 2.Three anti-dropping sensors at the bottom of the host
- 3.Infrared avoidance sensor in the front of the host
- 4.Electric shock protector and charging base shrapnel at the bottom of the host (please cut of the power during cleaning)
- 5.Signal transmission area of charging base

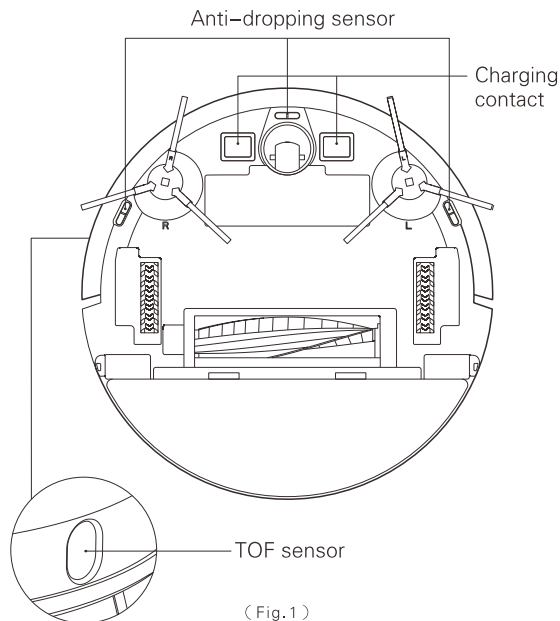


Daily Maintenance

 Sensor (cleaned monthly)

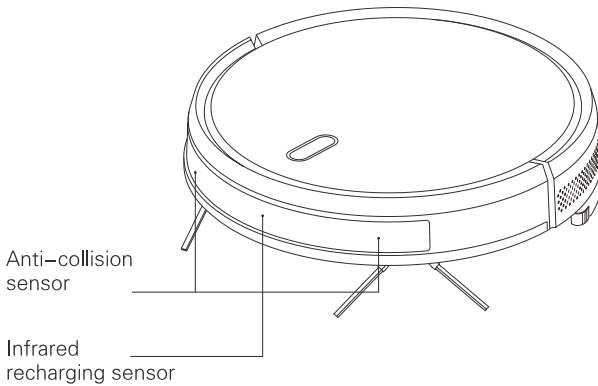

(Fig.2)

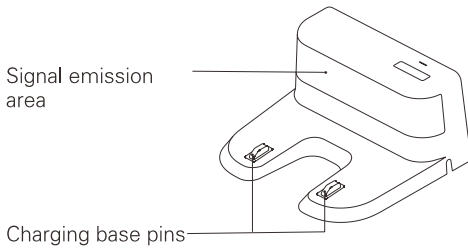 

(Fig.3)

Battery

- The host is furnished with high-performance lithium-ion batteries. To maintain battery performance, please keep the host charged in daily use
- If the machine is left unused long, please shut down and keep it properly. Charge it at least every 3 months to avoid damaging batteries due to excessive discharge

Firmware upgrade

Upgrade firmware using mobile APP. If new firmware is detected, upgrade it according to prompt. The battery level should be $\geq 50\%$ during firmware upgrade, so the machine should be placed on the charging base

Basic Parameters

Machine

Item	Parameter	Parameter
Model	J050	J051
Overall dimension	350X350X80mm	350X350X80mm
Product weight	3.0kg	3.0kg
Li-battery	3200mAh	4800mAh
Rated voltage	14.4V	14.8V
Rated power	25W	25W

Charging base

Item	Parameter
Overall dimension	160X143X80mm
Rated power	24W
Rated output	24W

Common Problems

Problem	Solution
The robot cannot be started	<ul style="list-style-type: none"> • In case of a low battery level, please place the robot on the charging base and align it at the electrode plate, the machine will be started automatically (if the robot is completely powered off, it can be started automatically after charged for a while) • If the environment temperature is lower than 0°C or higher than 50°C, please use it at a temperature of 0-40°C
The robot cannot be charged	<ul style="list-style-type: none"> • Please move the robot away, check whether the indicator light of the charging base lights on and confirm both ends of the power adapter of the charging base are connected well • In case of poor contact, please clear the charging base shrapnel and the charging contact on the robot or push the side brush aside
The robot cannot be recharged	The robot is too far away from the charging base, please put the robot near the charging base and make another try
Abnormal behavior	Shut down and restart the robot
Abnormal noise in use	Main brush, side brush or wheel may be twined by foreign matters, please shut down the robot and remove foreign matters
Cleaning ability declines or dust falls out	<ul style="list-style-type: none"> • The dust box is full, please clear it • The filter screen is blocked, please clear or replace it • The main brush is twined by foreign matters, please clear it
WiFi cannot be connected	<ul style="list-style-type: none"> • WiFi signal is bad, please ensure is covered by WiFi signal • WiFi is connected abnormally, please reset WiFi, download the latest APP and try to reconnect it • Password is inputted incorrectly • The router is available for 5G frequency band, the cleaning robot is available for 2.4G frequency band only
Fixed-time cleaning fails	In case of a low battery level, fixed-time cleaning can be started only when the battery level is no less than 30%
Whether the robot consumes power if it is always placed on the charging base	The robot consumes a little power if it is always placed on the charging base and it enables the best performance of battery
Whether the robot needs to be charged for 16h for the first three times	The lithium battery can be used immediately after being charged and has no memory effect

Troubleshooting

Prompt Tone	Solution
Error 1: Oh dear! I cannot find the dust collector	Cleaning is triggered when the dust box is take out
Error 2: Please check if the radar on top has been covered or blocked	The top radar is covered or placed in an open area (there is not obstacle within an area of 6×6m2)
Error 3: Please place me in a new location and try again	Pick the robot up or hang it in the air
Error 4: Please scrub the cliff sensor, and restart me from a new location	The cliff sensor is covered or placed at height
Error 5: Please scrub the front sensor, and restart me from a new location	The infrared avoidance sensor is dirty or covered
Error 6: Please scrub the right-hand sensor, and restart me from a new location	The wall sensor is dirty or covered
Error 7: Please scrub the radar housing on top, and restart me from a new location	The radar avoidance sensor is dirty or covered
Error 8: Please check if the bumper has been blocked in some way	The edge or collision sensor is stuck
Error 9: Master, please clean the dust container and filter	The dust box is full or the filter screen needs to be replaced
Error 10: Dust container has been removed, please clean the container and filter	After error 9 is issued, user takes out the duct chamber and error 10 is triggered
Error 11: I'm stuck, please help me!	The robot is stuck

Troubleshooting

Prompt Tone	Solution
Error 12: Please place me correctly!	The robot is tilt
Error 13: Please check if my wheels have become blocked somewhere	The driving wheel is stuck or twined
Error 14: Please check if the main brush has become stuck	The main brush is twined or stuck
Error 15: Please check if the side brushes have become stuck	The side brush is twined or stuck
Error 16: What's going on? Where is the docking station?	The charging base cannot out found or is not plugged in
Error 17: Oh dear! Program error, please restart me	Abnormalities are caused by unknown breakdown, restart the robot
Error 18: Error encountered initiating shutdown	The robot reminds the user and shuts down automatically or is recharged
Error 19: Low battery, please recharge	When the battery level is too low and the robot is not on the charging base, cleaning is triggered (the battery level is lower than 10%)
Error 20: To shut me down, please place me away from the docking station	The robot shuts down when charged on the charging base


Content and Name of Hazardous Substances

Hazardous Substance	Part Name					
	Plastic casing	Circuit board	Power line	Battery	Metal part	Adapter
Lead (Pb)	○	×	×	×	○	×
Mercury (Hg)	○	○	○	○	○	○
Cadmium (Cd)	○	○	○	○	○	○
Chromium VI (Cr (VI))	○	○	○	○	○	○
Polybrominated biphenyls (PBB)	○	○	○	○	○	○
Polybrominated diphenyl ethers (PBDE)	○	○	○	○	○	○

Environmental life of components: circuit board components: 10 years; power line: 10 years; battery: 5 years. The environmental life labeled on the product refers to the safe service life of the products in leakage of which hazardous and noxious substances will not be caused under service conditions specified in the User Manual

○ :means that the content of hazardous and noxious substances in the component is less than the limit stipulated by SJ/T11363-2006

× :means that the content of hazardous and noxious substances in at least the component exceeds the limit stipulated by SJ/T11363-2006



Note:

The lead content of a few paste electronic components for special use (such as high voltage resistor, ceramic resistor and diode, etc.) in "X" in the table may be greater than 0.1%. Core of bolt and the lead content of high-performance alloy contained in USB cable also may be greater than 0.1%. Such components comply with exemption clauses of EU ROHS. For technologies and components which cannot be replaced due to restrictions of technological development level, the lead content of external contact elements complies with environmental protection requirements

Safety Information

Usage Limitations

- The product is used for floor cleaning in a home environment only and cannot be used for outdoor (such as open terrace), non-ground (such as sofa) and commercial or industrial environment
- Please do not use the product in midair areas (such as penthouse, open terrace and furniture top) without protective fence
- Please do not use the product at a temperature of above 40°C or below 0°C or when there are liquids and sticky substances on the ground
- Please hang cables on the ground before use so as to avoid being dragged by the host
- Please clear fragile objects and impurities (such as vase and plastic bag, etc.) on the ground so as to avoid damaging valuables when the host is stuck or impacted slightly
- People with physical, spiritual or perceptual disorder (including children) are not allowed to use or operate the product
- Children cannot use the product as a toy. Please keep children and pets away when the host is working
- Please keep main brush and other cleaning tools out of reach of children
- Please do not place objects (including children and pets) on a stationary or moving machine.
- Please keep hair, fingers and other parts of human body or pets away from the suction inlet when the machine is works
- Please do not use the product to sweep burning objects (such as burning cigarette end)
- Please do not use the product to clean long-haired carpet (some dark carpets may not be cleaned normally)
- Please prevent the host from suctioning hard or sharp objects (such as waste decorative materials, glass and iron nail, etc.)
- Please do not move the machine by holding the protective cover of laser distance sensor and collision bumper
- Please clean or maintain the host and the charging base under shutdown or power-off state
- Please do not wipe any part of the product using wet cloth or any liquid
- Please use the product according to User Manual. User should be responsible for any damages and injuries caused by improper use
- Please do not use mopping function for carpet and furniture top
- Please be sure to remove the water tank when the machine is being charged.

Safety Information

Battery and Charging

- Please do not use battery, charging base or charger provided by any third parties
- Please do not dismantle, report or refit battery or charging base arbitrarily
- Please keep the charging base away from heat source (such as heating plate)
- Please do not wipe or clean the charging base shrapnel using wet cloth or wet hand
- Please do not abandon used batteries arbitrarily. Used batteries should be disposed of by professional recycling agency
- If power line is damaged or broken, please disuse it immediately and replace it through official channels
- Please ensure the host shuts down during transportation and the product should be transported in original packaging
- If the machine is left unused long, it should be fully charged and then placed in a cool and dry place. Charge the machine at least every 3 months so as to avoid damaging batteries due to excessive discharge

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Warranty Policy

Warranty Period

1. If the product has any performance failures set out in Product Performance Failure Table of Smart Robot Vacuum Cleaner within 7 days as of the date received and upon detection of Intelligent After-sales Center, free changing or refunding service will be provided.
2. If the product has any performance failures set out in Product Performance Failure Table of Smart Robot Vacuum Cleaner within 8-15 days as of the date received and upon detection of Intelligent After-sales Center, free changing or maintenance service will be provided.
3. If the product has any performance failures set out in Product Performance Failure Table of Smart Robot Vacuum Cleaner within 12 months as of the date received and upon detection of Intelligent After-sales Center, free maintenance service will be provided.

Friendly reminder: To guarantee safety of packaging box during transportation, packing box should be reserved for at least 30day as of the date received

Warranty content

Name	Content	Warranty Period
Host	Host (including built-in lithium battery)	1year
Accessories	Charging base, power line and water tank	1year
Consumables	Main brush, side brush, main brush cover, filter screen, main brush cleaning tool, duster cloth and dust box	/

Note: Warranty service will not be provided for consumables attached to the machine

Warranty Policy

Non-warranty Clause

1. Unauthorized maintenance, misuse, collision, negligence, abuse, penetration of liquid , accident, alteration and incorrect use of other accessories, or tearing up, altering label and false proof mark
2. The validity period of “three guarantees” expires
3. Damages caused by force majeure
4. Other failures than performance failures set out in Product Performance Failure Table of Smart Robot Vacuum Cleaner
5. Man-made performance failures of the product and accessories set out in Product Performance Failure Table of Smart Robot Vacuum Cleaner

Performance Failure Table of Wangjia Smart Robot Vacuum Cleaner

Name	Performance failure
Host	Functions set out in the Specification are invalid
	The host cannot be started
	The main brush, side brushes, draught fan and main wheel do not work
Adapter	The charging base cannot be powered on
Charging base	The host cannot be powered on

Three Guarantees

User Information

Name: _____

Tel : _____

Add : _____

e-mail : _____

Product Information

Model : _____

Color : _____

Serial No. : _____

Order date : _____

Maintenance Record

No.	Date	Fault Phenomenon and Elimination Method	Engineer
1			
2			
3			
4			

Experience Intelligent Technology and Enjoy a High-quality Life