无线鼠标说明书尺寸:长105mmX宽72mm 注:单色印刷;材质:128克铜版纸;三折四面(如图右所示)

2.4G WIRELESS KEYBOARD


cimetech

Keyboard features

2. Decrease volume

3. Increase volume

1. Music player

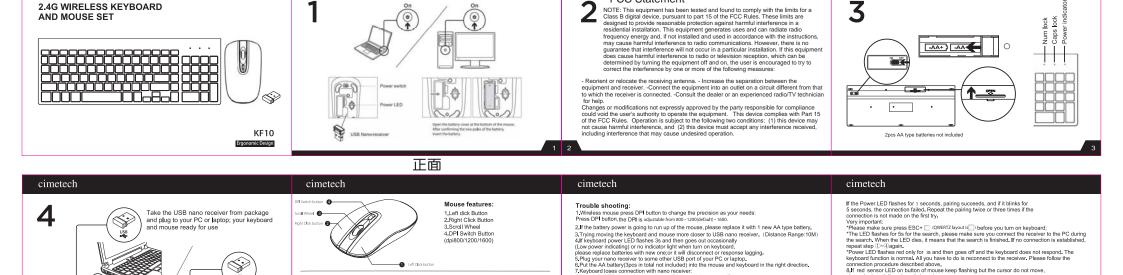

cimetech

FCC Statement

7. Keyboard loses connection with nano receiver:

You have 5 seconds toplug andpair the receiver.

① Plug the nano receiver back to the PC or laptop

1) Turn off the keyboard

7. Acypopart loses Confriedron with anno receiver.
If the power LED on the keyboard glows for zs and then goes off, but your keyboard input is not recognized, it means the keyboard's connection to the nano-faceiver has been lost. Please follow the instructions below step by step to reconnect:

Utum off the keyboard
 Z Take the nano receiver out from USB port
 The the nano receiver out from USB port
 Press the ESC + □ ○WERTZ layout ti□ keys at the same time, then slide the switch to the
 New the power LED flashes for 5 seconds (the keyboard is activated).

背面

7. Pause/Play

9. Navigate to internet home

8. Stop

4. Mute volume

5. Previous

3.1×USB nano receiver 4.User manual

What's in hox:

1.1×wireless keyboard

2.1×wireless mouse

please try to pair it again as below steps: D Pull out the receiver
Turn off the mouse

③ Then slide the switch to ON position; mouse is in resourcing status
④ Plug the receiver back to pc or laptop


cimetech

10 Mail

11. Computer

无线鼠标说明书尺寸: 长105mmX宽72mm 注: 单色印刷; 材质: 128克铜版纸; 三折四面(如图右所示)

cimetech

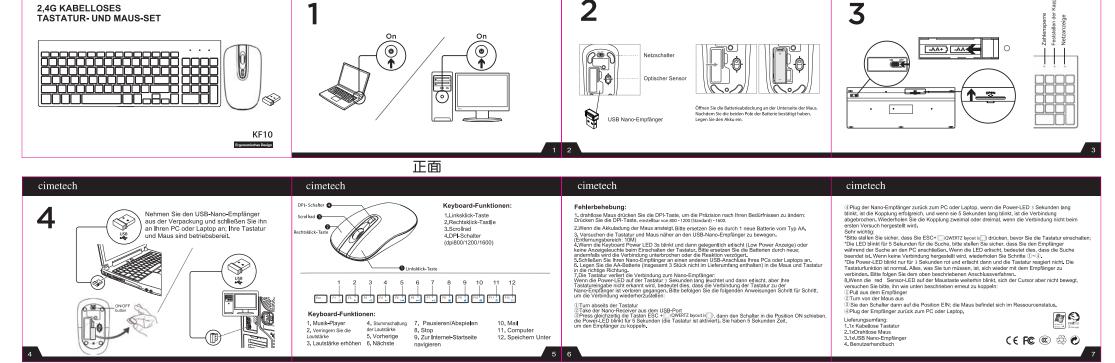

cimetech

cimetech

背面