



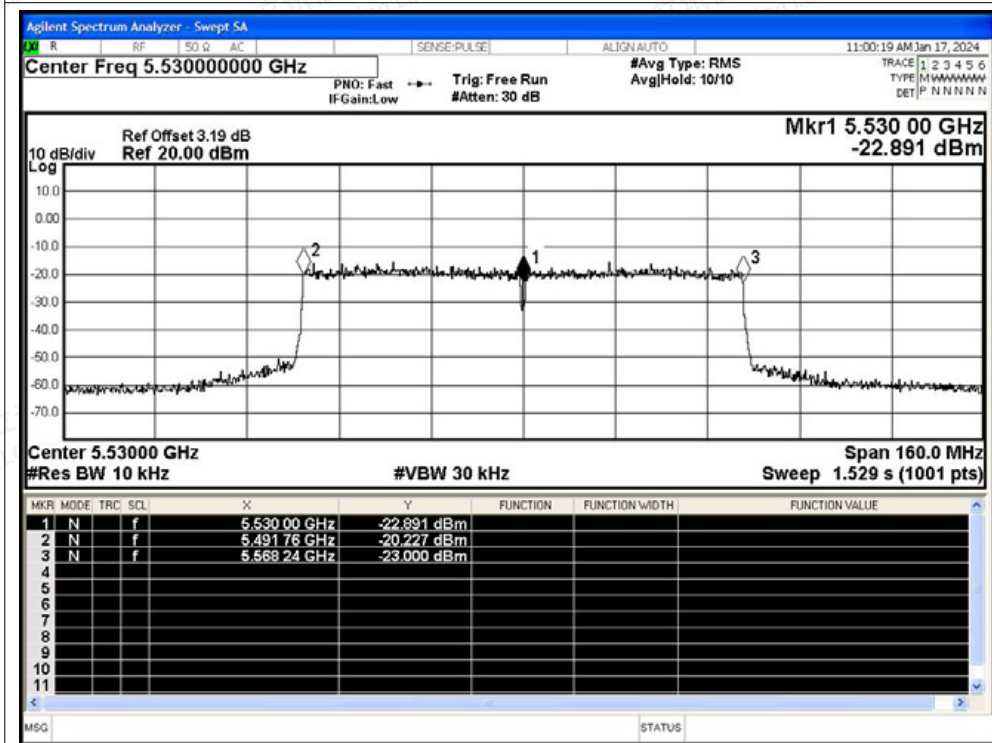

Freq. Stability NVNT ac80 5530MHz Ant1

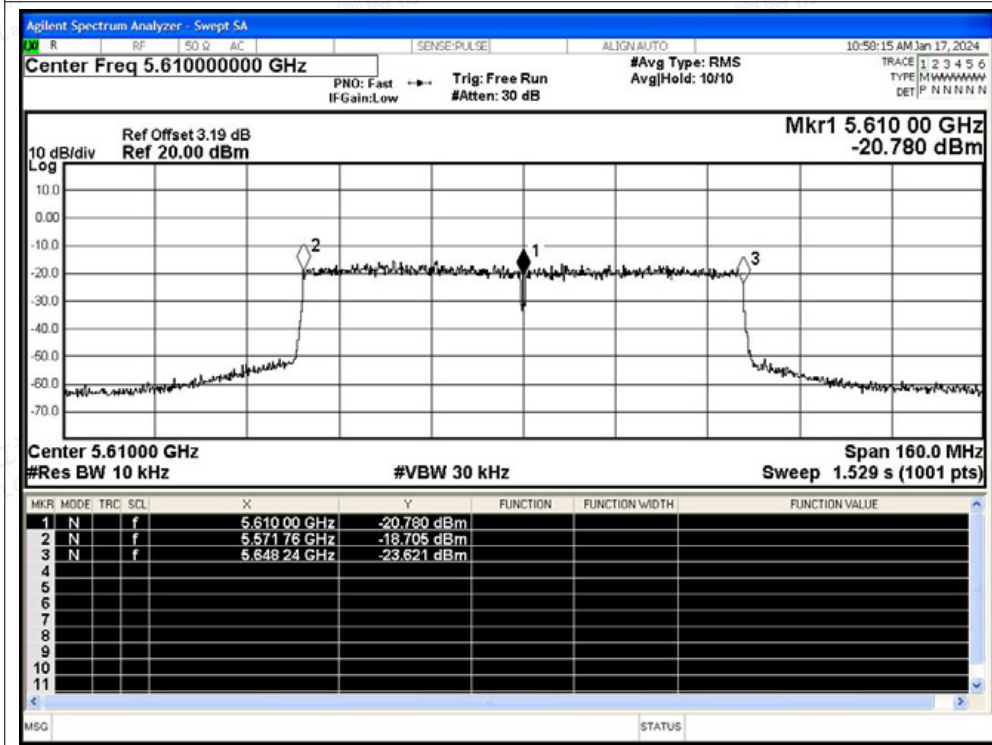

Freq. Stability NVNT ac80 5610MHz Ant1





F.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	Ant1	95.68	0.19	0.72
NVNT	a	5580	Ant1	95.68	0.19	0.72
NVNT	a	5700	Ant1	95.68	0.19	0.72
NVNT	n20	5500	Ant1	94.94	0.23	0.85
NVNT	n20	5580	Ant1	94.94	0.23	0.85
NVNT	n20	5700	Ant1	94.94	0.23	0.85
NVNT	n40	5510	Ant1	90.45	0.44	1.7
NVNT	n40	5550	Ant1	90.6	0.43	1.7
NVNT	n40	5670	Ant1	90.45	0.44	1.7
NVNT	ac20	5500	Ant1	95.04	0.22	0.84
NVNT	ac20	5580	Ant1	95.04	0.22	0.84
NVNT	ac20	5700	Ant1	94.96	0.22	0.84
NVNT	ac40	5510	Ant1	90.41	0.44	1.68
NVNT	ac40	5550	Ant1	90.56	0.43	1.68
NVNT	ac40	5670	Ant1	90.56	0.43	1.68
NVNT	ac80	5530	Ant1	82.68	0.83	3.38
NVNT	ac80	5610	Ant1	82.68	0.83	3.38




Shenzhen LCS Compliance Testing Laboratory Ltd.
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
 Scan code to check authenticity




Test Graphs

Duty Cycle NVNT a 5500MHz Ant1

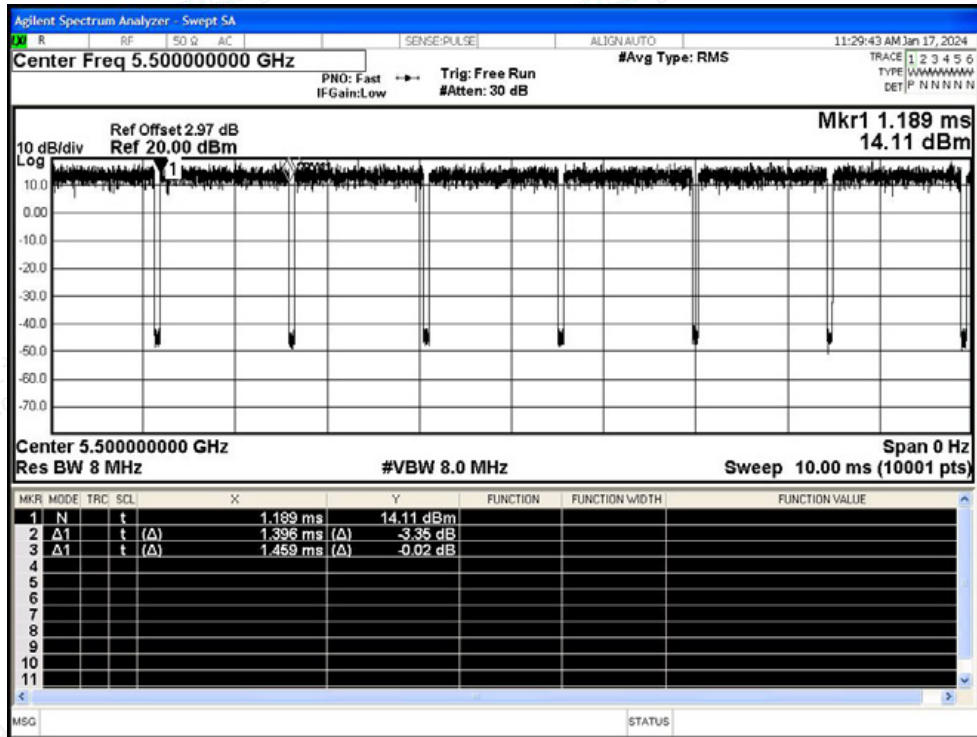


Duty Cycle NVNT a 5580MHz Ant1

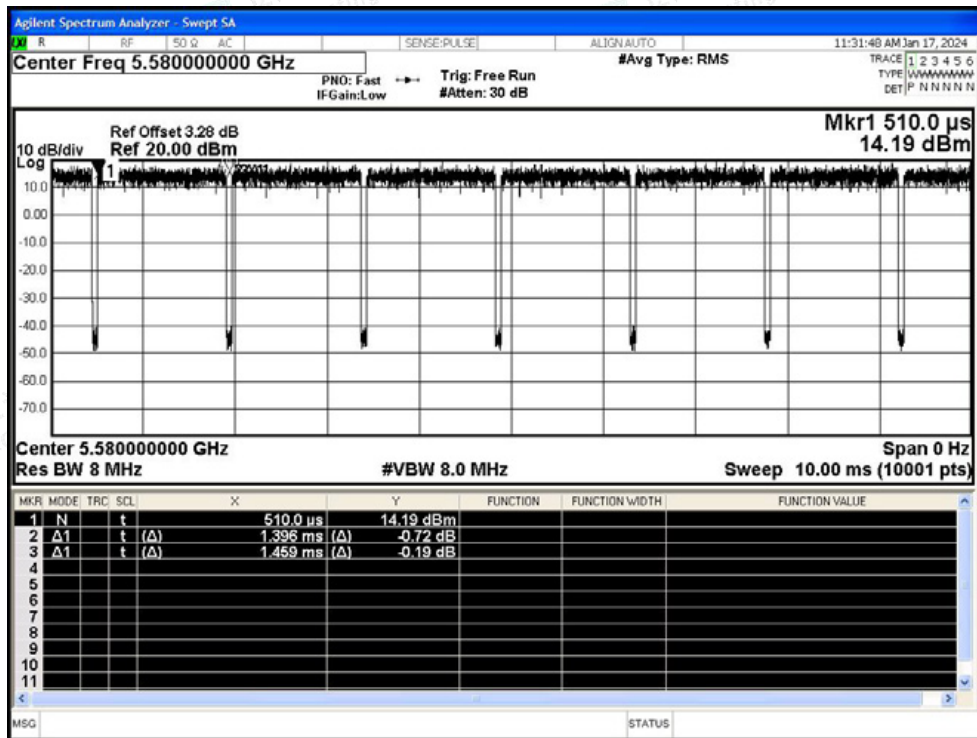




Duty Cycle NVNT a 5700MHz Ant1

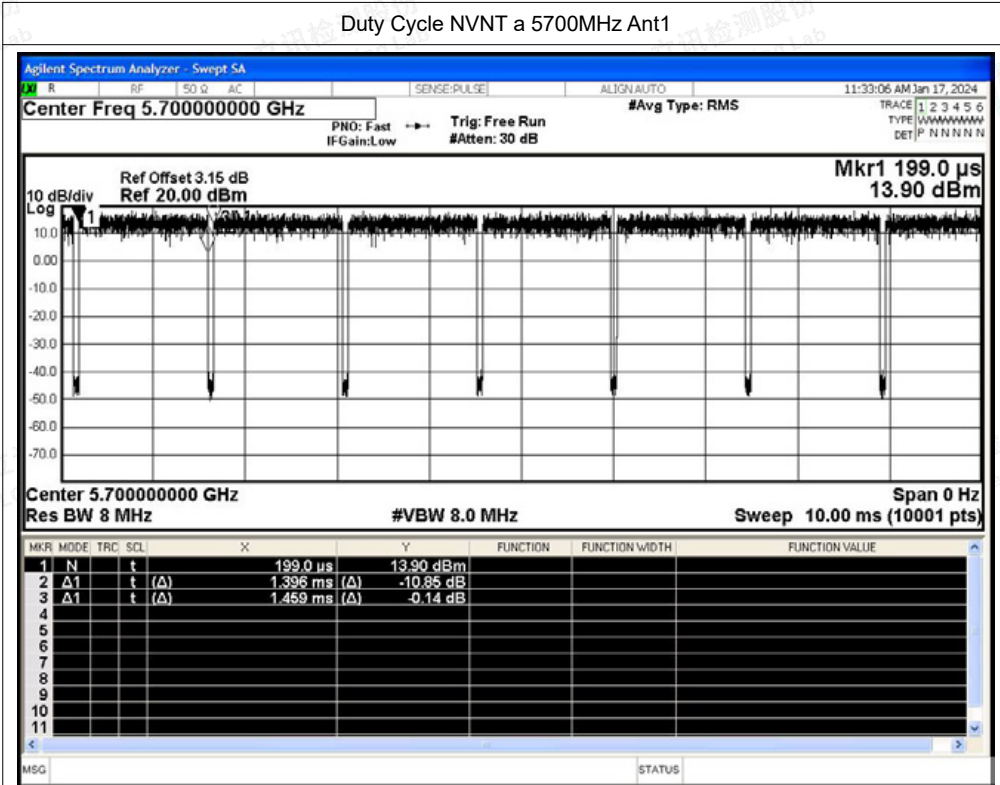


Duty Cycle NVNT n20 5500MHz Ant1

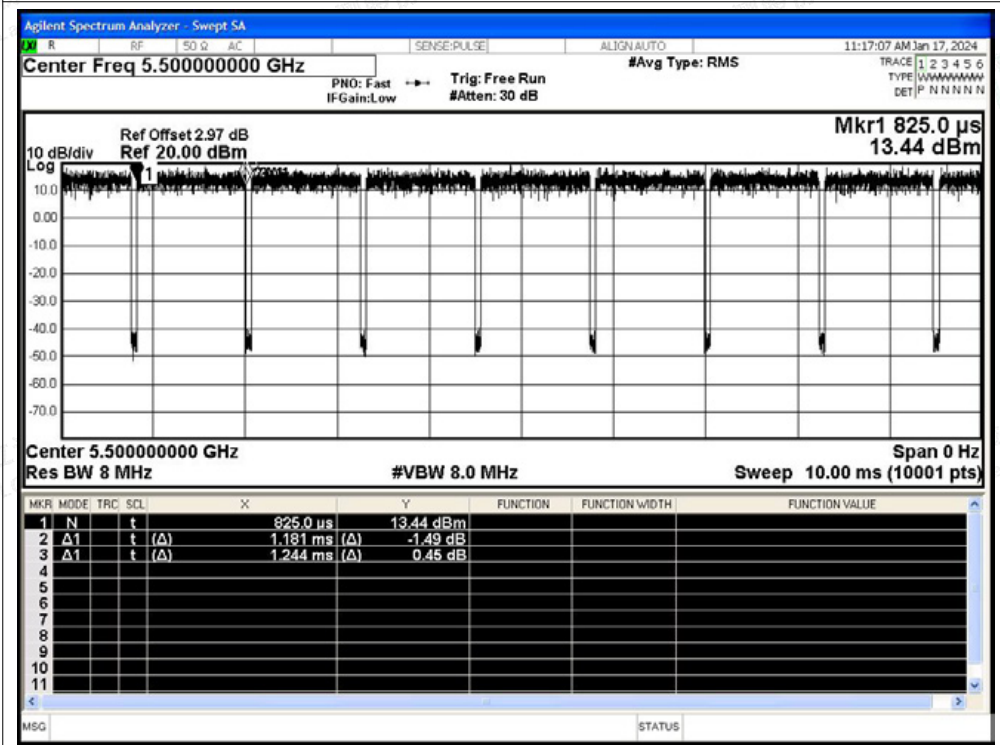




Duty Cycle NVNT n20 5580MHz Ant1

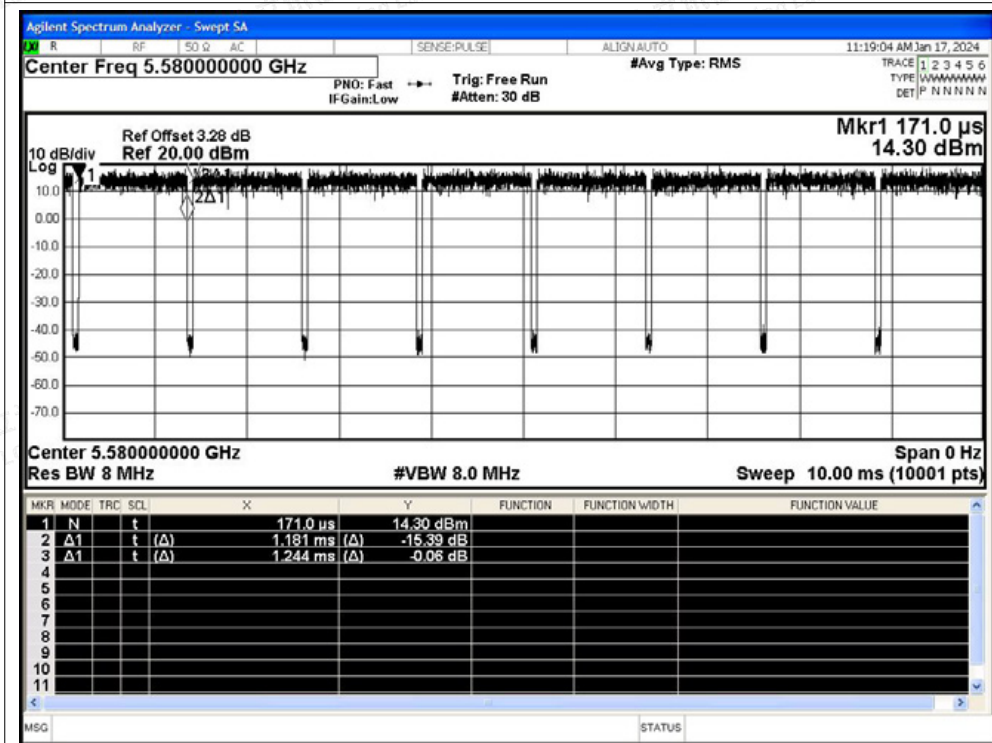


Duty Cycle NVNT n20 5700MHz Ant1

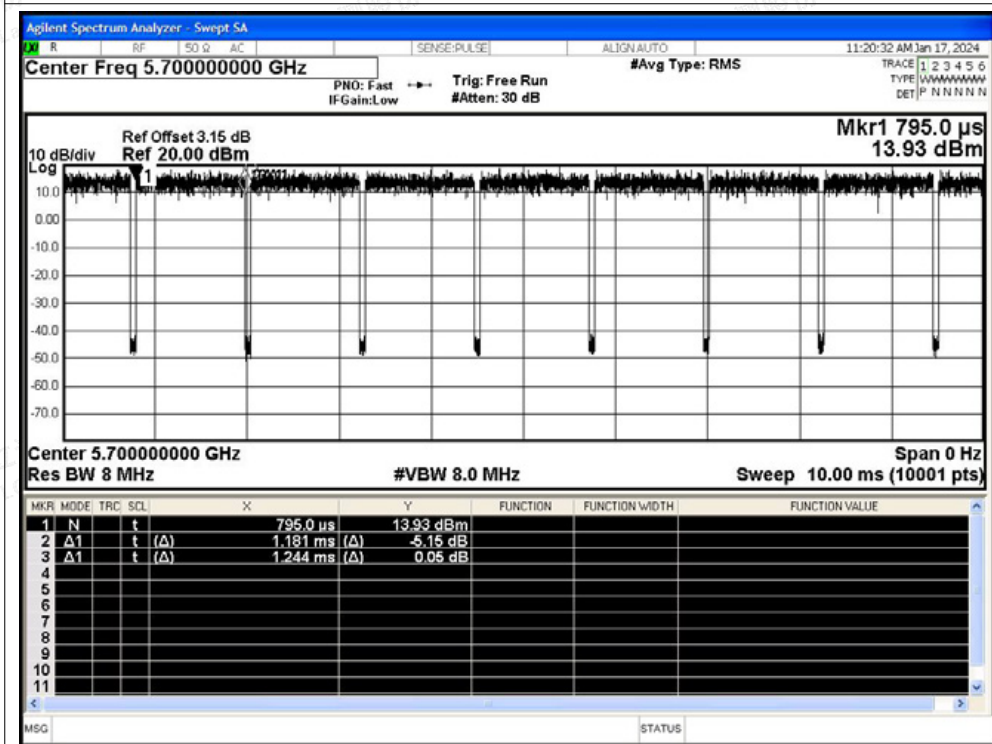




Duty Cycle NVNT n40 5510MHz Ant1

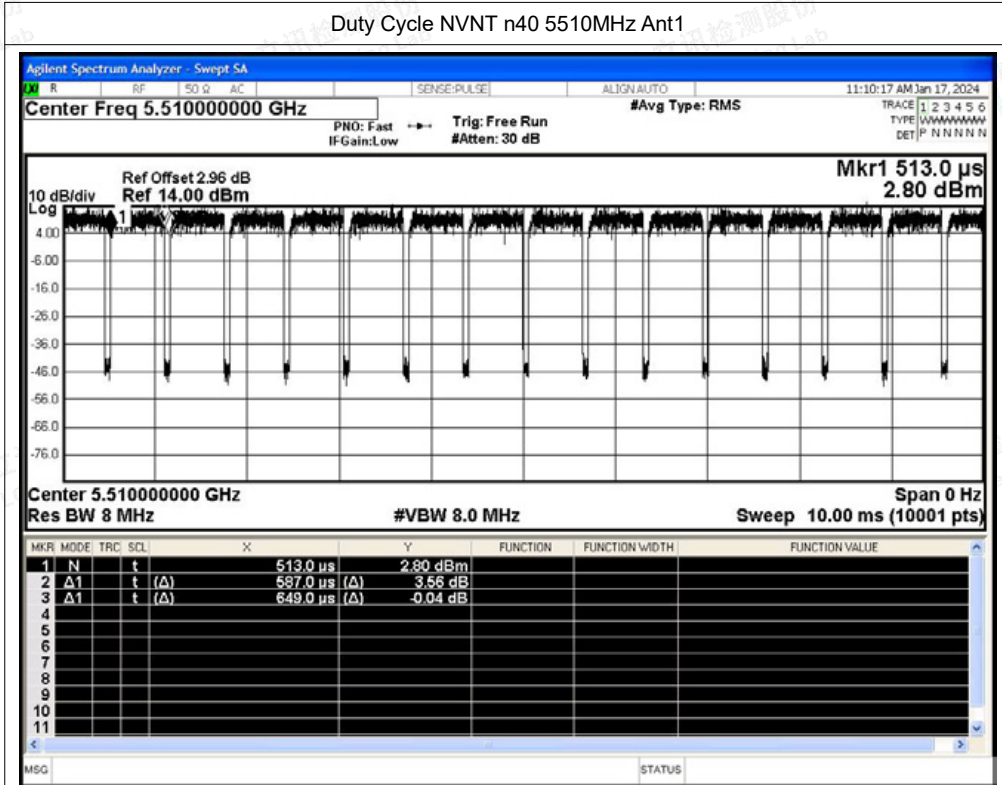


Duty Cycle NVNT n40 5550MHz Ant1

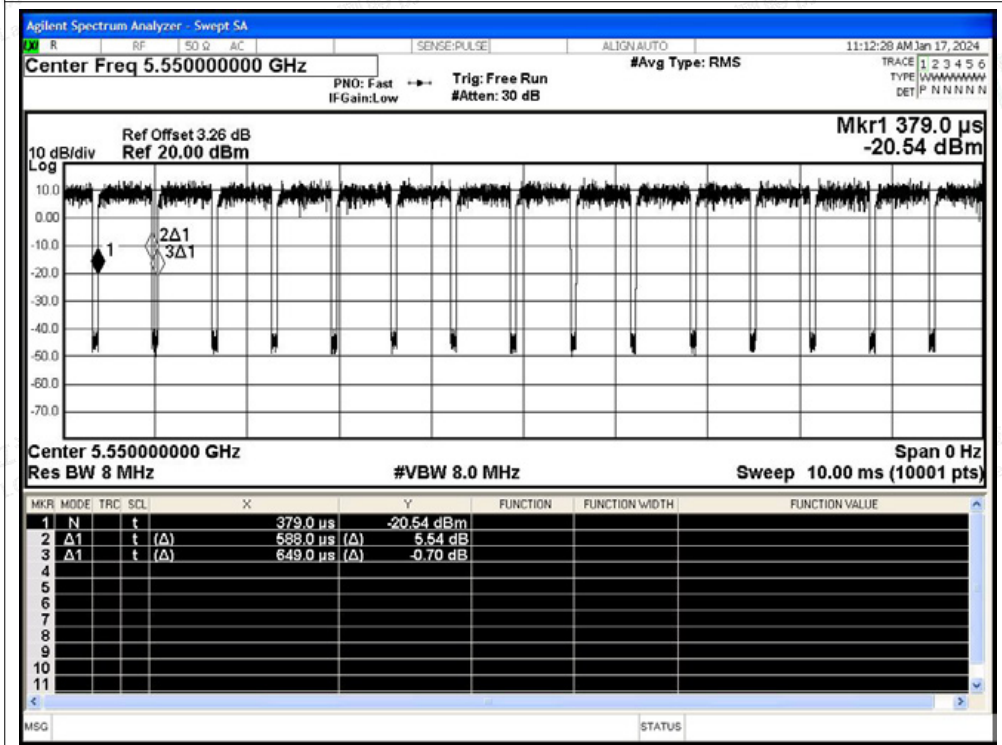




Duty Cycle NVNT n40 5670MHz Ant1

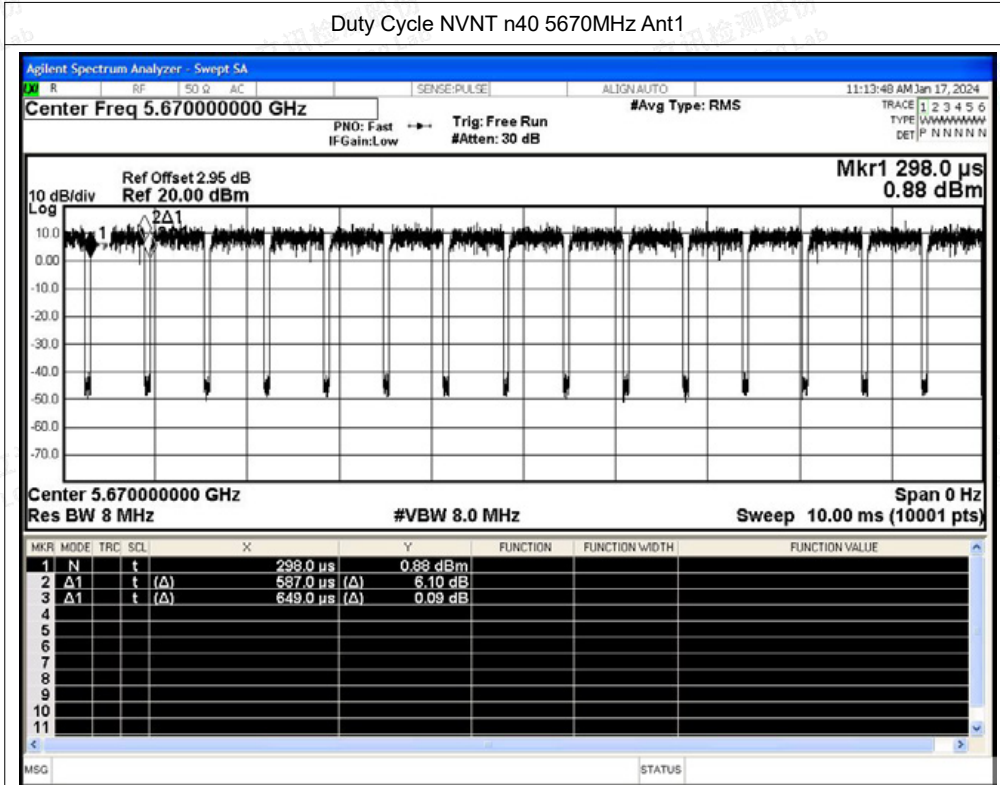


Duty Cycle NVNT ac20 5500MHz Ant1

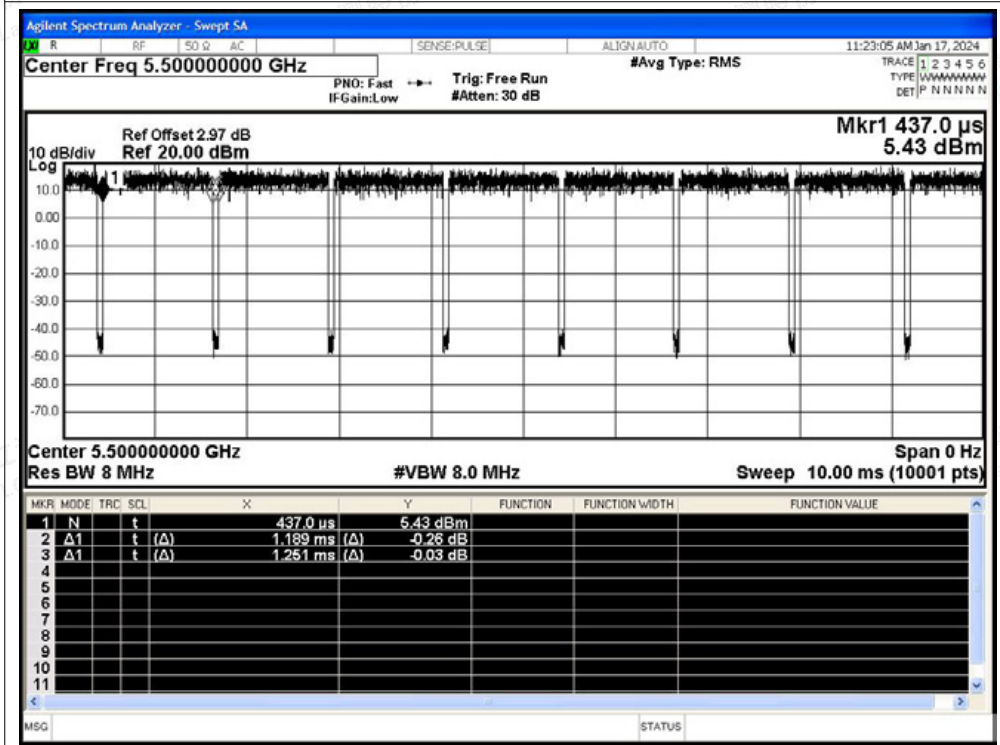




Duty Cycle NVNT ac20 5580MHz Ant1

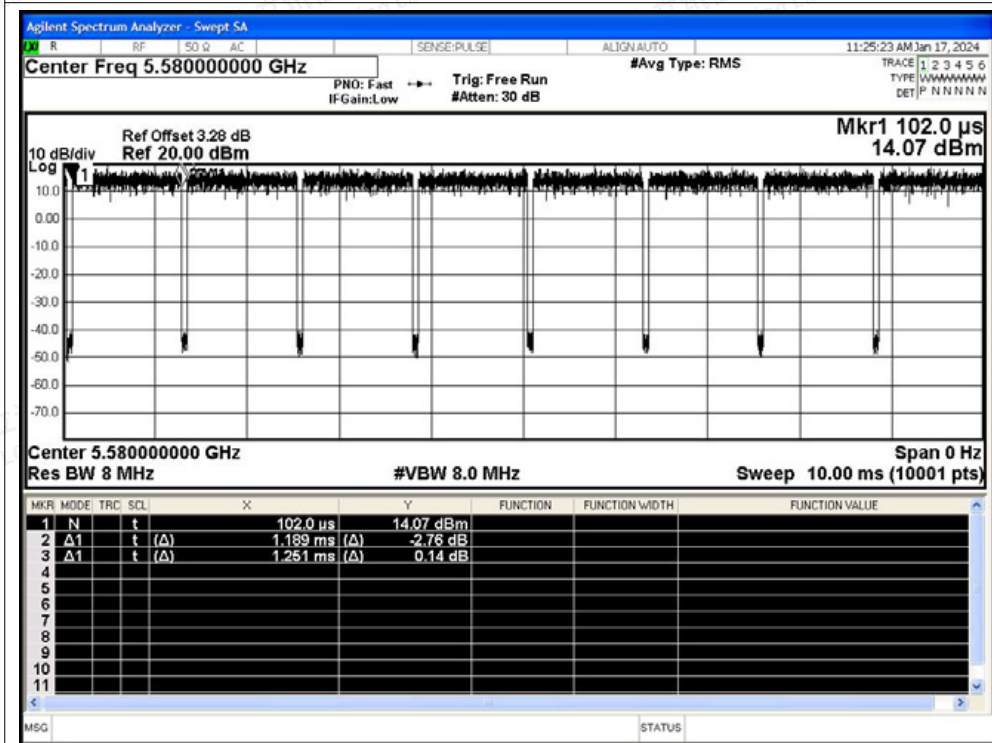


Duty Cycle NVNT ac20 5700MHz Ant1

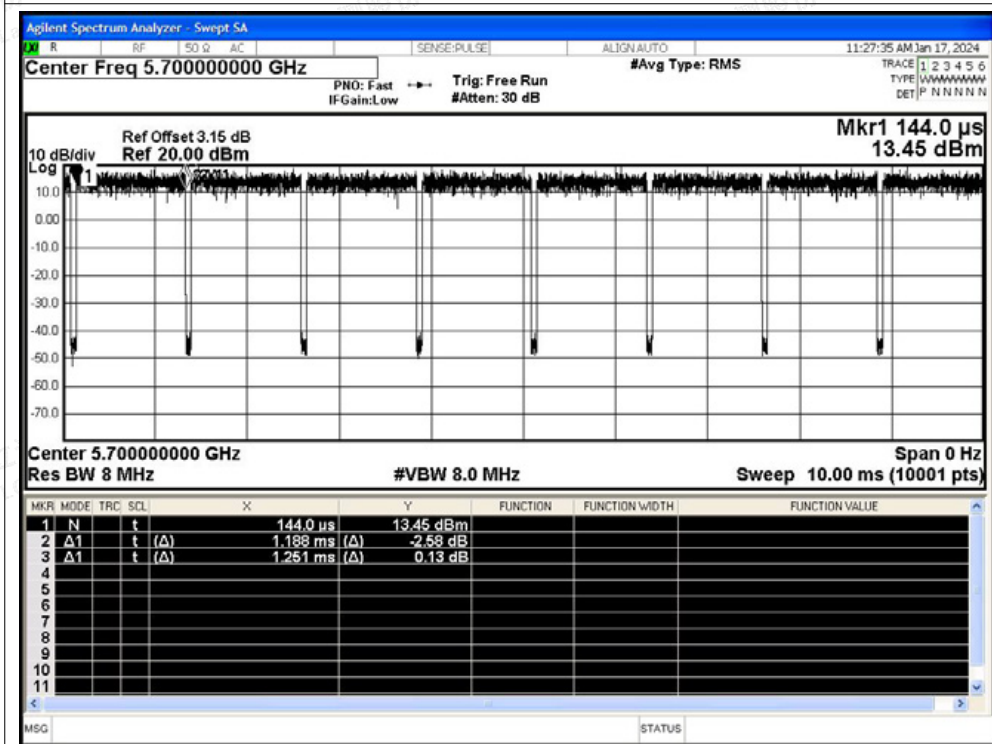




Duty Cycle NVNT ac40 5510MHz Ant1

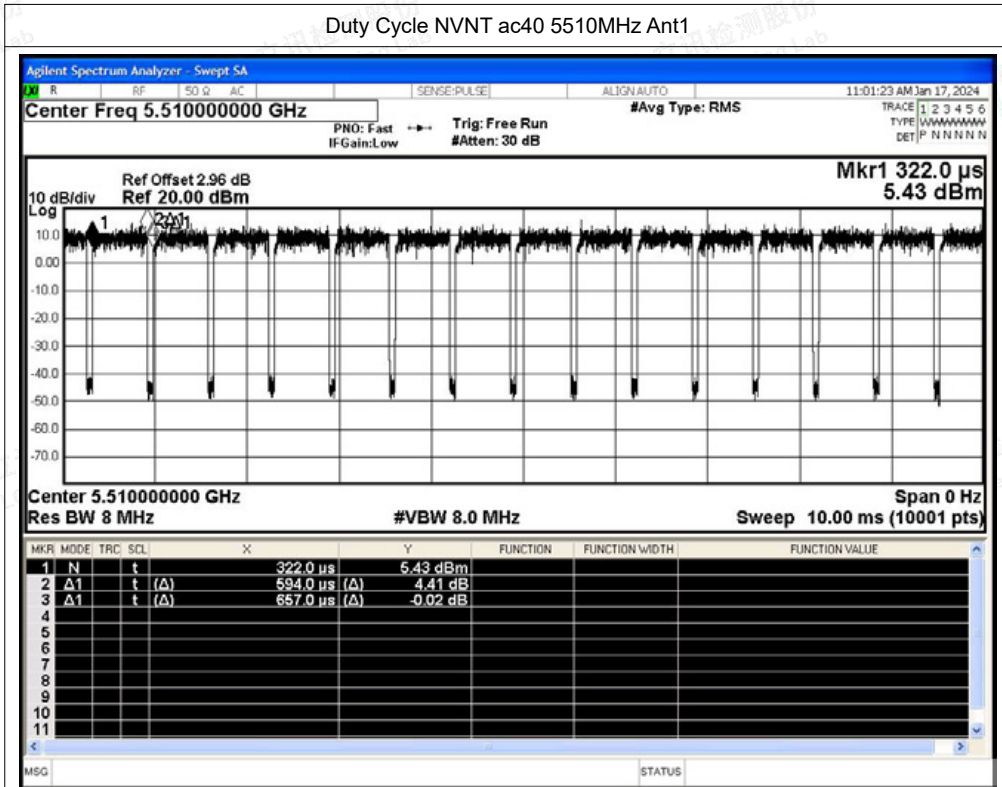


Duty Cycle NVNT ac40 5550MHz Ant1

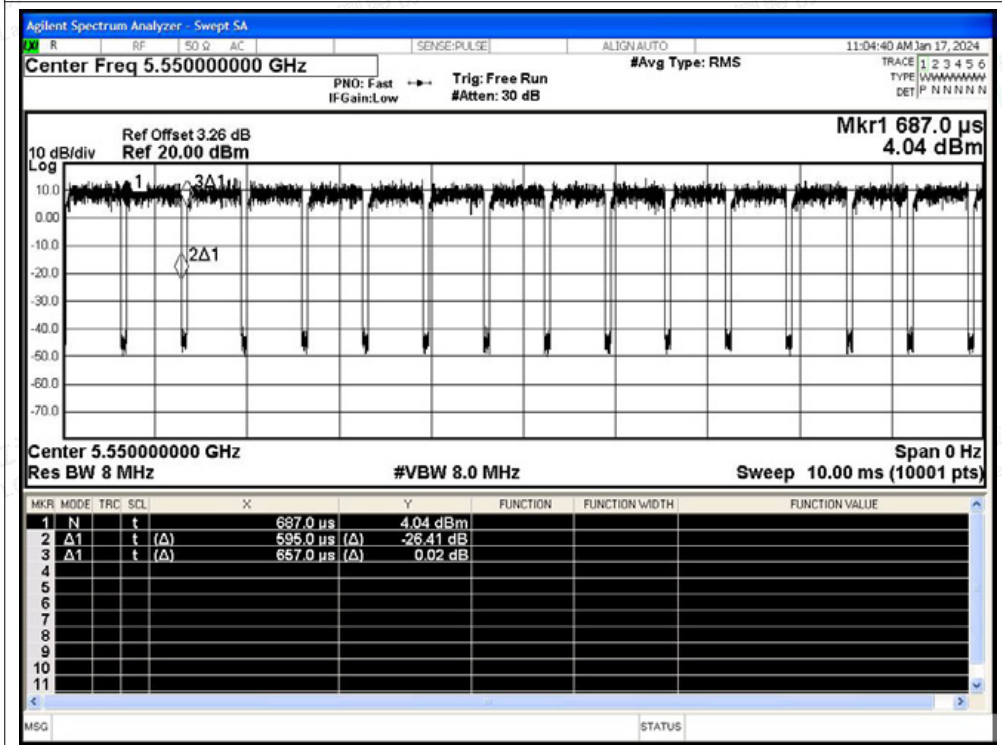




Duty Cycle NVNT ac40 5670MHz Ant1

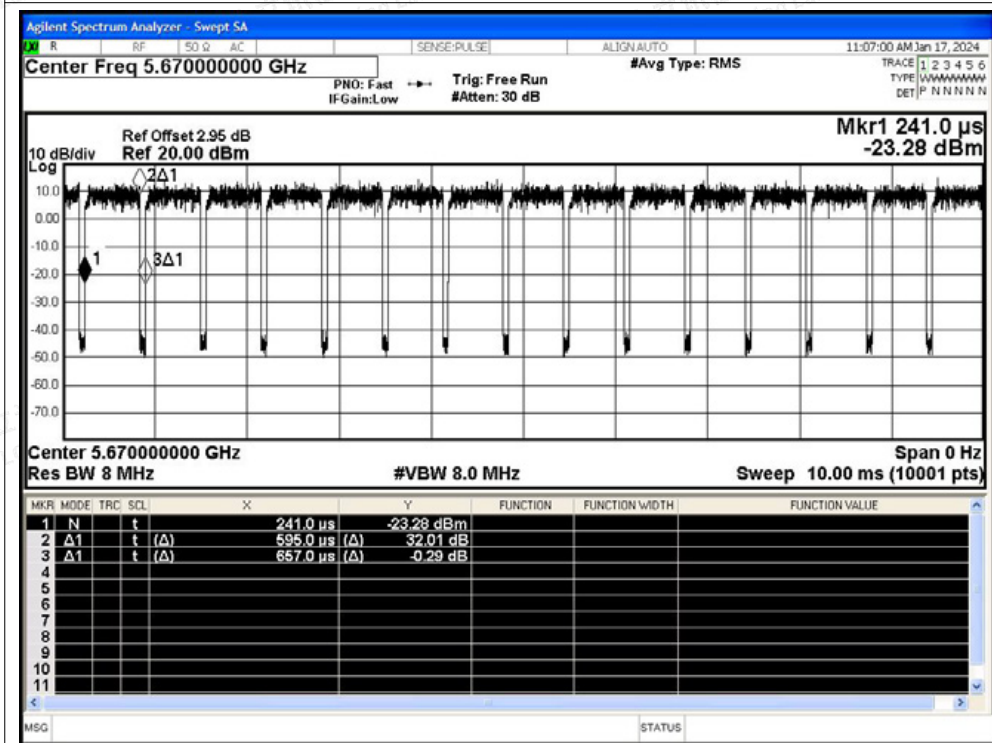

Duty Cycle NVNT ac80 5530MHz Ant1

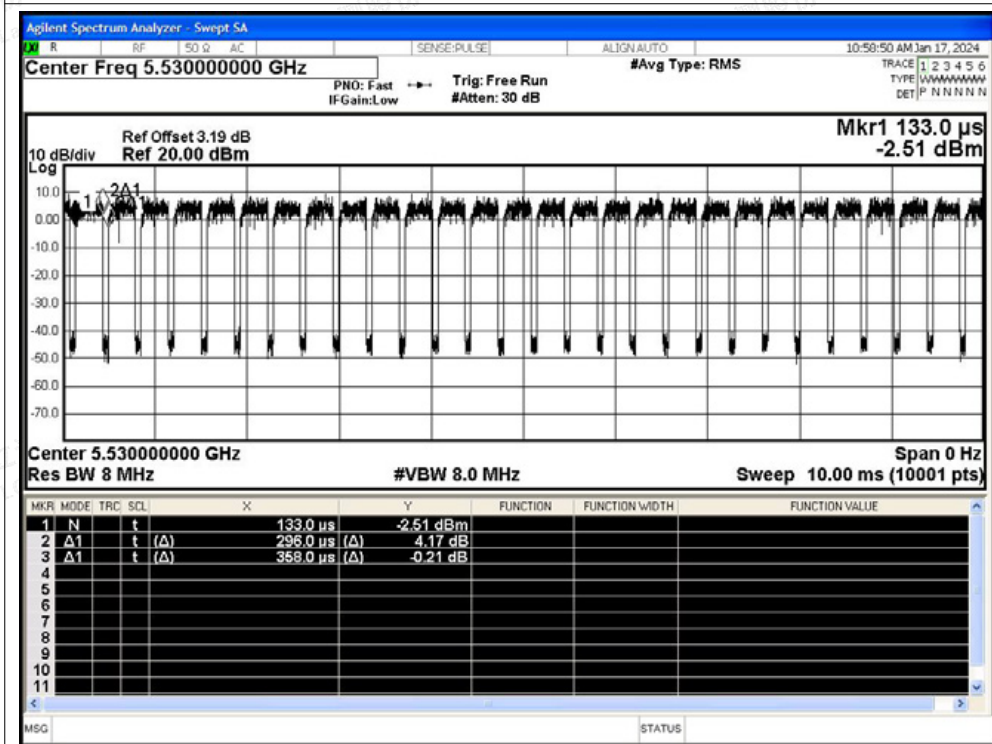



Duty Cycle NVNT ac80 5610MHz Ant1

