




**OnFace**

Your face is the AI key for the future security  
**AI FACE RECOGNITION  
DOORLOCK**

# User Manual

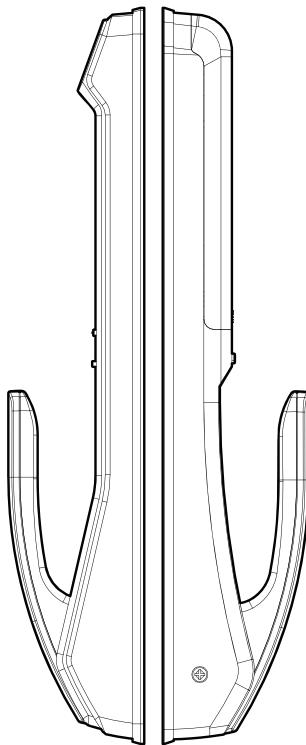

A I - F A C E - R E C O G N I T I O N - D O O R L O C K



**Users need to be familiar with the emergency switchgear.**

\* In order to use this product safely and appropriately, please read carefully the safety precautions before use.



# Contents


## ● Note

|                               |       |    |
|-------------------------------|-------|----|
| Safety Precautions            | ..... | 03 |
| Product Feature               | ..... | 04 |
| Part names and specifications | ..... | 05 |
| Screen layout                 | ..... | 06 |
| Initial setting               | ..... | 06 |

## ● User Manual

|   |       |    |
|---|-------|----|
| User Manual for the Product                 | ..... | 08 |
| - Face Recognition registration             | ..... | 08 |
| - Face Recognition re-registration          | ..... | 08 |
| - Card(RFID) registration                   | ..... | 09 |
| - Card(RFID) re-registration                | ..... | 09 |
| - Palm registration                         | ..... | 10 |
| - Palm re-registration                      | ..... | 10 |
| - Password registration                     | ..... | 11 |
| - Password re-registration                  | ..... | 11 |
| - Delete user                               | ..... | 12 |
| - Language setting                          | ..... | 12 |
| - Reset users                               | ..... | 12 |
| - Opening and Closing the door from outside | ..... | 13 |
| - Opening and Closing the door from inside  | ..... | 14 |
| - Turning off the intrusion alarm           | ..... | 14 |
| - Changing batteries                        | ..... | 15 |
| - Using the external power terminal         | ..... | 16 |

## ● Components

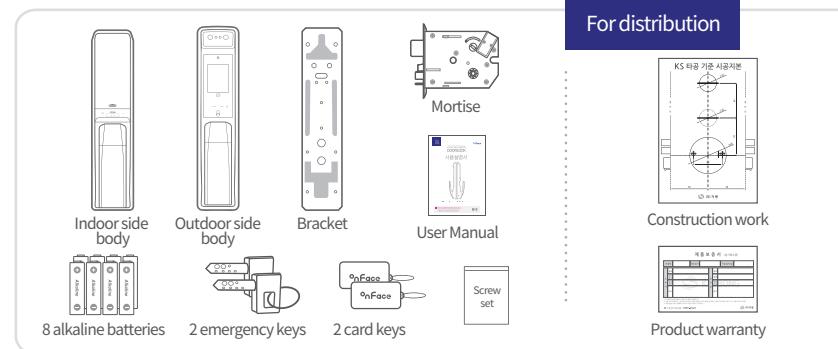

# Safety Precautions

## ⚠ Please read the following carefully for proper use of the product.

※ Failure to follow instructions may result in injury or property damage.




ONFACE D5 face recognition door lock is a high-technology product of which its installation directly affects the proper operation and life of the door lock's use. Therefore, please install it after all the furnishing work is complete.

\*Please install it according to the installation manual with the help of a specialist or the dealer you purchased the product from.


Be careful not to let the product wet. Wipe the product with a dry cloth for cleaning.

**Using the product in a severely condense environment may affect product performance.**

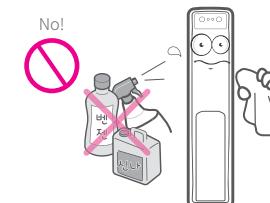

Replace batteries with the same brand's 1.5V alkaline batteries. When using old and new batteries together, do not use them with non-alkaline batteries.

**It may cause product malfunctions.**

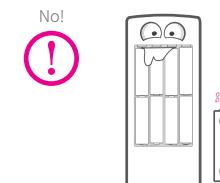


Be careful not to lose the card key or the emergency key and also not to crash them when opening or closing the door.

**Please make sure that the door is properly locked when you exit.**



Do not put unnecessary pressure on the door lock. Also, do not arbitrarily disassemble, repair, or modify the product.

**We charge fees for product failures due to careless uses even during free-of-charge A/S period.**

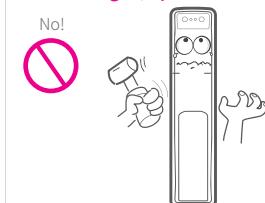

Be sure to set the settings such as face recognition registration, card key deletion, registration, etc. with the door lock open.





## Product features



Face recognition



Up to 100 people can be registered with face and palm registration. (recognition speed less than 1 second, glasses do not interfere with face recognition.)



Day & Night



Recognition feasible in dark environments due to infrared cameras.




Tempering, theft prevention



Biometric technology that prevents opening by phone images or videos.




Durable against electric shock

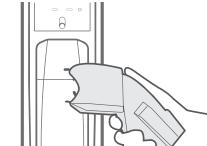

Passed testing for fundamental electric shocks and electrostatic immunity, Durability and fire prevention certified by KC standards.



Intrusion alarm

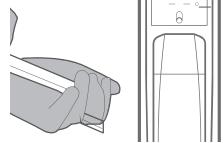


Push-Pull handle



Easy push-pull handles with the SAFETY PANIC feature for interior uses.




Automatic lock rewind

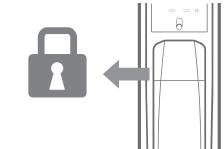

The door lock automatically locks if the door is not closed within 3 or 5 seconds after opening.



Low battery sign

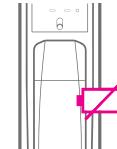


The door lock informs when to change the batteries.

Replace the batteries



## Part names and specifications

### names

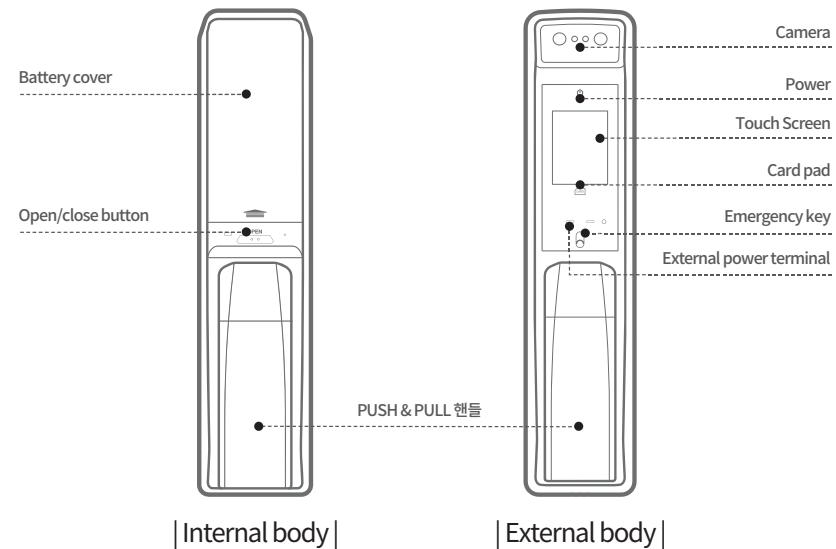

| Internal body |

| External body |


### Product Specifications

|                  |   |
|------------------|---|
| Power            | DC 6V (Alkaline battery 1.5V/ 8EA / AA size)                                  |
| Opening Method   | Face, card key, palm, password  |
| Registrations    | RF card : 100EA / face recog : 100EA / palm recog : 100EA                     |
| Screen           | LCD with touch  |
| Camera           | 1X visible light camera, 1X infrared detection camera                         |
| Face Recognition | Recognition time : ≤0.3 SEC<br>Support mode : 1:N & 1:1                       |
| User Language    | English, Japanese   |
| Temperature      | -10°C ~ 60°C  |
| Size             | External body : 85(W)x367(H)x73(D)mm / Internal body : 84(W)x363.5(H)x69(D)mm |
| Components       | Zinc, Aluminum die casting, ABS, PC   |




## Screen Layout

The screen configuration consists of user, security, environment settings, and product information. Touch the according to move to that menu.

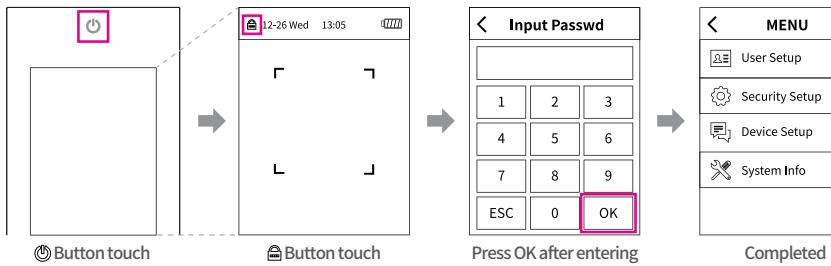

### Reset the master password


Follow the steps to reset the master password.

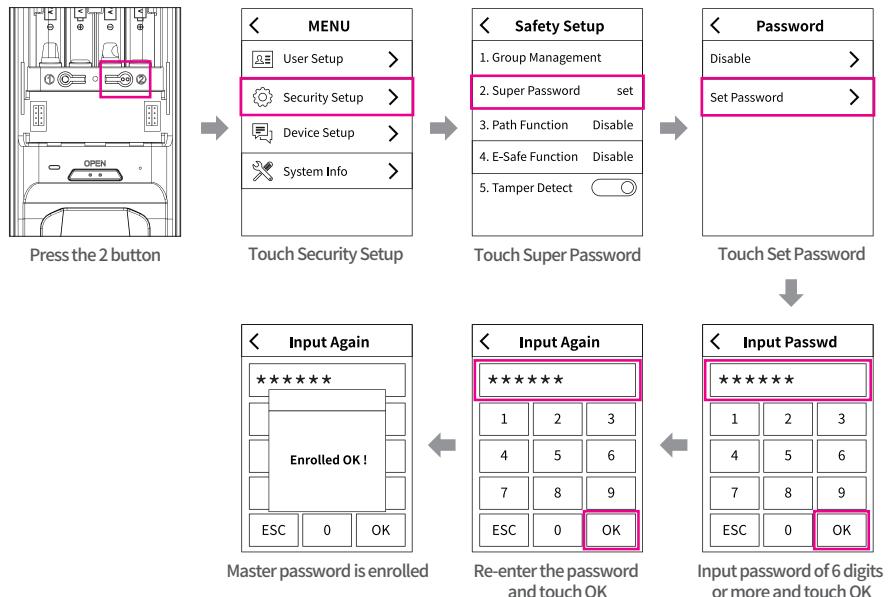

## Initial setting

### 1. Set the master password

Follow the steps to set the master password.

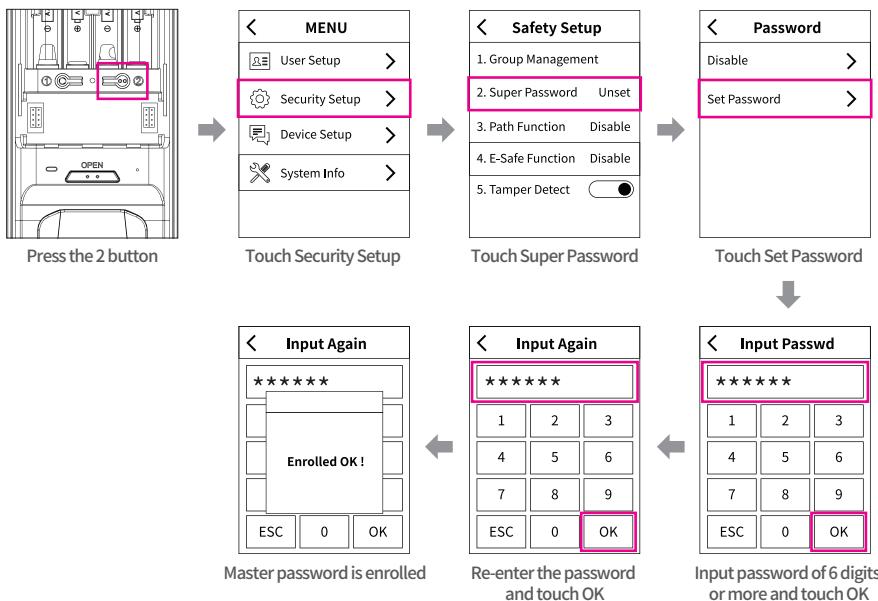




# User Manual

**Caution** Register face recognition with the door open.


## 1. Face recognition registration

Follow the steps to register face recognition.

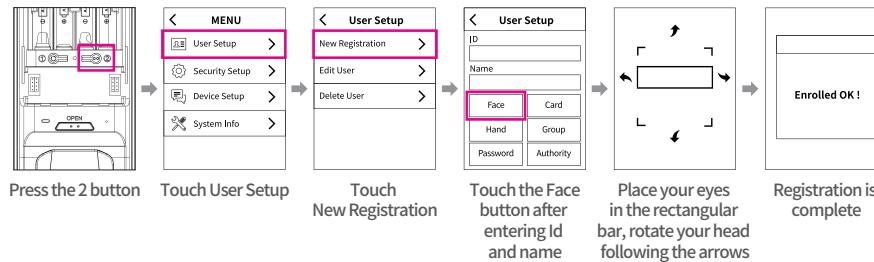

## 2. Re-register face recognition

Follow the steps to re-register face recognition.

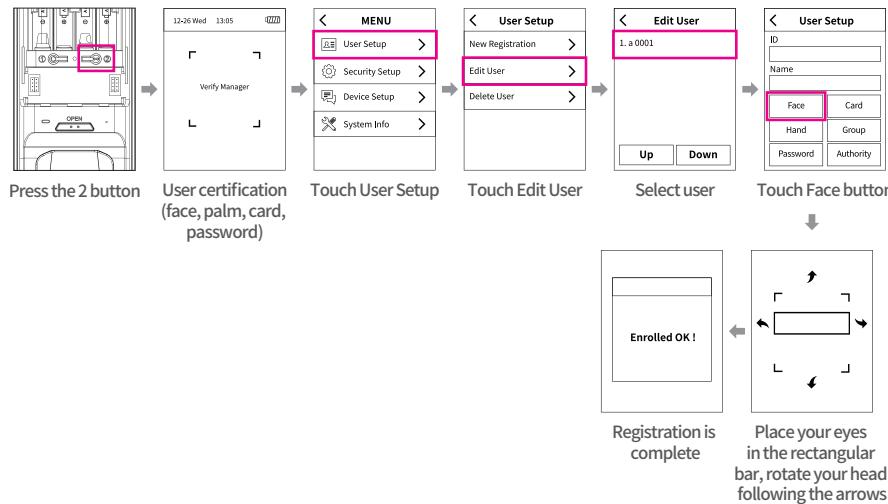

**Caution** • You cannot open the door with pictures or videos. (growing children need to register every 6 month to 2 years. Re-register after cosmetic surgery.)




**Caution** Register the card with the door open.




## 3. Card(RFID) registration

Follow the steps to register the card key.

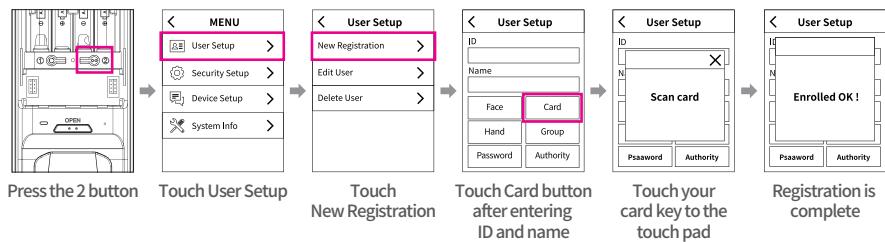

## 4. Card(RFID) re-registration

Follow the steps to re-register the card key.

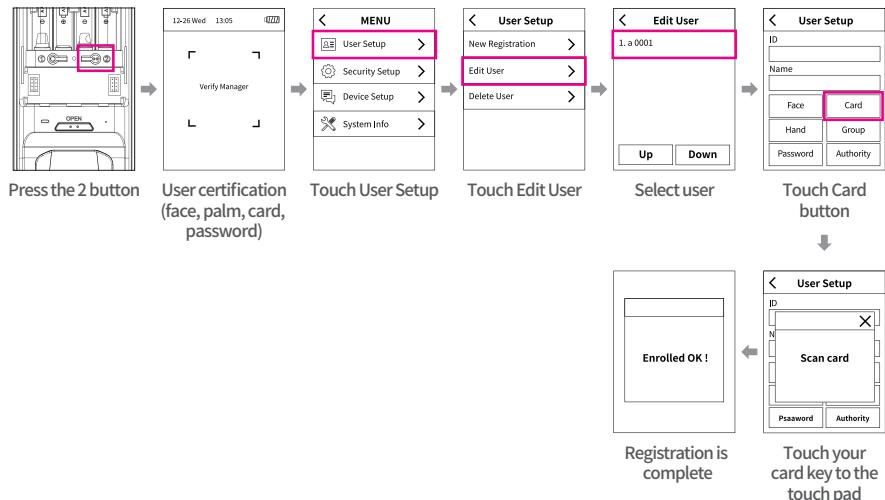

**Caution** • If you lose your key card, make sure to delete the card's user and re-register a new account. (user information will be deleted when you delete a user.)




Register palm recognition with the door open.

Caution


## 5. Palm registration

Follow the steps to register the palm recognition.

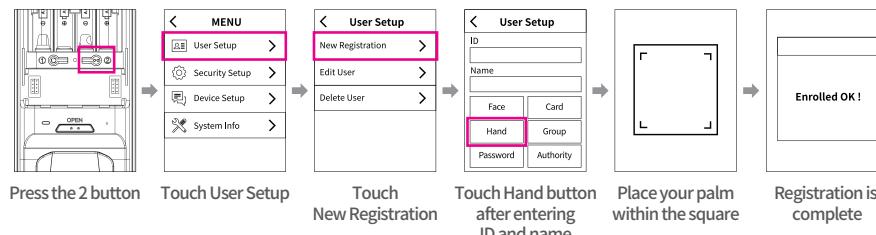

## 6. Palm re-registration

Follow the steps to re-register palm recognition.

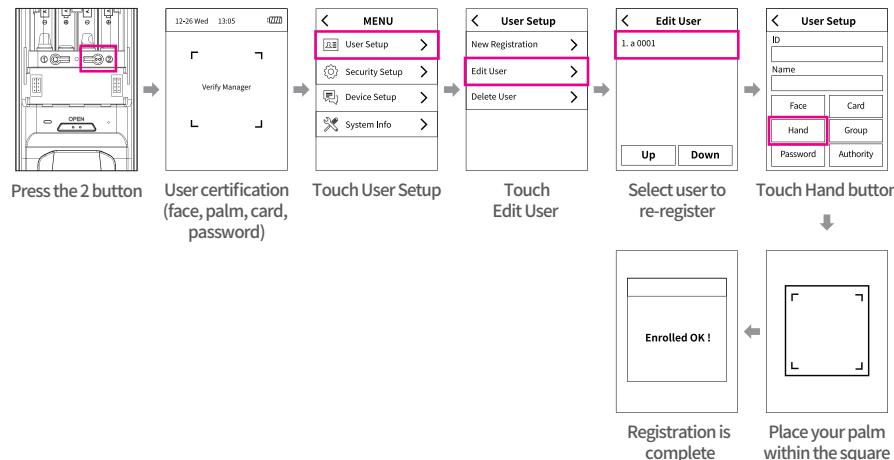


Register user password with the door open.

Caution


## 7. Password registration

Follow the steps to register password.

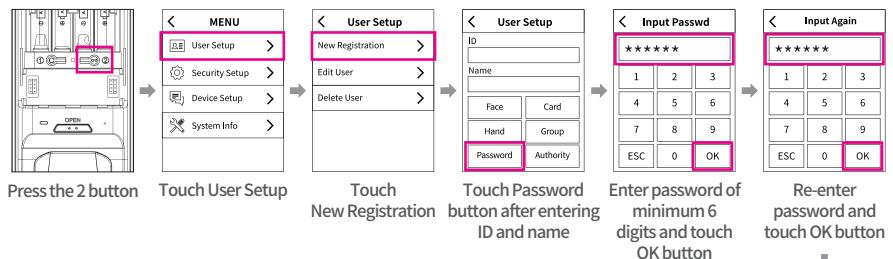


## 8. Password re-registration

Follow the steps to re-register password.

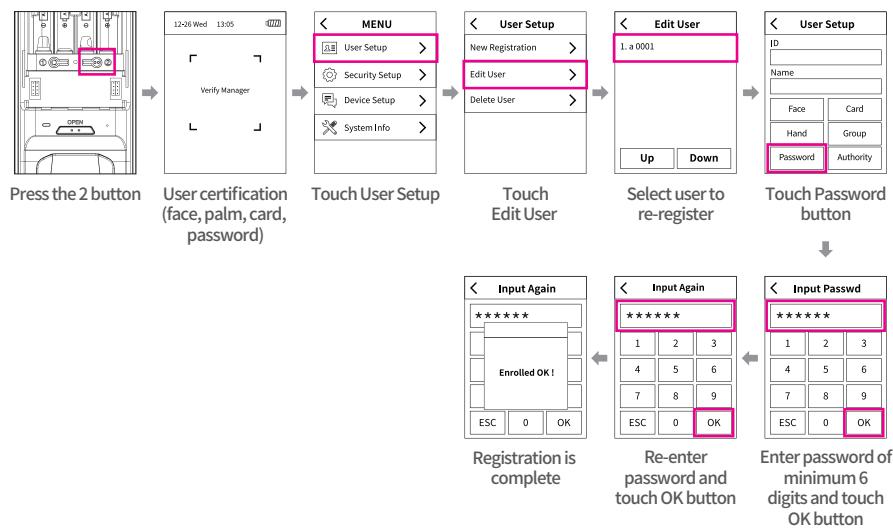


## 9. Delete user

Follow the steps to delete user.

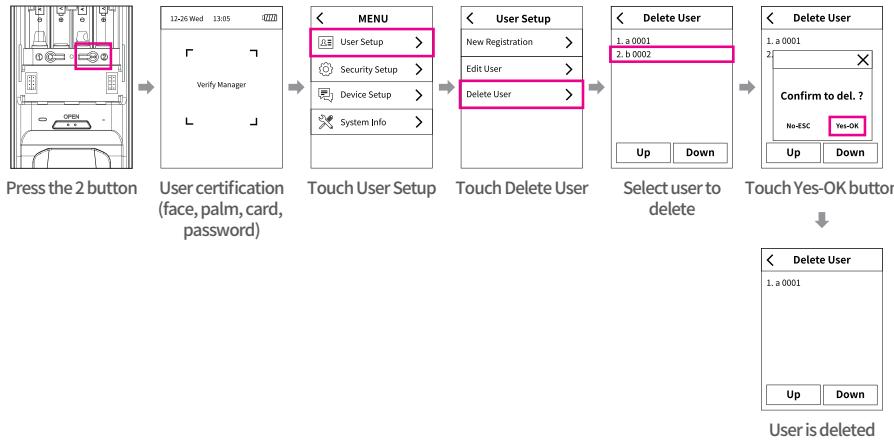


## 10. Language setting

Follow the steps for language setting.

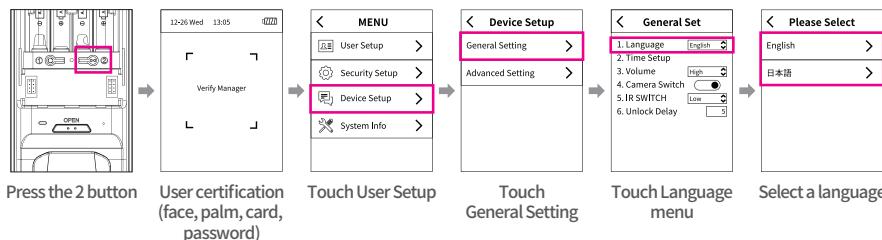

## 11. Reset User

Keep the door open, and follow the steps to reset all registered information.

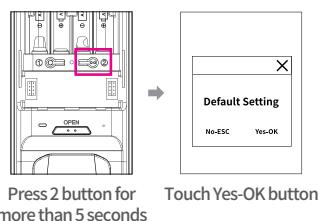


If you do not open the door within 5 seconds after face recognition, entering password, or using card key, the door will automatically close.



## 12. Opening and closing the door from the outside.

### Opening with face recognition

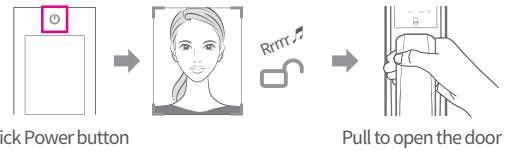


### Opening with a card key




### Opening with palm recognition



### Opening with a password

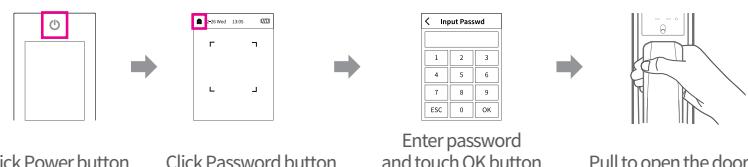

### Open with the emergency key

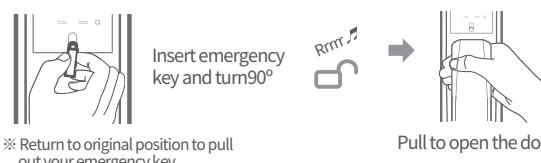

• Keep the emergency key outside in your bag, car, etc. in order to use it when the door lock malfunctions.


Caution • The door lock will beep when the dead bolt is stuck in the door or if it senses any abnormal operation.

**Caution** If you do not open the door within 5 seconds after face recognition, entering password, or using card key, the door will automatically close.



### 13. Opening and closing the door from the inside

#### Opening with handle

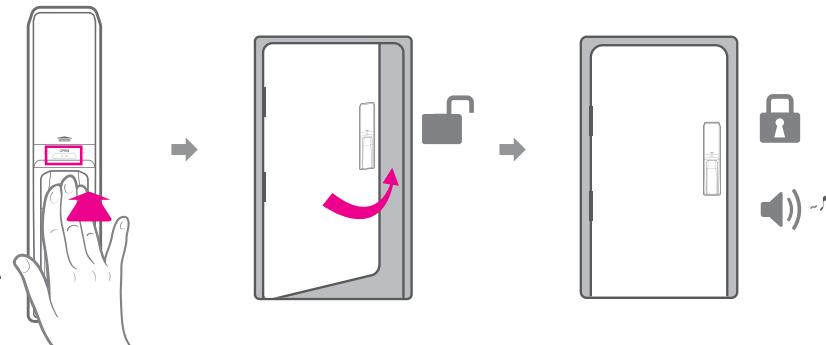

01. Pushing the handle or pressing the open button will unlock and open the door.

02. Closing sound is triggered within 5 seconds of closing the door.


### 14. Turning off the intrusion alarm

#### Break alarm function

Opening the closed door with force or intrusions will trigger intrusion alarm.


Turn off the alarm with registered face recognition/card key/palm/password  
Any of [Face recognition], [Palm recognition], [Password], and/or [Card key] after pressing [Power] button will turn off the intrusion alarm.

※ Displacing the batteries also turns off the intrusion alarm.

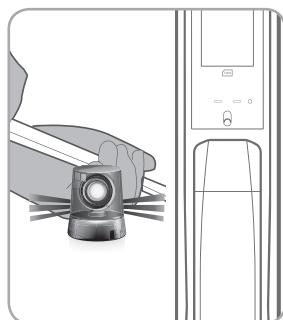


### 15. Changing batteries

Battery level is always displayed.

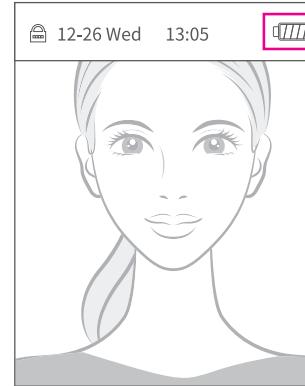

[Purchase \[DC9V batteries\]](#)

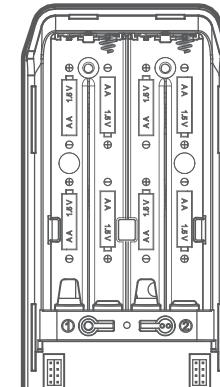

[Replace all 8 batteries with new batteries](#)

#### Changing batteries

- Battery lifetime : 4~8 months assuming 10 uses per day
- Low battery alarm : Open the battery cover when you hear low battery alarm to change all 8 1.5V AA batteries with the appropriate +/- position.
- Do not mix batteries of different remaining lifetime levels.

※ You can use 8 1.5V AA batteries. (Delivered with 4 batteries)


※ Automatic closing may stop functioning if you do not change the batteries in time.

**Caution**

- Do not mix batteries of different remaining lifetime, and we suggest you use batteries of same brand.
- Mixing batteries of different lifetime may cause leakage.

## 16. Using the external power terminal

External power terminal uses DC9V(6F22/FC-1) batteries from the outside to provide emergency power when the door lock completely runs out of energy which disables face recognition/card key/ palm recognition/ password.

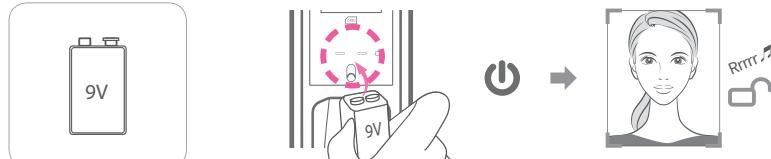

[Purchase DC9V batteries](#)

[Contact \[Emergency Power Terminal\]](#)



- You need to purchase DC9V batteries separately. We do not provide DC9V batteries.
- Limit DC9V uses to emergency uses only because a prolonged use of DC9V batteries may cause device malfunctions

### MEMO

OnFace

## Product warranty

|               |             |                               |
|---------------|-------------|-------------------------------|
| Product name  | ONFACE - D5 | Warranty period               |
| Purchase date |             | 1 year from the purchase date |
| Branch        |             |                               |

We guarantee the followings in accordance with consumer product dispute resolution standards.  
(Fair Trade Commission)

### On product warranty


- Warranty period is 1 year from the purchase date.
- Make sure to read the user manual. Visits by service providers cause fees.
- Visit, tech help, and component fees are incurred for paid services even during the warranty period.

|                                      | Types of Consumer Damages              | Compensation history                      |  |
|--------------------------------------|--|---|--|
|                                      |  | Within warranty period                    | After warranty period                      |
| Malfunctions during normal uses      | Malfunctions within 1 year of purchase | Free repair                               | Repair of charge                           |
|                                      | 3 occurrences of the same malfunction  | Free repair                               | Repair of charge                           |
|                                      | 4 occurrences of the same malfunction  | 1-to-1 exchange                           | Repair of charge                           |
|                                      | Our company is out of repair parts     | 1-to-1 exchange/ refund at purchase price | 10% refund on the fixed depreciated amount |
| Consumer negligence and carelessness | Visits for non-malfunctions            | 유상수리                                      |  |
|                                      | Consumer negligence and carelessness   |   |  |
|                                      | Malfunctions due to unintended uses    |   |  |

### Charged repair services (consumer cost) responsibilities

- Repairs due to password losses
- Check-up requests without apparent causes
- Repair visits due to battery misplacement, negligent uses, and consumer carelessness.
- Malfunctions and damages due to intentional or external causes
- Malfunctions and damages due to fire, flood, or salt related disasters and causes
- Malfunctions and damages due to uninstructed uses or device cleaning
- Malfunctions and damages due to 'fire door deformation phenomenon' or 'door failure' problem

# OnFace

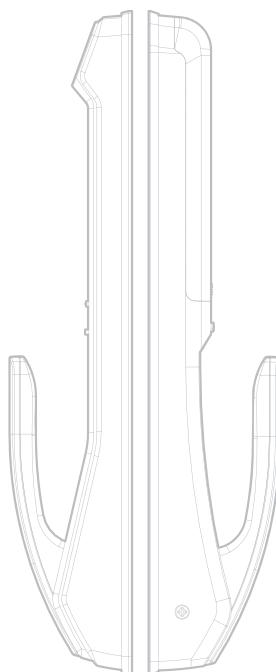

## OnFace

7, Wausan-Ro 35-Gil, Mapo-Gu, Seoul, Republic of Korea (04052)  
Tel : 1600-6137 | Fax : 02-598-6512  
<http://doorlock.onface.net>

※ This device is for domestic sales.  
Full A/S support and normal warranty scope may not apply for products bought or used outside of Korea.  
However, local dealers will provide installation and A/S support for areas with dealers that import  
our products.



## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.