

WARNING:

ADDED WEIGHT OF THE DEVICE MAY CAUSE INSTABILITY OF A FREE-STANDING PORTABLE LUMINAIRE. USE ONLY WITH A PORTABLE LUMINAIRE THAT IS PROVIDED WITH A SHADE. THIS LAMP EMPLOYS LIGHT EMITTING DIODE TECHNOLOGY AND UNLIKE TUNGSTEN-HALOGEN LAMPS DOES NOT REQUIRE A BARRIER. LAMP IS SUITABLE FOR OPEN LUMINAIRES. NOT FOR EMERGENCY LIGHTING.

WARNING – RISK OF FIRE OR ELECTRIC SHOCK. LED RETROFIT KIT INSTALLATION REQUIRES KNOWLEDGE OF LUMINAIRES ELECTRICAL SYSTEMS. IF NOT QUALIFIED, DO NOT ATTEMPT INSTALLATION. CONTACT A QUALIFIED ELECTRICIAN. WARNING – RISK OF FIRE OR ELECTRIC SHOCK. INSTALL THIS KIT ONLY IN THE LUMINAIRES THAT HAVE THE CONSTRUCTION FEATURES AND DIMENSIONS SHOWN IN THE PHOTOGRAPHS AND/OR DRAWINGS AND WHERE THE INPUT RATING OF THE RETROFIT KIT DOES NOT EXCEED THE INPUT RATING OF THE LUMINAIRE. WARNING – TO PREVENT WIRING DAMAGE OR ABRASION, DO NOT EXPOSE WIRING TO EDGES OF SHEET METAL OR OTHER SHARP OBJECTS. WARNING – RISK OF FIRE OR ELECTRIC SHOCK. LUMINAIRE WIRING AND ELECTRICAL PARTS MAY BE DAMAGED WHEN DRILLING FOR INSTALLATION OF LED RETROFIT KIT. CHECK FOR ENCLOSED WIRING AND COMPONENTS. DO NOT MAKE OR ALTER ANY OPEN HOLES IN AN ENCLOSURE OF WIRING OR ELECTRICAL COMPONENTS DURING KIT INSTALLATION. THIS RETROFIT KIT IS ACCEPTED AS A COMPONENT OF A LUMINAIRE WHERE THE SUITABILITY OF THE COMBINATION SHALL BE DETERMINED BY AUTHORITIES HAVING JURISDICTION. INSTALLERS SHOULD NOT DISCONNECT EXISTING WIRES FROM LAMPHOLDER TERMINALS TO MAKE 6 CONNECTIONS AT LAMPHOLDER TERMINALS. INSTEAD INSTALLERS SHOULD CUT EXISTING LAMPHOLDER LEADS AWAY FROM THE LAMPHOLDER AND MAKE 6 ELECTRICAL CONNECTIONS TO LAMPHOLDER LEAD WIRES BY EMPLOYING APPLICABLE CONNECTORS. THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS OR NOT FOR EMERGENCY LIGHTING.

AVERTISSEMENT:

ADDED WEIGHT OF THE DEVICE MAY CAUSE INSTABILITY OF A FREE STANDING PORTABLE LUMINAIRE. UTILISER UNIQUEMENT AVEC UNE LAMPE DE TABLE DOTÉE D'UN ABAT-JOUR. NE CONVIENT PAS AUX SORTIES DE SECOURS.

AVERTISSEMENT - PRECAUTIONNEZ-VOUS CONTRE DES CHOCS ÉLECTRIQUES. L'INSTALLATION DES PIÈCES DE RECHANGE LED EST SEULEMENT EN CHARGE DES PROFESSIONNELS. PRECAUTIONNEZ-VOUS CONTRE FEU. INSTALLER DES PIÈCES DE RECHANGE SELON LES SPÉCIFICATIONS, VEILLER À CE QUE LA PUISSANCE D'ENTRÉE NE DÉPASSE PAS LA PUISSANCE D'ENTRÉE DE REMPLACEMENT DE LA LAMPE. NE FAITES PAS DE CONTACT AVEC LE CÂBLE POINTUS OU MÉTALLIQUES, AFIN D'ÉVITER LE FIL USÉ. VÉRIFIER LE CIRCUIT FERMÉ, AFIN DE DOMMAGES LES CÂBLES ET LES COMPOSANTS ÉLECTRONIQUES LORS DE L'INSTALLATION DE FORAGE. NE PAS MODIFIER LA STRUCTURE DU CIRCUIT FERMÉ ET LES COMPOSANTS ÉLECTRONIQUES OU FORAGE SUR CELUI-CI LORS DE L'INSTALLATION DES PIÈCES DE RECHANGE.

LED Corn Light Instruction



Can not use the electric generator to test the LED lamp. Please avoid using the led fixture in environment where there is smoke, sulfur, and corrosive substances. But if used in such environment, make sure the led fixture is well protected by an enclosed lampshade whose dimension is no less than below size, and whose material is either glass or semi-glass, semi-metallic. Surface of the lampshade shall not have any covering which prevents heat dissipation.

Power (W)	75	95	110
Volume (CM)	47*21*21	44*24*24	44*26*26

LED Corn Light Instruction

Product features:

- ◆ 120/280 degree lighting.
- ◆ Can be with Clear or frosted PC cover.
- ◆ No fan.
- ◆ 75-110W lamp can be with AC120-277V internal driver.
- ◆ 75-110W Sealant pouring for whole driver and lamp plastic housing.
- ◆ Long lifespan and good heat dissipation.
- ◆ Direct replacement for Metal Halide, easy Installation.
- ◆ Fits many different fixtures to replace traditional lamps.

Application:

LED Retrofit Kit make it simple to replace: parking lot lighting, shoebox lighting, street lighting, flood lighting, wall pack lighting, and canopy lighting etc.





Installation Instructions:

Warning: Please make sure the power is off before installation.


1. Turn off the power switch.
2. Screw off the CFL or MHL or HPS and so on, see Figure (3)(4).
3. Take out the led corn lamp and screw it on, make sure the side with the sensor hole is in the same direction as the luminous surface of the lamp, and then unfold the radiator to 180 degrees, see Figure (1)(2).

Figure (1):Regular lamp ,Figure (2)Lamp with motion sensor or PIR sensor, See the lower right corner for installation instructions.

- (1) (2) :AC internal driver,(Note: Pls make sure to take off the ballast before installing led corn light,otherwise the ballast will produce the resonance of high voltage and makes led corn light breakdown.)
4. security rope provided, pls fix the rope on the lamp with hand, then fix the wire of other end on the shell, see Figure (2).
5. Turn on the power switch.(Finished!)

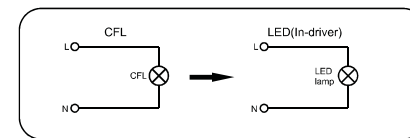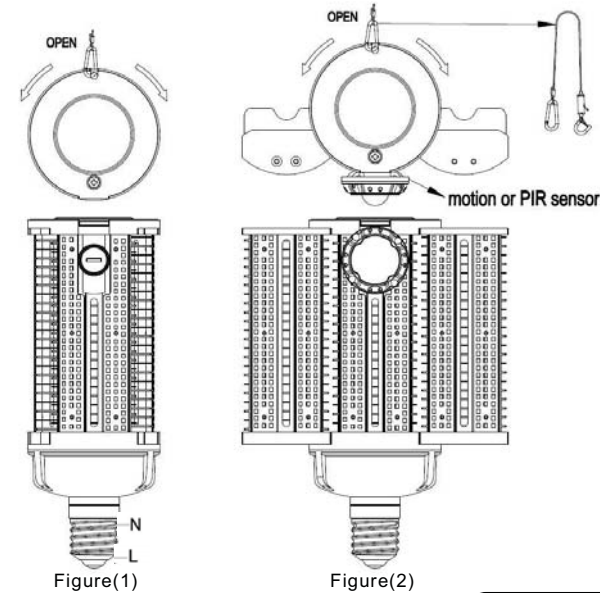

Figure(3)

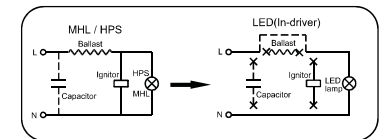


Figure(4)

Installation of motion sensor or PIR sensor

It could be easily installed using a straight screwdriver . Use a flat-blade screwdriver to unscrew the plug and remove the plug. And then, choose motion sensor or PIR sensor to install and tighten.

Note: the motion sensor has no dialing code, and a remote control is needed for adjustment. Please refer to the instruction for remote control adjustment.

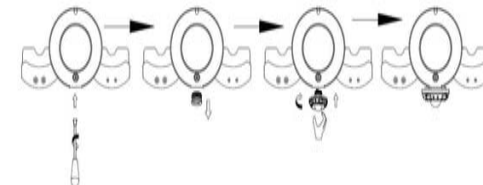

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.