

FRONT



back

INSTRUCTIONS

Key Operating Instructions

- ⌚ – Long press the Power Button for 3 seconds to turn the headphones on/off.
- ⏯ – In Call Mode: Short Press this button to answer incoming calls. Long Press to refuse call. Press button twice to redial.
- In Music Mode: Short press to pause/play music.
- ⏮ – Short Press to go to previous song. Long press to decrease the volume.
- ⏭ – Short Press to go to next song. Long press to increase the volume.
- Ⓜ – Short press to change mode between calling and music.

LED Indicator

- In Call Mode, the LED Indicator will quickly flash blue. Once the pair is successful, the LED Indicator light will slowly flash blue.
- In Music Mode, the LED Indicator will slowly flash when music is playing.
- In Charging Mode, the LED Indicator light is illuminated red when charging. The light will shut off when fully charged.

Connecting to an audio jack

- Insert audio line directly to the AUX Line port on your device.

Functional Parameters

- USB Charge: DC5V1A
- SNR: 88Db
- Wireless Distance: 32.8 ft
- Frequency: 50Hz-20KHz
- Wireless Frequency: 2.402-2.480 GHz
- Charging Time: 2 hours
- Call Duration: 2 hours
- Standby Time: 18 hours

