






**REXING**  
**Dash Cam**

**S1**

## Quick Start Guide

-  S1 クイックスタートガイド
-  Guide de démarrage rapide S1
-  Guida di avvio rapido S1
-  Guía de inicio rápido S1
-  S1 Schnellstartanleitung

## Table of Contents

page

### English

Overview	4
What's in the Box	5
Camera Overview	6
Installation	8
Basic Operation	12

## 1. Overview

Thank you for choosing REXING! We hope you love your new product as much as we do. If you need assistance, or have any suggestions to improve it, please contact us. You can reach us via [care@rexingusa.com](mailto:care@rexingusa.com) or call us at (203) 800-4466. Our support team will respond you as soon as possible.

Always a surprise in Rexing. Check us out here.

<https://www.facebook.com/rexingusa/>

<https://www.instagram.com/rexingdashcam/>

<https://www.rexingusa.com/support/registration/>

<https://www.rexingusa.com/support/product-support/>

Facebook



Instagram



 
Site




Product Support



## 2. What's in the Box

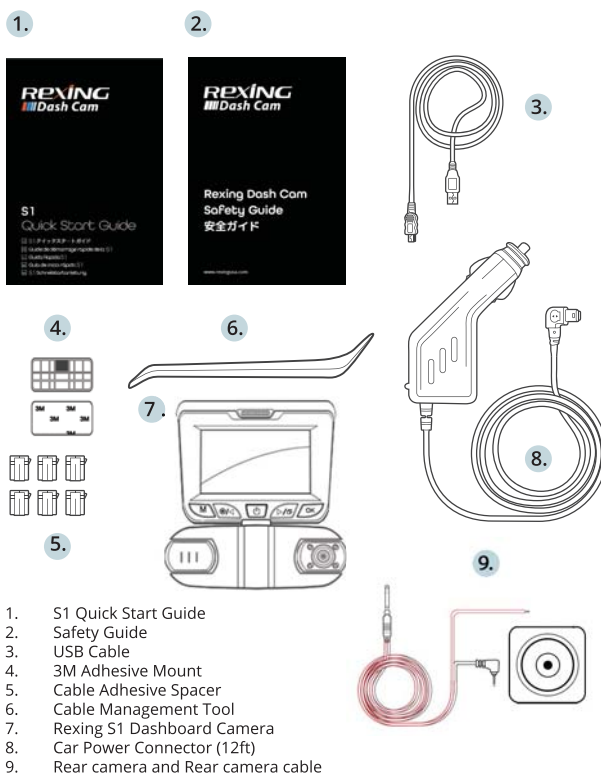


### 3. Camera Overview

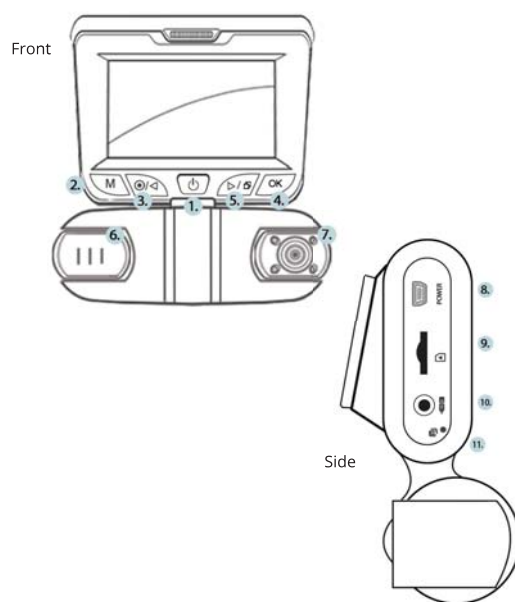 


1. Power Button
2. Menu Button / Mode Button
3. Left Navigation Button/ Record Button
4. OK (Confirm) Button / Emergency Lock Button
5. Right Navigation Button / Screen Toggle Button / Hold to take photo
6. Front Camera
7. 4 IR Lights / Cabin camera
8. Power / USB Charging Port
9. Micro SD Card Slot
10. Rear Camera Port
11. Reset Button

## Screen Icons

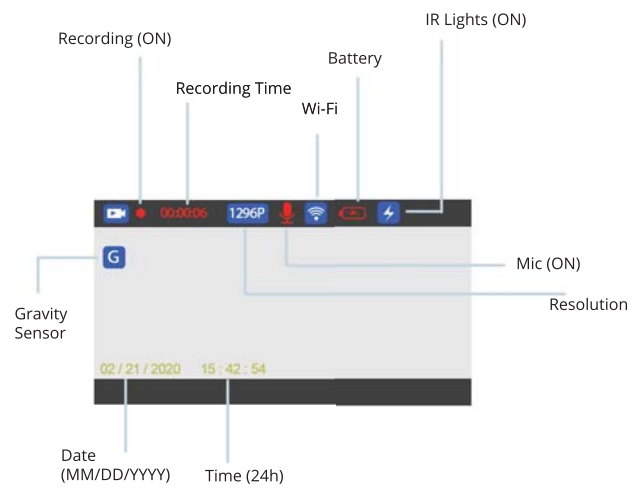 

## 4. Installation

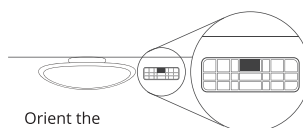 

### Step 1: Install the Dash Cam

Place the 3M tape on the mount and properly orient the mount square to the roof and hood line of the vehicle.

Firmly press the mount onto the windshield. Wait **at least 20 minutes** before mounting the camera.

Orient the mount as shown on the illustration above.

 


### Step 2: Insert the Memory Card

The Rexing S1 accepts [Class 10/UHS-1 or higher] Micro SD memory cards up to 256GB. You will need to insert a memory card before you can begin recording. **Before inserting or removing a memory card, first ensure you've powered down the device.** Gently push the memory card in until you hear a click, and allow the spring release to push the card out.

### Step 3: Power the Camera and Format the Memory Card

Power the camera by connecting the charger to the car cigarette lighter and camera. To ensure the S1 records to your memory card properly and without error. **Before you start using a new memory card, you must format the card within the camera using the format function.** Always backup important data stored on the memory card before formatting.

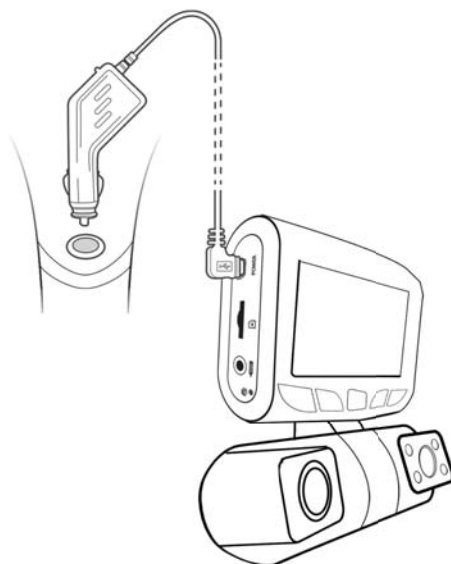



To format the memory card, make sure you have inserted your memory card, then turn on the device by connecting to a power source. Press Left Navigation Button to stop recording. Then press the MENU button twice to enter the System Setup Menu.



Press the Menu button twice




Press the YES button to confirm formatting the card

Use the RIGHT and LEFT navigation buttons and go to the Format setting. Press the OK button to confirm the selection.

You may now disconnect from power. The camera will shut down after 3 seconds. The camera should begin recording automatically the next time it is powered on.

### Step 4: Mount the Rear Camera

 Mount the rear camera as shown below. Use the provided rear camera cable to connect the rear camera to the front camera.

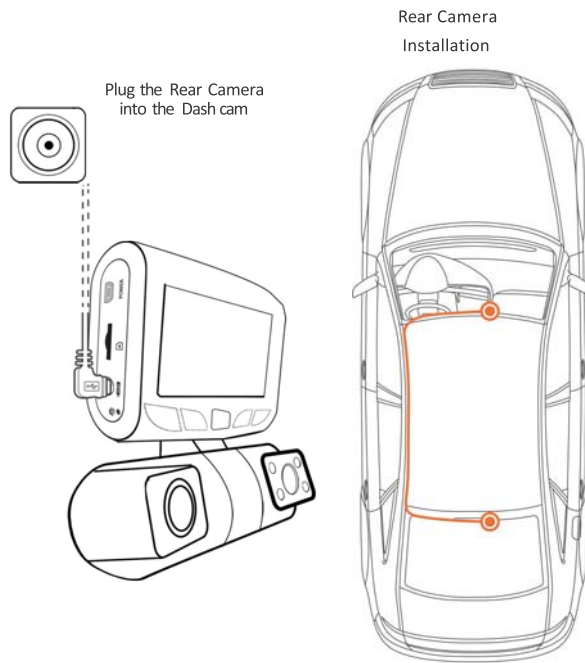


### Step 5: Installing the Camera onto the Windshield

Place the camera on the mount and carefully route the power cable around the windscreen and tuck it under the trim.

Plug the car charger cable to a 12V DC power outlet or the car cigarette lighter.

 Connect car charger to the camera. The camera will auto-start recording once it's powered on.

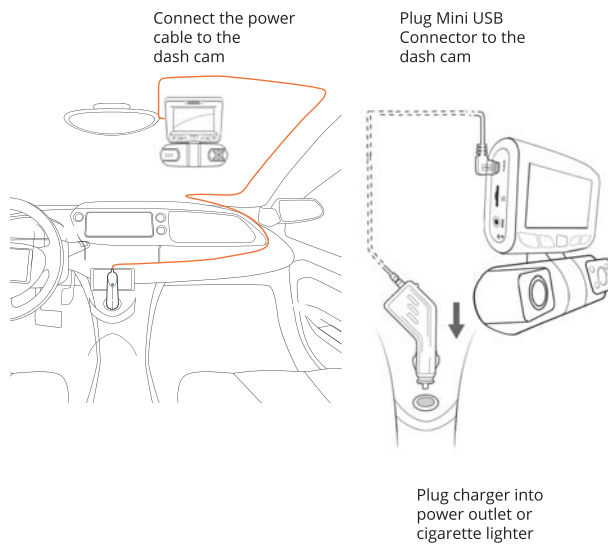

## 5. Basic Operation

### Device Power

The device will be automatically powered on when plugged into a 12V accessory socket or cigarette lighter when it receives a charge (i.e.: the vehicle is started).

To turn the device on manually, press and hold the Power button until the welcome screen appears.

The camera will automatically start recording when it's powered on.



Press and hold the Power button to turn the device on manually

### Menu Settings

Power the camera On. If the camera is recording, press the Left Navigation button to stop recording.

Hold the MENU button and toggle to the desired mode. Press the MENU button once to enter the settings menu for a Mode. Press the MENU button twice to enter the System Settings (Set up).

### Video Recording

The camera will automatically start recording when the device receives a charge. The LED lights and red dot will blink red device when recording. Press the Left Navigation button to stop recording.

Red dot will blink red device when recording.



 
### Video Playback

Playback of videos can be done on the device or a computer. To playback a video on the device, hold MENU button toggle to the Playback mode. Hold MENU button to Change the views. Use the Right and Left navigation buttons to toggle to the desired video. Press the OK button to play.



During playback, use the OK (pause), Left navigation (rewind) and Right navigation (fast forward) buttons to control the video playback. Hold OK Button to exit the current Mode.

To playback a video on the computer, either use an SD card adapter or connect the device to the computer directly using the USB cable.

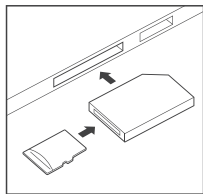


To playback a video using an SD card adapter, remove the memory card and insert it into an SD card adapter. Place the adapter in the computer. Then place the adapter into the computer.


To playback a video using USB cable, connect the USB Cable to the device and the computer. After the device is powered on, press the OK button to select MSDC.

On the computer, navigate to device drive. The videos are stored at the files. The locked videos are stored at:\Event.

 Select the video to playback.

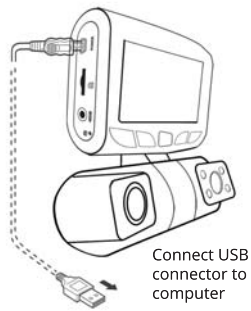

Connect USB connector to computer

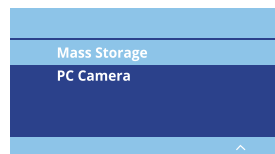 


Select MSDC

### Wi-Fi Connect

 Download "Timacam" app from the App Store/ "TMcam" Google Play Store.

1. To access or exit the WiFi feature, hold down the OK button. Press Menu Button four times to find the wifi info.
2. Open Wi-Fi settings on your phone, find "SSID" from the list, tap to connect. (Default password: 12345678)
3. Open the Timacam app, tap "Recorder" to enter the realtime video streaming page.

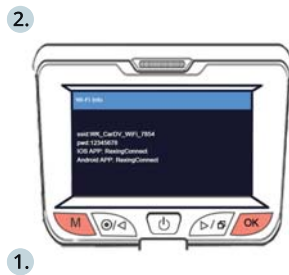

4. Once connected, the dash cam screen will switch to the camera view and will display "WiFi Connected" message. Using the Timacam app, you can view a live preview of the dash cam screen, start / stop recording, as well as view and save your captures with your mobile device.

## Taking Photos

Hold the Right navigation button to take a photo.

To view a photo, stop video recording and hold MENU button to toggle to the Playback Mode. Hold MENU button one more time to enter the Photo playback mode.

Press the Left and Right navigation buttons to toggle through your photos.



To delete a photo, stop video recording and toggle to the Playback Mode and toggle through the videos and photos to the one you want to delete.



Press the MENU once and toggle to the Delete option.

Press the OK Button and select Delete Current or Delete All.



## Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

### RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter