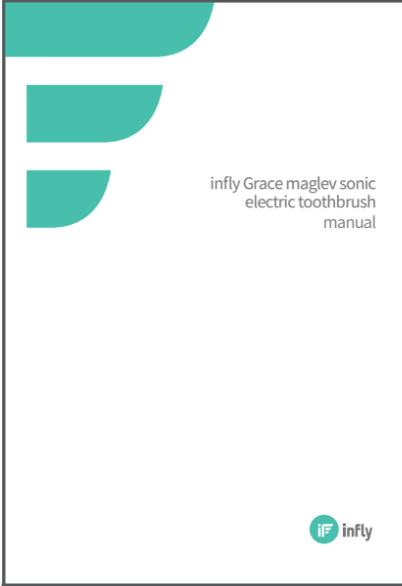
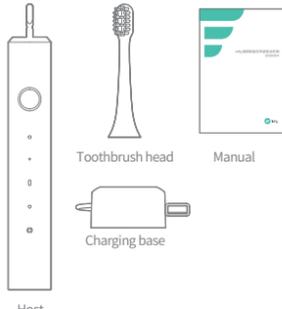
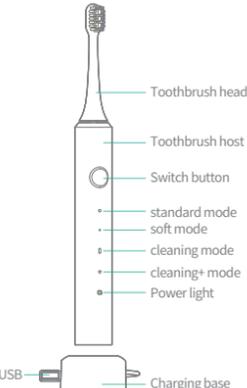
 


385mm

55mm

80mm

封面

 <p>infly Grace maglev sonic electric toothbrush manual</p> <p>iF infly</p>	<p>Thanking</p> <p>Thank you for choosing infly electric toothbrush. Please refer to this instruction before starting to use and check whether the packing accessories is complete and follow the instructions to complete the production, after the product is assembled, it will be used.</p>  <p>Infly Official website Infly Official Vlog</p>	<p>Packing Accessories</p>  <p>Host Toothbrush head Manual Charging base</p>	<p>Assemble electric toothbrush</p>  <p>Take out the toothbrush host and brush head, and install the brush head on the main machine. Please note that the direction of the brush head buckle should correspond to the host during installation.</p> <p>Assembly Schematic</p>	<p>Knowing the toothbrush</p>  <p>Toothbrush head Toothbrush host Switch button standard mode soft mode cleaning mode cleaning+ mode Power light Charging base</p>	<p>Starting use</p>  <p>Press the switch button and the toothbrush will start up. Press the button continuously to change the brushing mode.</p>	<p>Travel Mode</p>  <p>When the machine is off, long-press the switch button for about 5 seconds. All the indicators blink 3 times to enter the travel mode, and the switch button is locked. Press the button again for about 5 seconds and all the indicators blink 3 times to unlock and return to normal mode.</p>
<p>Charging</p>  <p>After starting, if the battery indicator flashes, it needs to be charged. Please wipe the toothbrush host and base clean before charging, and keep it dry. The base is connected to the power supply, and the main toothbrush unit can be charged by plugging it into the base. Indicator light flashes during charging and stays on when fully charged.</p>	<p>FAQ</p> <ol style="list-style-type: none"> How to do if the machine cannot be turned on? Check whether the battery is sufficient, if the battery is insufficient, you need to charge it first; if it is fully charged, but still cannot be turned on, it may be into travel mode, please refer to the travel mode instructions to unlock. Why is the vibration reduced after a period of use? With the increase of the use time, the amount of electricity will decrease, which will lead to weak vibration, just charge the toothbrush. 	<p>Maintenance</p> <ol style="list-style-type: none"> Wash the brush head and bristles after use and let them dry naturally. Please do not pull on the bristles, otherwise it will be easily deformed and shedding. Do not immerse the body of the toothbrush in water. Do not use water or acidic cleaning solution higher than 40°C for cleaning. Please clean the stains on the charging stand with a soft cloth. Before cleaning the charging stand, be sure to unplug the power plug from the socket to prevent electric shock. Wipe the plug with a dry cloth to avoid short circuit. Recommended to replace the brush head every three months. When using for the first time, if you have any remaining power, please use up and recharge. 6 months without use, please charge 3-5 hours before use. During use, if the charging indicator flashes for a few seconds and then stops, it means that the power is insufficient. Place the main unit of the toothbrush on the charging stand and confirm that the charger is connected to the power source. The indicator light flashes during charging and stays on for a long time. If it has not been charged for a long time, it will be normal for the indicator light will wait 6-10 minutes before recharging. 	<p>After-sale policy:</p> <p>Thank you for choosing infly products! In order to effectively protect consumers and use our high-quality products with confidence, infly provides a one-year free warranty service on the toothbrush host, charging base, and unopened brush head. Within 12 months from the date of your purchase, any failure of this product, after determined as a product quality problem by infly after-sales service center, you can enjoy free repair service.</p> <p>If any product damage or defect is not attributable to the product quality itself, it is not covered by the warranty. free exchange service will not be accessed under following circumstances:</p> <ol style="list-style-type: none"> Failure or damage due to natural disasters, earthquakes, lightning strikes, abnormal voltage, environmental factors. Dismantle, modify or replace the non-original parts by yourself or entrust a repair manufacturer not authorized by the original manufacturer. Those who have not operated according to the user manual or caused damage due to improper use, such as using the wrong current and voltage, inserting the product into an unqualified outlet, or other man-made damage. If warranty is required, please fill in the content of the warranty card completely. If the company is unable to actually fulfill the obligation of free warranty service due to inaccurate contact information, the purchaser shall bear the responsibility. For service and warranty content, please log in infly's official website or call +86 400-026-8026 	<p>FCC Statement</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:</p>	<ol style="list-style-type: none"> This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation. <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p>	 <p>Model: T20030SIN</p>  <p>FCC ID: 2AW76-T20030SIN</p> <p>PS E RoHS MADE IN CHINA</p> <p>Manufacturer: Dongguan Infly Life Technology Co., Ltd. Add.: Room 202, Block 1, No.36 Caixin Road, Daojiao Town, Dongguan, Guangdong, China</p>