


Size: 210 mm (W) x 230mm (H)



Bonkers Toy Company, LLC
6805 Nancy Ridge Drive
San Diego, CA 92121

Please keep outer packaging and instructions (if included) for future reference, as they may contain important information.

Instruction:

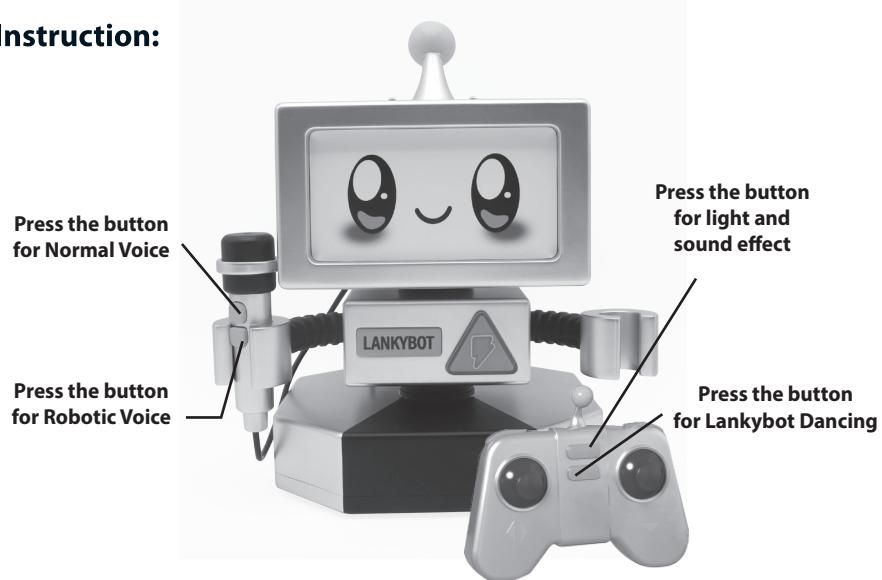

Battery Replacement Instructions:

- Do not mix old and new batteries.
- For best performance use only batteries recommended.
- Ensure batteries are inserted using the correct polarity.
- Different types of batteries or new and used batteries are not to be mixed.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Keep packaging for reference since it contains important information.
- Remove exhausted batteries from unit and dispose of in accordance with battery maker's recommendations.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries should only be charged under adult supervision.
- Remove rechargeable batteries from the toy before charging.
- The supply terminals are not to be short circuited.
- Remove batteries if the toy will not be used for an extended period of time.
- Use a screwdriver to open the battery compartment door and replace old batteries.
- Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- The Wheeble bin symbol indicates that the product and the batteries must not be disposed of with other household waste as they may contain elements which can have a harmful effect on the environment and human health. Please use designated collection points or recycling facilities when disposing of the item and the batteries.

To help locate your nearest facility see: www.recyclenow.com

