

FORECADDY™



USER MANUAL

Thank you.

For choosing the ForeCaddy by Foresight Sports.
Like everything we make, this product is designed
to provide you with years of game-changing
performance on the course.

Should you have any questions or concerns,
please contact our service team.


This product is Health Smart!

Instead of driving a golf cart, your ForeCaddy will
help you to enjoy the incredible health benefits of
walking your favorite course. Health benefits that
include lower blood pressure and cholesterol,
improving cardiovascular and cognitive function,
and reducing stress.


FORESIGHT
SPORTS



Features & Components

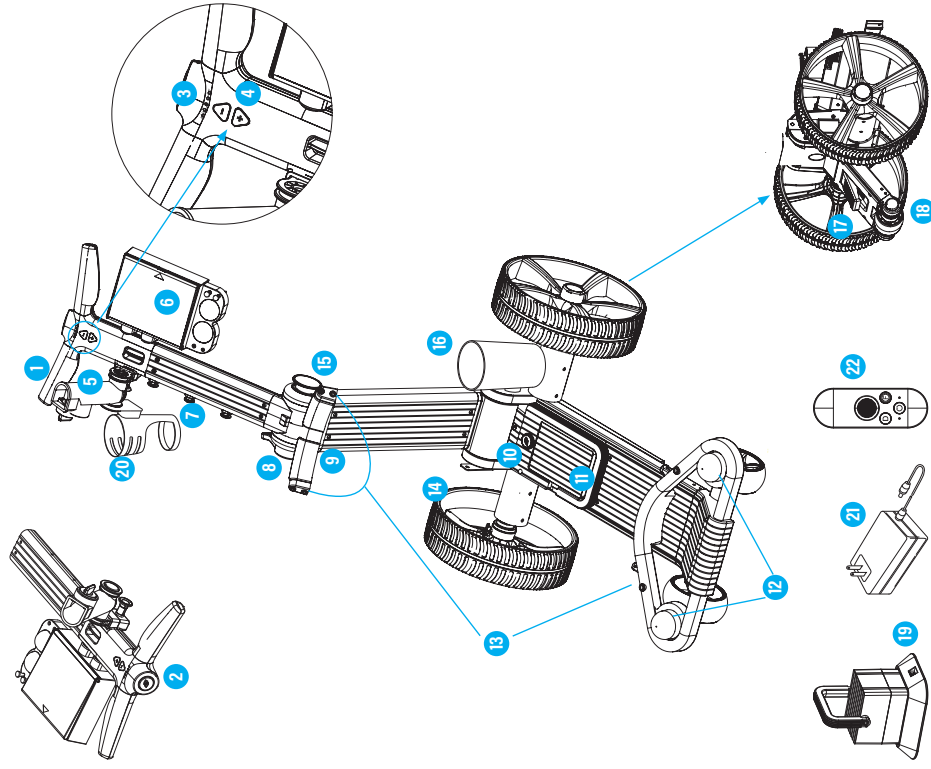

- 1 Handle
- 2 Power Assist/Stop Button
- 3 Cart Power Indicator
- 4 Acceleration & Deceleration Button
- 5 Umbrella Holder
- 6 Score Card and Ball Holder
- 7 Hook
- 8 Arm Adjustment Latch
- 9 Golf Bag (Upper) Holder
- 10 Cart Power Button
- 11 Cart Battery
- 12 Cart LED Indicator Light
- 13 Golf Bag Straps
- 14 Wheels
- 15 Range Finder Magnet
- 16 Sand Bottle Holder
- 17 Column Folding Pedal
- 18 Charging Port
- 19 External Cart Battery Charging Base
- 20 Drink Holder
- 21 Power Charger Adapter
- 22 Remote Control

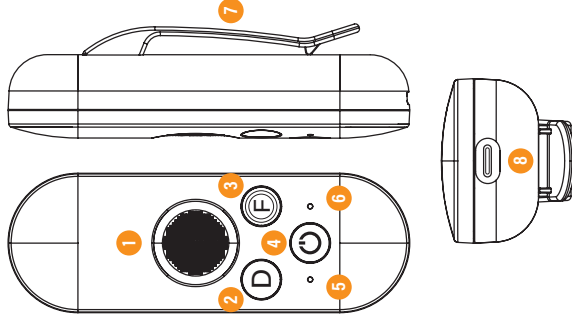


- 1 Control Stick
- 2 Power Assist/Remote Mode
- 3 Follow Mode BETA
- 4 Power On/Off
- 5 Remote Control Battery Indicator
- 6 Golf Cart Battery Indicator
- 7 Belt Clip
- 8 USB TYPE-C Charging Port

Getting Started

Folding and unfolding

The ForeCaddy can be collapsed and unfolded for storage and transportation.

Press and hold down the red lever and pull up on the handle. The lower column will lock in place when fully extended (vertical). Adjust the steering column to the desired angle and lock in place with the arm lock.

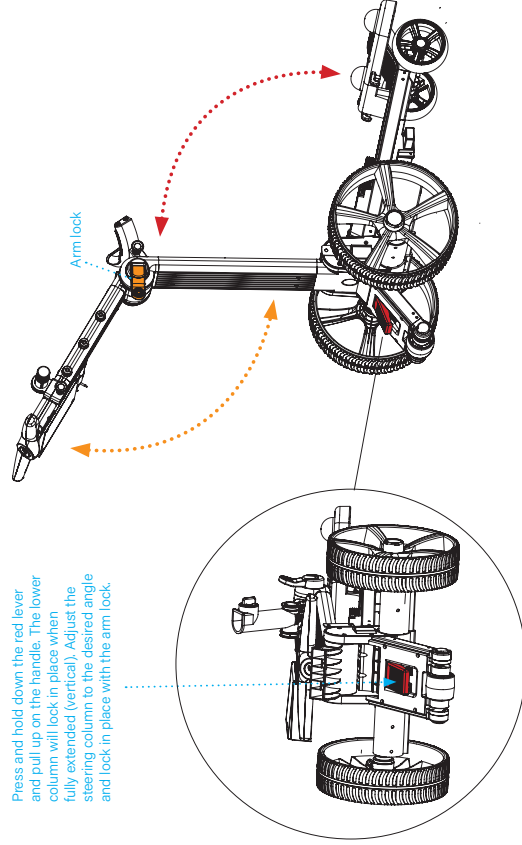


Cleaning and storing

To clean your ForeCaddy, please use water ONLY.


It is recommended that you clean your ForeCaddy after every use by gently rinsing with cold or warm (not hot) water. Towel or air dry thoroughly before storing in a cool, dry place.

Charging the ForeCaddy battery

Connect the power adapter charger cable to the charging port on the back of the ForeCaddy. You can also charge the battery on the external charger. (page 24)

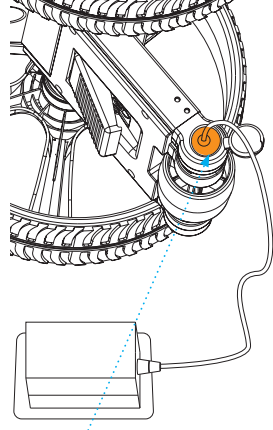


Securing a golf bag (with provided straps)

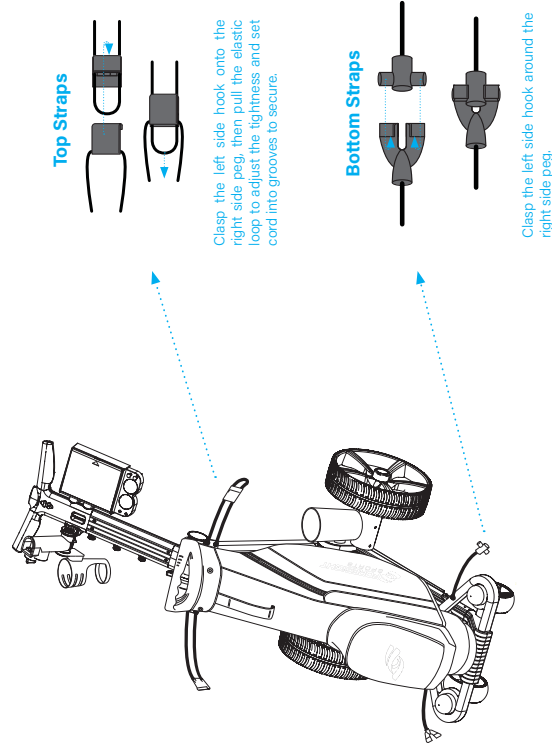


Power Features

Powering the ForeCaddy ON and OFF

Quickly press the power button  to turn the ForeCaddy ON or OFF

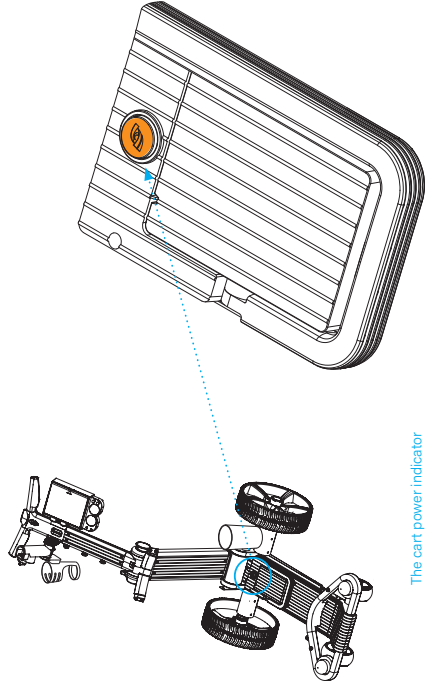


The cart power indicator lights will confirm that the ForeCaddy is ON or OFF, and will indicate the amount of battery charge remaining.

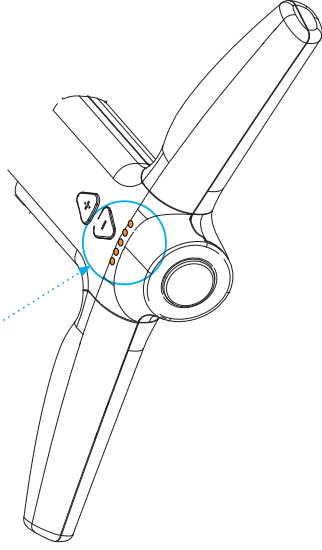


Powering the Remote ON and OFF

Press and hold  to turn the remote control ON or OFF

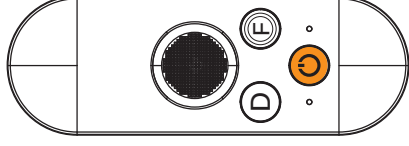


Quickly press  on the ForeCaddy handle or any button on the remote to brake and stop the ForeCaddy while in Remote Control or Follow modes.

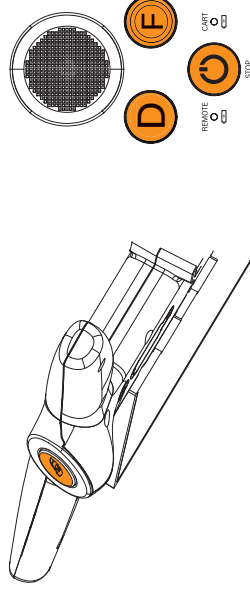


Operating Modes (At-A-Glance)

Your ForeCaddy can be operated in four (4) different modes:


MODE 1: MANUAL (UNASSISTED)

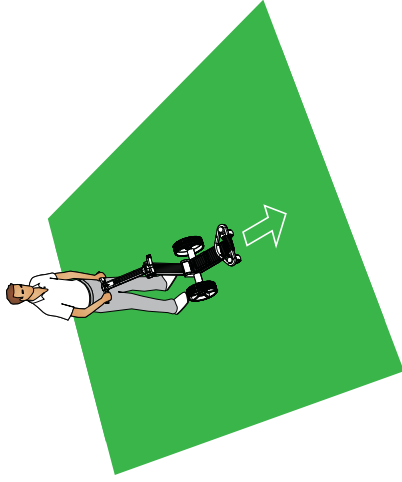

(No Indicator Lights)

 


Rear Wheel Setting:

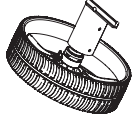


Outer Groove


MODE 2: POWER ASSIST

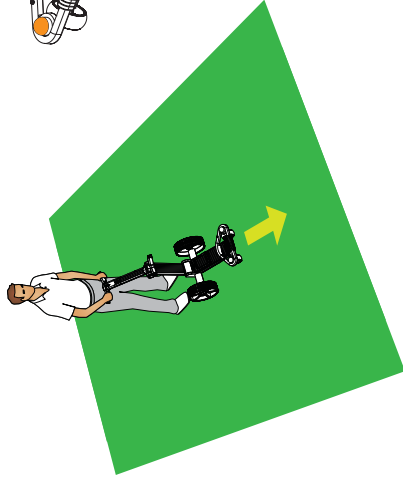

Orange OR Blue Indicator Lights


 


Rear Wheel Setting:

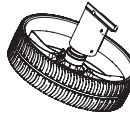


Inner Groove

MODE 3: REMOTE OPERATION

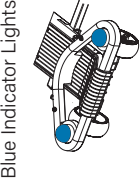
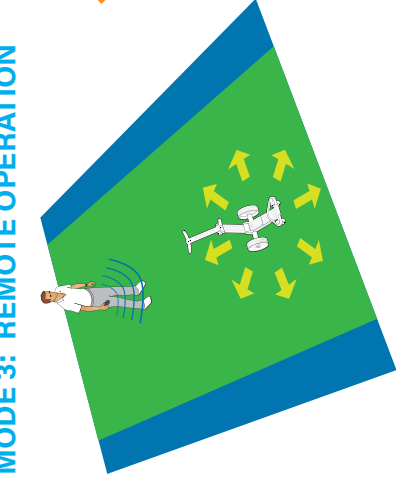


Rear Wheel Setting:

 


Inner Groove

MODE 4: FOLLOW (BETA)

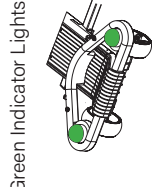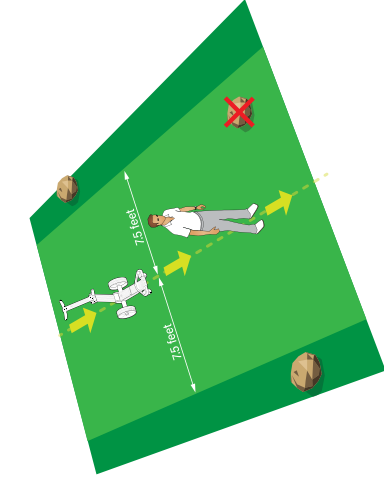

Rear Wheel Setting:

 

Inner Groove