

<p style="text-align: center;">Arab dedicated phone Chapter1 General Information</p> <p style="text-align: center;">UNIQU CELL</p> <p style="text-align: center;">Model: Q4</p> <p style="text-align: center;"> Android</p> <p style="text-align: center;">Phone User Manual</p> <p style="text-align: center;">1</p>	<p style="text-align: center;">Chapter2 before Use</p> <p>1.1 Brief Introduction Appreciate you so much for purchase of this mobile phone. From which you can enjoy the perfect functions, and convenient operation after reading the manual carefully. The multimedia screen is designed for GPRS network circumstance. Besides the rudimental communication functions, this mobile phone adopts individual man-machine interface to meet your different demands by perfect function design. What's more, in order to make your work and life follow more convenient, this mobile offers you the following functions: detailed as: double cards mode, many input via association means, phone book with calling card style, individualisation in-coming ring and picture, message and multimedia message, camera and video camera, MP3 and player for film, recorder, Bluetooth, FM radio, alarm clock, calculator, calendar, STK, and some other practical functions. Some service and function described in this user manual are up to network and scheduled service. Therefore, not all menus in users' phone may be usable and shortcuts for menu and functions in different phones may also be different.</p> <p style="text-align: center;">2</p>	<p>2.1 SIM card ▲ In order to use the mobile phone, you should insert the valid SIM card, which is the key to enter the GSM network. ▲ All the information related to the creation of the connection to the network and initial call records will be recorded in the metal plane area of the SIM card as well as the names, telephone numbers and SMS stored in the phone book on the SIM card. The SIM card can be taken out from your mobile phone and can be placed in any one of the GSM mobile phones for use (the new mobile phone will read the SIM card automatically). ▲ To prevent losing and damaging of the information in the SIM card, please DO NOT touch the metal plane area and the SIM card should be kept far away from electromagnetism. Once the SIM card is removed, you can not enter into the GSM network. Note: Please do power off your mobile phone before pulling out the SIM card. It is forbidden to insert or pull out the SIM card with the mobile phone connected to the external power supply; otherwise, the SIM card is most likely to be damaged. 2.1.1 Insert and pull out the SIM card ▲ Power off your mobile phone and then remove the battery and other external power supply. ▲ Insert the SIM card into the SIM card slot, make sure the SIM is fixed accurately. ▲ When you need to pull out your SIM card, please power off your mobile phone firstly, then remove the battery, open the SIM card slot and then pull out your SIM card</p> <p style="text-align: center;">3</p>	<p>2.2 Install and pull out T-flash card This mobile phone supports T-flash card, which is a kind of multimedia memory card used to increase memory of the mobile phone. It is so small that you should take cautions to install or pull it out in order to avoid damage. The method to install/ pull out T-flash card: 1. Power off the mobile phone, unlock T-flash card slot cover, and set memory card with the metal face downward to the memory card slot. Then lock memory card protection cover. 2. To pull out the memory card, power off the mobile phone, unlock the memory card slot's protection cover, take out the T-flash. Note: The mobile phone does not support hot-plug function of T-FLASH in "power on" mode. Only when the mobile phone is powered off can T-FLASH be pulled out. Restart up and T-FLASH will come into effect. When using or editing files stored in the memory card, DO NOT pull out the memory card.</p> <p>Chapter3 Basic Description (※The following sections function depending on the specific machine functions support)</p> <p>3.1 Key Description</p> <p style="text-align: center;">4</p>	<table border="1"> <thead> <tr> <th>Button</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>Return</td> <td> <ul style="list-style-type: none"> Press this button to return to the front one interface, or to close the dialog, the options menu, notice panel or screen keyboard On any application or interface, press this button to return to the home interface </td> </tr> <tr> <td>Home</td> <td> <ul style="list-style-type: none"> Press and hold this button can open the recently opened application window Access to menu options </td> </tr> <tr> <td>Menu</td> <td> <ul style="list-style-type: none"> Press this button to lock the screen Press and hold this button to open the options menu of the phone including: Power off, Airplane mode, Sleep mode. </td> </tr> <tr> <td>Power</td> <td>Adjust the volume</td> </tr> </tbody> </table> <p>3.2 The use of mobile phone memory card as U disk To copy music, photos and other files to your memory card from your computer, you should set the mobile phone memory card to U disk first. The phone memory card set to U disk. 1) Using the USB cable to connect your phone to the computer. The status bar will show the notification icon. 2) Open the Notifications panel.</p> <p style="text-align: center;">5</p>	Button	Function	Return	<ul style="list-style-type: none"> Press this button to return to the front one interface, or to close the dialog, the options menu, notice panel or screen keyboard On any application or interface, press this button to return to the home interface 	Home	<ul style="list-style-type: none"> Press and hold this button can open the recently opened application window Access to menu options 	Menu	<ul style="list-style-type: none"> Press this button to lock the screen Press and hold this button to open the options menu of the phone including: Power off, Airplane mode, Sleep mode. 	Power	Adjust the volume	<p>*Remarks: If you connect your phone to your computer selecting "Open the USB storage", the phone will not recognize the memory card. You may not use certain applications, such as camera.</p> <p>Uninstall the U disk from your computer 1) Open the notification panel. 2) In the notification panel touch "off USB storage device", then touch the "Turn off USB storage" in the pop-up page.</p> <p>3.3 Dial pad Begin entering the first few digits of a phone number or characters of a contact name on the phone keypad. ▲ The Phone dialer screen then displays a list of matching numbers and names. If you enter a wrong digit or letter, tap  to delete it. To erase the entire entry, press and hold . Tap  to close the phone keypad and to see if there are more matching numbers or contacts. To browse through the filtered list, flick through the list or slide your finger up or down the list slowly. To place a call, do one of the following: Tap a phone number or contact from the list. After entering a complete number, tap .</p> <p>3.4 Contacts Open the main application interface> Contacts. 1) The default display phone contacts and the SIM card contacts; the contacts are sorted according to the first letter of the alphabet. 2) Click the Search icon, enter the contact search interface. 3) Click the new contact icon Add new contact in the Phonebook, You may select to save as SIM card1, SIM card2 or phone.</p> <p style="text-align: center;">6</p>	<p>3.5 Messaging Write message: Click the "receiver" input box to start the input method, click the "type message" input box to start the Input Method, you can input characters. Touch the icon(Send), sending the edited information-elect to save as SIM card1, SIM card2 or phone. Touch the icon(), enter the "people" select contacts. 3.6 Browser You can visit the website, download, songs, pictures, video and games and so on using the browser. 3.7 Email You can send e-mail messages to anyone with an email address. 3.8 Backup You can backup or restore applications and data in the case of T-flash card. 3.9 Music Can be used to enjoy the recording of audio files. Can see into the play list, songs, albums, artists and other menu.</p>  <p style="text-align: center;">7</p>
Button	Function															
Return	<ul style="list-style-type: none"> Press this button to return to the front one interface, or to close the dialog, the options menu, notice panel or screen keyboard On any application or interface, press this button to return to the home interface 															
Home	<ul style="list-style-type: none"> Press and hold this button can open the recently opened application window Access to menu options 															
Menu	<ul style="list-style-type: none"> Press this button to lock the screen Press and hold this button to open the options menu of the phone including: Power off, Airplane mode, Sleep mode. 															
Power	Adjust the volume															
<p>3.10 Gallery Use a photo After taking a picture, you can view the photo or share it with friends. View photos 1) On the screen of the picture, touch the album to view pictures in it. 2) Touch the thumbnails to view pictures full screen. 3.11 Camera Your mobile phone with camera function, no matter where you go, you are good with the camera and the camera mobile phone to shoot high resolution photos and high-definition video, professional camera, it also has the focus, zoom, shooting and other senior camera functions, you can be related to the personalized settings. 3.12 Movies This application can identify the memory card in the machine support for all video files. In the video the application program interface according to , you can remove the video files and to the video sequence. In the video file on long press you can be operated as follows: sharing, delete and view details. 3.13 Calendar Into the calendar program. The default display to the month the way. There are four kinds of display mode: 1) Day Display a day's schedule. Or so can flip slide. 2) Week Show a week's schedule. Or so can flip slide. 3) Month The screen displays a monthly schedule (most recently clicked on the date) slide up and down on a monthly basis flip. 4) Agenda Displays a time space schedule.</p> <p style="text-align: center;">8</p>	<p>3.14 File explorer Open the pictures, videos, music, sound files and other types of files which are stored in the SD card. 3.15 Blacklist Number If the user does not want to get a telephone or SMS, can put the record add black list, then he will not be received correct recording text messages and telephone. 3.16 Settings Enter the menu according to the need of mobile phones into personalized settings. ▲ Dual SIM management: Touch to select the SIM card or disable the SIM card, disable the status bar shows the flight mode. * the default SIM card, you can choose the voice telephony, sms and data connection is turned on or choose to use that SIM card. ▲ WLAN settings: WLAN to be turned on and off, and to set it. ▲ Bluetooth settings: Bluetooth to be turned on and off, and to set it. ▲ More settings: Flight mode, mobile networks, etc. to be turned on and off, and to set it. ▲ Call settings: On SIM1 card, SIM2 card call settings. ▲ Sound: This option for you provide the mobile phone in incoming call, announcement of the bell ring set state. Include: vibrate, volume, phone ringing, notification ringtone, feedback. In order to adapt to the users in various environment. * activate: According to the right of the dot, dot heard for the green that open. * volume : Can manual sliding to choose.</p> <p style="text-align: center;">9</p>	<p>▲ Display: * Brightness: The brightness to adjust the screen brightness. * Auto-rotate screen: Righting to the phone changed direction. * Animation: Set Animation. * Screen timeout: Screen standby time. * Sensor level calibration: place device on a level surface and tap calibrate ▲ Storage: Display memory card and mobile phone memory. ▲ Applications: The mobile phone applications for viewing, management, delete and other operations; in addition to view running services, storage space usage and electricity usage. ▲ Accounts: sync; * Applications can sync, send and receive data at any time * Applications sync data automatically. ▲ Privacy: restore factory settings. ▲ Location security: Set the orientation when using the service and setting, SIM card lock and unlock pattern. ▲ Language keyboard: Select language and input method on the set. ▲ Voice input/output: Text-to-speech settings. ▲ Accessibility: Can be set using some mobile phone auxiliary option. ▲ Date/Time: Set a time and date. ▲ Timer Switch Machine: * Power on: Set during the time of starting * Power off: After starting at a set time shutdown. ▲ About phone: Mobile phone model number, mobile phone software and hardware information.</p> <p style="text-align: center;">10</p>	<p>3.17 Sound Recorder With the recorder you can record sound and can set recorded sound with ring tones. 1) Click on the recorder menu. 2) Keep the cell phone microphone near to the sound source. 3) Click on the recording icon starting to record the sound, click on the pause icon to pause recording and click on it again to continue recording; click on the stop icon to stop recording, and chose "Discard" or "Save". 3.18 Calculator You can +, -, ×, ÷, =the basic operations 3.19 Downloads To view download history and download status, in the standby mode, enter the application list to download content. In the download content interface, according to , can be set to sort. 3.20 Clock In the main application interface, touch the Clock menu and the chose "Set alarm". ▲ Desk clock : Return desk clock. ▲ Add alarm : Add an effective alarm clock. ▲ Settings : Edit the settings of the alarm clock. 3.21 Play store Play store can provide a variety of rich application software, based on the recommendation, function, ranking and classification, WIFI network, convenient data read from the server software. Touch "Play store icon" to enter the application function of the market. The "recommended" "classification" "list" "search" and "download list", click into the view related software, click on the software to download and view details.</p> <p style="text-align: center;">11</p>	<p>3.24 Security warnings and precautions Your phone is a product of superior design and craftsmanship and should be used with care. The following recommendations can help you comply with the terms of the repair kits to extend the life of the mobile phone. 1) Mobile phones and their parts in the reach of children. 2) Phone to keep dry, rain, humidity and all types of liquid can contain minerals that will corrode electronic circuits. 3) When charging the battery do not use wet hands to reach the phone, it will cause electric shock, injury to person or damage to the phone. 4) Avoid put the phone in the high temperature environment. High temperatures will shorten the life of electronic devices, damage batteries, and distort or melt some plastic parts. 5) Avoid placing the phone in low temperature environment. When the temperature rises inside the phone will be able to produce water vapor to cause damage to the electronic circuit. 6) Avoid to put the phone in dusty, dirty place, or cell phone parts may be damaged 7) Avoid phone in the vicinity of lighted cigarettes, open flame or any heat source. 8) Do not disassemble the phone, non-professional approach will result in damage to the phone. 9) Do not drop, knock, or shake the phone from a height, rough handling can damage internal circuit boards.</p> <p style="text-align: center;">12</p>	<p>3.24 Security warnings and precautions Your phone is a product of superior design and craftsmanship and should be used with care. The following recommendations can help you comply with the terms of the repair kits to extend the life of the mobile phone. 1) Mobile phones and their parts in the reach of children. 2) Phone to keep dry, rain, humidity and all types of liquid can contain minerals that will corrode electronic circuits. 3) When charging the battery do not use wet hands to reach the phone, it will cause electric shock, injury to person or damage to the phone. 4) Avoid put the phone in the high temperature environment. High temperatures will shorten the life of electronic devices, damage batteries, and distort or melt some plastic parts. 5) Avoid placing the phone in low temperature environment. When the temperature rises inside the phone will be able to produce water vapor to cause damage to the electronic circuit. 6) Avoid to put the phone in dusty, dirty place, or cell phone parts may be damaged 7) Avoid phone in the vicinity of lighted cigarettes, open flame or any heat source. 8) Do not disassemble the phone, non-professional approach will result in damage to the phone.</p> <p style="text-align: center;">13</p>	<p>9) Do not drop, knock, or shake the phone from a height, rough handling can damage internal circuit boards. 10) Do not paint the phone, as paint can clog the headphones, microphones or other removable accessories, and lead to not work properly. 11) Use a clean, soft, dry cloth to clean the camera. Prohibit the use of harmful chemicals, detergents, liquid cleaners mobile phone 12) Such as mobile phones, batteries, charger or mobile phone accessories to failure, to the nearest qualified service center for inspection. 13) The service center staff will assist you, and if necessary will arrange for the maintenance of mobile phones.</p> <p style="text-align: center;">14</p>										

FCC Warning

a、 § 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

b、 § 15.21 Changes or modification warning.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

c、 § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

d、 Specific Absorption Rate (SAR) information:

This Mobile phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

e、 FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Mobile phone (FCC ID: 2AWCN-Q4) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.729W/kg and when properly worn on the body is 1.329 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the

handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

f、 Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10 mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.