
### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) (2) this device must accept any interference received, including interference that may cause undesired operation.

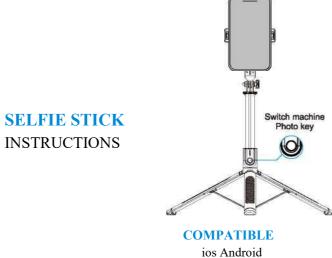

# **HOWTO USE**

1. Startup: press and hold the camera button for 3 seconds to Slide up and out of the remote control. start the machine, and the indicator Bashes to enter the search

2. Bluetooth connection: open the mobile phone Bluetooth search "VIP" and dick the connection. After the connection is suasssful the indicator light goes out 3. Photographing: when 1he remote control is connected with the

Bashes and tates pictures. 4 Shutdown without connection: when the remote control is

automatically shut down for about 5 minutes.

5. Connected shutdown: when the reacte control is connected with the mobile phone, it will enter the sleep state without How To Replace The Battery operation for about 10 minutes, and then automatically shut

Push the battery back cover to open the remote 6. Sleep: after entering the sleep state, press the photo tey  $\;\;$  control cover

o connect the mobile phone. 7. Shutdown: in the power on and sleep state, bng press th photo key for 3 seconds, the indicator Bashes off and shuts

8. Back connection ftjnction: The remote control has memory ction function. When the mobile phone Bluetooth is turned on, the remote control will automatically connect the matched mobile phone.

### **Remove The Self Timer**



## Clip can rotation

Flip freely and shoot vertically to take photos from multiple angles, which is more free to take photos.

## the tripod Open outward at the change to tripod mode.



## How do I open Tripod mode

When the self timer lever changes to size: 4.7-7 inches tripod mode, pay attention to pull out the last section of the lever and adjust it until the tripod is stable.

### **Product parameters**

Width of holding mobile phone: 65-90mm Supported mobile phone / or no response

tery capacity: 70mAh Bluetooth version: 5.2 Bluetooth please find it

Operation methcxj:

2) Turn off and restart the phone.

3) Him off and restart the Bluetooth remote control.

4) Him on the Bluetooth connection again.

5) Turn on ihe mobile phone Bluetooth, runn on the remote control, and search the mobile phone interface\(\text{Nen year of the wobile phone or download other camera App software}\)

VIp dick Connect and the interface displays "connectino" When "connect/pair", press the remote control button continuously and quickly that islt can be connected normally (Excitation is only required for the first connectionLive, automatic 2. Tripod mode 3. Handbeld mode

1) Open the camera to enter the photographing interfac Remote control parameters

Button battery:Battery model: crl620 button battery
(replaceable - as shown in Figure 2) Battery voltage: 3V

1) Open the camera to enter the photographing interface.
2) Swipe left or find the camera settings.
3) Click the volume key function.
4) Set the volume key function to shutter (do not select zoom or zoom)Focus).
5) The setting path of individual mobile camera is different