




AQUABOOST MINI

Wireless Bluetooth Speaker

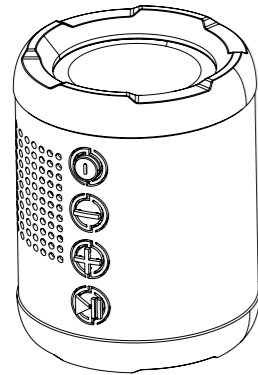

User Guide


INTRODUCTION

The Aquaboost Mini Wireless Bluetooth Speaker has all the bass you need in a portable and versatile package. This bluetooth speaker features an easy-to-use interface, hands-free chatting via your mobile phone, and the ability to play music via micro-SD cards and USB flash drives. Get the party started!

WHAT'S INCLUDED

1. Wireless Bluetooth Speaker
2. Micro-USB Charging Cable
3. Aux Cable
4. User Guide

DIAGRAM & INSTRUCTIONS

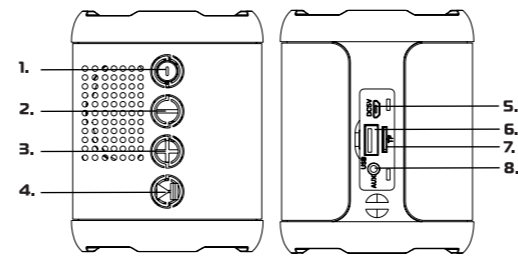

- | | |
|--|--------------------------|
| 1. Power Button/ Mode Button | 5. Micro-USB Port |
| 2. Volume Down/ Previous Track
- Volume Down: Press and hold
- Previous Track: Press | 6. USB Port |
| 3. Volume Up/ Next Track
- Volume Up: Press and hold
- Next Track: Press | 7. Micro SD/TF Card Slot |
| 4. Play/Pause | 8. AUX |

CONNECTING TO BLUETOOTH

1. Press and hold the "Power" button for 3 seconds to power ON.
 - a. The Aquaboost Mini will automatically enter pairing mode.
2. Open your device Bluetooth menu and select "AquaBoost Mini".
3. You will hear a tone to confirm that your device has successfully paired to the speaker.
4. You are now ready to go. Be sure to turn the speaker OFF when you are done to conserve battery life.
 - The speaker will reconnect automatically once turned ON if your device has previously been paired.

over →

USING THE SPEAKER

1. Insert the Micro-USB head of the included charging cable into the Micro-USB port and the other end into a USB power source.
2. If there is more than one music source available, press the Power button to switch between sources.
3. Press the '+' button to go to the next song/track, or the '-' button to retract to the previous song/track.
4. Press and hold the '+' or '-' buttons to increase or decrease the speaker volume.
5. Press the 'Play/Pause' button to play or pause the music.

HANDS FREE CALLING

1. When you have an incoming call, you will hear a ring tone through the speaker.
2. Press the 'Play/Pause' button to answer the call.
3. When finished, press the 'Play/Pause' button again to end the call.
4. Press and hold the 'Play/Pause' button to reject the incoming call.

TWS MODE

1. This speaker can be linked to a second speaker to create a stereo sound system.
2. To use this function, you must have a second speaker the same model as this (8373).
3. Before pairing the speaker to a device, press and hold the Play/Pause button on both speakers to link them to each other.
4. Once linked, proceed with 'CONNECTING TO BLUETOOTH' section.

CHARGING THE SPEAKER

1. Use the included charging cable to connect the speaker (Micro-USB) to a USB power source.
 2. The indicator light will turn ON when charging and will turn OFF once fully charged.
 3. Be sure to disconnect the cable when charging is completed.
- It should take about 3.5 hours to fully charge the speaker.

PRECAUTIONS

- Keep away from liquids.
- Do not take apart.

SPECIFICATIONS

Playback Time: 4 hours
Music Playback: MP3, WMA, WAV
Charge Time: 3.5 hours
Input: 5V/1A
Frequency: 100Hz- 20KHz
Charging Type: Micro-USB
Output Power: 3W
Working Distance: 33 ft
Battery: 1200 mAh Lithium (rechargeable)
Weight: 11.5 ounces

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that may cause undesired operation.
 Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 -Reorient or relocate the receiving antenna.
 -Increase the separation between the equipment and receiver.
 -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 -Consult the dealer or an experienced radio/TV technician for help.

For questions or concerns about your product, please contact tzumi Technical Support at support@tzumi.com or 1-855-GO-TZUMI.



tzumi® Aqua Boost Item No. 8373. Distributed by tzumi inc. NY, NY, 10016. ©Copyright 2022 tzumi. All Rights Reserved. Made In China. Other trademarks and trade names on this package are those of their respective owners. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Subject to change without prior notice.

