

MICRO 2

Bluetooth Speaker

01 Warning

To ensure proper use and trouble-free operation, please carefully read this user manual.

For first time use, a full charge is recommended.

- Please use and store this product at room temperature.
- Do not expose this product to conditions such as rain, fire, high temperature or direct sunlight.

Do not use organic solvents or other chemicals to clean this product.

- Do not throw or drop this product to avoid damage.

Do not allow small particles to get into this product.

Please adjust speaker volume accordingly to avoid temporary or permanent hearing loss.

- Do not disassemble or modify this product. The warranty will be voided.
- Only charge with a rated voltage charger.

Supervise the use of this product with children.

Note:

1. Improper battery replacement may cause explosion. Only replace with the same type or equivalent battery.
2. Do not expose the battery to sunlight, fire or excessive heat.

02 Packing Contents

MICRO 2 Speaker *1

User Manual *1

Type-C charging cable *1

Lanyard *1

03 Button Functions

Power Key: Press and hold for 2 seconds to power on/off.

Play / Pause: Short press to pause / play music.

Bluetooth connection:

Short press twice to disconnect. Short press again to reconnect last-paired device.

Bluetooth hands-free function:

Short press to answer the phone / hang up. Press and hold to reject the call.

04 Ports Function

Charging:

Charge with a DC5V-500mA or higher USB adaptor.

Built-in LED Indicator stays on while charging.

When fully charged the light turns off.

05 Bluetooth Connection

Turn on the speaker:

Turn on Bluetooth on your mobile device or computer. Find the Bluetooth device “My MICRO 2” and connect it

If a password prompt appears, input “0000” and confirm to connection.

Next time the speaker will automatically reconnect to the last paired device once your device’s Bluetooth is turned on.

06 True Wireless Stereo Function

TWS Connection

Turn on two MICRO 2 speakers and make sure neither of them is paired with your device.

Choose either one of the speakers

and short press the power key twice. You will hear a “Ding Dong” sound while pairing from the main speaker).

After the “Ding Dong” sound, the TWS system is set up successfully.

Main Speaker Sub-speaker

- 1) The TWS system only supports two speakers.
- 2) Once the two speakers are paired, they will remember the

main and sub speaker. Next time, they will reconnect automatically.

3) When TWS is paired successfully, both speakers will have the same functions simultaneously.

07 Specifications

Technical Parameters

Power supply:

Built-in 500mAh lithium battery

Charging time:

DC5V-500mA fully charges within 2 hours

Playtime:

4+ hours at mid-volume

Speaker system:

1.5-inch internal magnetic trumpet

Output power:

3W THD=1%

Frequency response:

120Hz-20KHz

Bluetooth version:

Bluetooth 5.0

External interface: USB Type-C

Dimension

Product net weight: 116g

(including built-in lithium battery)

Product size:

W 56×D56×H35 (mm)

08 FAQ

Questions

Solutions

Cannot connect to your device

1. Restart the speaker
2. If password request is prompted, enter 0000

No voice or intermittently playing

1. Ensure the speaker is within the operating range
2. Check that the speaker and device range are not blocked.

No sound when playing

1. Check and adjust the volume level
2. Check whether speaker is paused or on mute setting

Cannot power on

1. Check battery level
2. Ensure power adapter & cables are functioning

3. Charge speaker and try again

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.