



**MINI 2**  
Outdoor Bluetooth Speaker

USER MANUAL

## 01 Warnings

English



- To ensure proper use and trouble-free operation, please carefully read this user manual first.
- Charge fully prior to first use.
- Use and store this product at room temperature.
- To avoid damage, do not drop or throw the speaker.
- Do not expose to fire, high temperature, or direct sunlight
- Do not clean with organic solvents or other chemical cleaners.
- Do not allow small particles to get into the product.
- Keep speaker volume at a moderate level to avoid temporary or permanent hearing impairment.
- Do not disassemble the product or make any modifications to the structure or any parts.
- Keep product out of reach of children.

## 02 Packing Details

English



MINI 2 Speaker \*1



USB Type-C Charging cable \*1



3.5MM Audio cable \*1



 
User manual \*1



Lanyard \*1

## 03 Button Functions

English

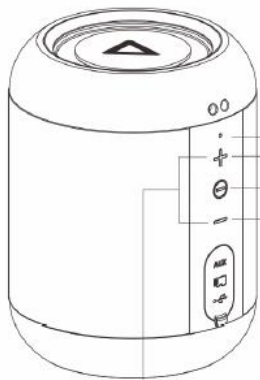

### LED Indicators

**Power On:** Blinking blue LED, speaker awaiting Bluetooth connection; **Solid blue LED,** Bluetooth connection established.  
**Max/Min Volume:** Rapid blinking blue LED

**Press:** Volume up; **Press and hold:** next song

**Power button:** Press and hold 2 seconds to power on

**Playing music:** Press once to play/pause

**Reset:** Press and hold for 8 - 10 seconds to reset

**Mode Shift:** Quickly double press: Bluetooth mode to Micro SD card play (must have Micro SD card inserted) to AUX play (must have AUX in cable connected). Cycle loops.

### Accept call key:

Press to accept/ end, press and hold to reject call.

**Press:** Volume down; **Press and hold:** previous song

**Note:** Some settings on devices, apps and websites may require long press once for start of song then another long press for previous song.

### RGB lighting mode

Press "+" and "-" together twice (2X) to switch RGB lighting mode

### Disconnect Bluetooth

Press and hold "+" and "-" at the same time to disconnect current device and set MINI 2 into discoverable status; short press the power button to connect to last connected device.

## 04 Port function indicators

English

### AUX In

 
Connect audio cable, audio prompt "Ding" shifts to AUX mode automatically

### Charging indicator

Red LED is on when charging. Red LED turns off once fully charged

### USB Type- C Charging Cable

Connect DC 5V-1A adapter for charging

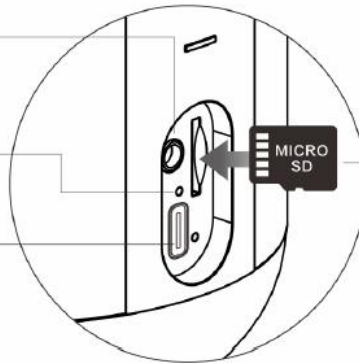

### Micro SD play

Insert Micro SD card with speaker powered on. Audio prompt "Ding ding" indicates ready to play songs from Micro SD.

### Data Access

Insert Micro SD card when speaker is powered off. Use data cable to connect to PC, press and hold "Power" button to enter SD card mode, then user can copy music files to Micro SD card.

## 05 Bluetooth Connection

English

### 1. Power On

Press and hold "Power" button for 2 seconds. When you hear the audio prompts "Ding ding" and "ding" the blue LED will blink, indicating that the speaker is awaiting Bluetooth connection.

### 2. Connect to Bluetooth

Go to your device's Bluetooth list, find and connect to the device "MY MINI 2". Speaker is connected when you hear the audio prompt "Ding ding" and the blue LED remains lit.

The MINI 2 can reconnect automatically when the Bluetooth is switched ON, for the device.

### Other tips

To connect to another Bluetooth device, press and hold "+" and "-" at the same time to disconnect the current Bluetooth device. MINI 2 will enter pairing mode to await new device connection.



## 06 True Wireless Stereo Function

English



Main Speaker



Slave Speaker

### 1. TWS connection

Before starting, the speakers cannot be connected to any Bluetooth devices. Power on both MINI 2 speakers at the same time (both LED light will be flashing). Choose one speaker and press the "+" and "-" buttons at the same time, once connected, the other MINI 2 LED light will stop blinking.

### 2. Let TWS Speakers connect to Bluetooth device

Go to the device's Bluetooth list, find "MY MINI 2" to connect (if you see 2 MY MINI 2 on the list, the speakers are not in TWS mode) and the LED light will stop blinking.

### 3. TWS disconnect

On the MINI 2 press "+" and "-" buttons to disconnect the TWS.

### Tips:

01. Connecting two MINI 2 (TWS Mode) on the first one press "+" and "-", this speaker will become the master speaker (left channel) and the other will become the slave speaker (right channel).

02. Only supports two speakers under TWS connection.

03. Speakers will remember the TWS relationship (master/slave) when reconnected.

04. Once TWS is connected, the slave speaker's LED will be ON and the master speaker's LED indicates the status of play, pause, Bluetooth connection, etc.

 
05. When TWS is connected the function are the same on each MINI 2 speaker (synchronous functions).

06. Upon powering ON both MINI 2 speaker at same time, if the LED is solid on one and other is blinking, the speakers are in TWS mode.

## 07 Technical Specifications

English

Basic	
Type	Bluetooth Speaker
Micro SD card	Supports up to 32G
Power Supply	Built-in 2000mAh LI-ion battery
	DC5V/1A Type-C charging cable
Technical	
Trumpet	52MM trumpet with X-bass radiator
Output	7.5W THD=10%
Frequency Response	100Hz-18KHz
BT verion	Bluetooth 5.0
Music files	MP3, WMA, WAV, APE, FLAC MP3:8Kbps-320Kbps WMA:32Kbps-384Kbps WAV:32Kbps-1414Kbps

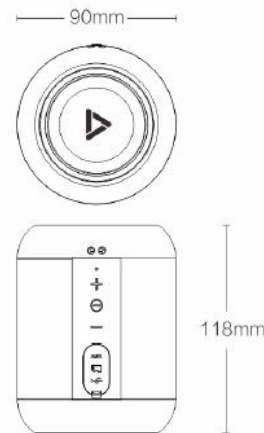

**Product Size:**118×90×90mm

**Product weight:**437g (included Lithium battery)

Questions	Solutions
Cannot connect	1. Restart the speaker 2. If Passcode is required, enter 0000
Discontinuity	1. Ensure there is no more than 1.0M (30") between the device and speaker 2. Ensure there are no barriers between the device and speaker
Micro SD cannot play	1. The Micro SD should be formatted as FAT32 2. The formats of music files should be WAV, MP3, WMA
No sound when playing	1. Check the volume levels & adjust 2. Check if paused or muted
Cannot power on	1. Check for low battery
No response	1. Reset the speaker (hold power button for 8 – 10 seconds)

**FCC Caution.****(1)§ 15.19 Labelling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**§ 15.21 Changes or modification warning**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**§ 15.105 Information to the user.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.