

TWS EARBUDS PANDA



Product code: 39610

INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**

Getting Started

- Remove the product from the packaging.
- Please retain all packaging after you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- TWS Stereo Earbuds
- Panda Charging Case
- USB Charging Cable
- Carabiner with string
- Two pairs of extra silicone ear tips
- Instruction Manual


Features

- TWS Stereo Earbuds with Panda Charging Case
- Connect & stream wireless music
- Supports Android or iOS
- Built-in long lasting 40mAh on each Earbud and 300mAh for Charging Case
- Play time of 2 to 3 hours on a single charge for Earbuds
- Supports hands-free call pick-up

Safety Instructions

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids. Do not operate the unit if it exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit. Do not use the unit if it dropped or damaged in any way. Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk. Do not use the unit with wet hands. Do not put objects into any of the openings. Keep the unit free from dust, lint etc. Do not use this unit for anything other than its intended use. Keep the unit out of reach of children. This product is not a toy. Do not use the headset at excessive volume levels, as damage to hearing may occur.

Description of Parts:

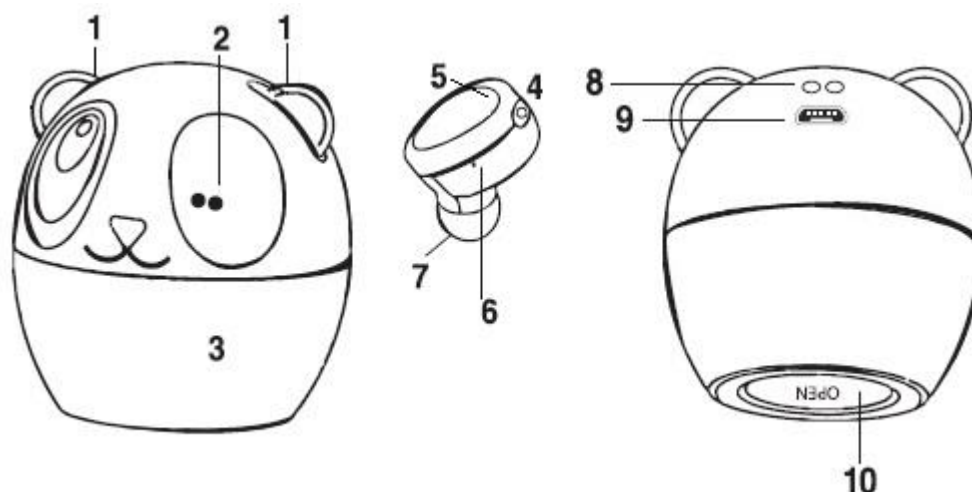

1	Charging Case LED Indicators
2	Earbud Charging Slot
3	Charging Case
4	Multi-function Button
5	Earbud LED Indicator
6	Built-in Microphone
7	Silicone Ear Tip
8	Keychain Hole
9	Charging Port
10	Open Button

INSTRUCTIONS FOR USE

Charging Instructions

The Charging Case and Bluetooth Earbuds come with built in rechargeable battery. Before using it for the first time, please fully charge the battery. Recharge the battery by following either one of the methods below when needed.

To charge the Charging Case (without Bluetooth Earbuds)

Plug the Micro USB end of the included USB charging cable into the charging port of the Charging Case. Plug the other end into a suitable USB port such as the one on your computer or other devices made for USB charging. The blue LED indicator will flash to show the battery charging.

It takes less than 2 hours to fully charge the case. When the battery is fully charged, the blue LED indicators will stay on.

To charge the Bluetooth Earbuds

1. After fully recharging the Charging Case, disconnect it from charging.
2. Place the Bluetooth Earbuds into respective charging slots correctly.
3. The LED light indicator on the Earbuds turns red and the charging case's LED turns

blue. It takes less than 2 hours for the Earbuds to fully charge. When the battery is fully charged, the red LED light on the Earbuds will turn blue first, then off, and the blue LED lights on the Charging Case will also turn off.

Turning on/off the Bluetooth Earbuds

Press the Open button at the bottom of Charging Case to lift up the Earbuds. Remove the Earbuds from the Charging Case, it will turn on automatically (Or, if the Earbud is not stored inside the Charging Case, long press the multi-function button of the Earbud to turn ON.)

Long press the multi-function button of the Earbud to turn OFF the device. Alternatively, place the Earbuds back into the Charging Case; it will turn off for recharging automatically.

Pairing both Bluetooth Earbuds with Bluetooth devices (phone or tablet that support call-answering)

- Press the Open button at the bottom of Charging Case to lift up the Earbuds. Remove both Earbuds from the Charging Case, it will turn on automatically and the LED flashes red and blue alternatively (*Or, if both Earbuds are not stored inside the Charging Case, long press the multi-function button of the Earbuds to turn ON. An indication tone will sound and the LED flashes red and blue alternatively.)
- After few seconds, you will hear another indication tone when both Earbuds are connected together. The LED light indicator on one Earbud will flash red and blue, and the LED light indicator on the other Earbud will turn off.
- At this point, activate the Bluetooth function on your mobile device, and search for Bluetooth devices near you.
- Once you have activated Bluetooth on your mobile device, select “**PANDA TWS**” from the list of available Bluetooth devices.
- You might be prompted with “Pair with **PANDA TWS?**” message on your source device, with “Cancel” and “OK” options. Please select “OK”.
- Once paired successfully, an indication tone will sound and the LED on both units will turn off.

Making a call with the Bluetooth Earbuds in Stereo pairing mode

Basic operation

Function	Operation	Button
Answer incoming call	Incoming call	Short press the multi-function button of one Earbud to answer an incoming call.
Reject incoming call	Incoming call	Press and hold the multi-function button of one Earbud for 2 seconds
End call	Incoming call	After your phone conversation, short press the multi-function button of one Earbud

Redial last number	Standby mode and connected to a device	Short press the multi-function button of one Earbud four times
--------------------	--	--

Note: Both Earbuds support phone conversation.

Listening to Music Wirelessly in Stereo pairing mode

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbuds to stream music wirelessly. Once paired, it will play music from your device.

Function	Operation	Button
Volume increase	Playing music	Short press the multi-function button of right Earbud three times
Volume decrease	Playing music	Short press the multi-function button of left Earbud three times
Pause	Playing music	Short press the multi-function button of one Earbud will pause the music
Play	Pausing	Short press the multi-function button of one Earbud will resume the music
Next track	Playing music	Short press the multi-function button of right Earbud twice
Previous track	Playing music	Short press the multi-function button of left Earbud twice

Note: An indication tone will alert you when the volume adjusts to maximum or minimum volume.

Pairing either one Bluetooth Earbud with Bluetooth devices (phone or tablet that support call-answering)

- Press the Open button at the bottom of Charging Case to lift up the Earbuds. Remove one Earbud from the Charging Case, it will turn on automatically and the LED flashes red and blue alternatively (Or, if the Earbud is not stored inside the Charging Case, long press the touch pad of the Earbud to turn ON. An indication tone will be heard and the LED flashes red and blue alternatively.)
- Place the Bluetooth Earbud and Bluetooth device (phone or tablet that support call answering) no further than 3 feet apart from each other;
- Activate the Bluetooth function on your mobile device. Please refer to the manufacturer’s instructions to enable Bluetooth on your device.
- Once you have activated Bluetooth on your mobile device, select the “**PANDA TWS**” from the list of available Bluetooth devices.
- You might be prompted with “Pair with **PANDA TWS?**” message on your source device, with “Cancel” and “OK” options. Please select “OK”.
- If required, enter the password ‘0000’ to confirm & finalize pairing.
- Once paired successfully, another indication tone will sound and the LED will turn off.
- You can now start to use the Earbud.

- If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.
- Once you have paired the Bluetooth Earbud with a mobile device, the Earbud will remember this mobile device and will pair automatically when Bluetooth activates within the range, during subsequent pairing. You do not need to re-pair any previously connected devices.
- The Bluetooth Earbud will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

Making a call with the Bluetooth Earbud in Bluetooth mode

Basic operation

Function	Operation	Button
Answer incoming call	Incoming call	Short press the multi-function button to answer an incoming call.
Reject incoming call	Incoming call	Press and hold the multi-function button for 2 seconds
End call	Incoming call	After your phone conversation, short press the multi-function button
Redial last number	Standby mode and connected to a device	Short press the multi-function button four times

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbuds to stream music wirelessly. Once paired, it will play music from your device.

Function	Operation	Button
Volume increase	Playing music	Short press the multi-function button three times (for right Earbud only)
Volume decrease	Playing music	Short press the multi-function button three times (for left Earbud only)
Pause	Playing music	Short press the multi-function button will pause the music
Play	Pausing	Short press the multi-function button will resume the music
Next track	Playing music	Short press the multi-function button twice (for right Earbud only)
Previous track	Playing music	Short press the multi-function button twice (for left Earbud only)

Note: An indication tone will alert you when the volume adjusts to maximum or minimum volume.

Care and Maintenance

Read the following recommendations before using the Bluetooth Earbuds. Follow these and you will enjoy the product for many years.

- Don't expose the Bluetooth Earbuds to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Don't expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor as this may damage the internal circuit
- Don't attempt to disassemble the device as it may get damaged if you are not a professional.

Specifications

Bluetooth specification	Bluetooth 5.3
Operating range	Up to 33 feet
Working time	2 to 3 hours (max. volume)
Charging input voltage	DC 5V
Charging time	Less than 2 hours
Built-in battery	Charging Case: 300mAh Bluetooth Earbud: 40mAh (each)
Size	Charging Case: 2.08" (L) x 2.08" (D) x 2.18" (H) Bluetooth Earbud: 0.71" (L) x 1.02" (D) x 1.02" (H) (each)
Weight	Charging Case: 1.34 oz Bluetooth Earbud: 0.14 oz (each)

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Instructions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.