




PETPNR
DOG TRAINING
COLLAR

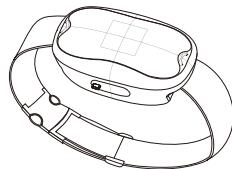


Model: DTC01

If any quality problems or confusion, feel free to contact us via


✉ PETPNR@outlook.com

I. Product Overview



Remote Control

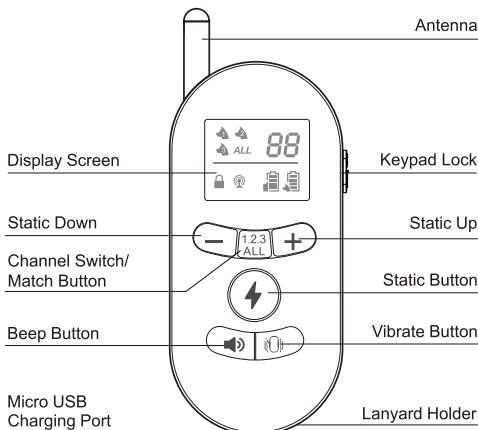

Screen

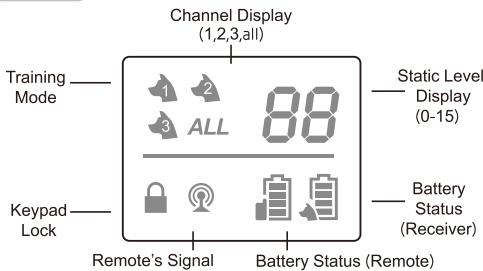


Receiver

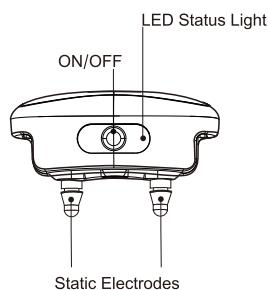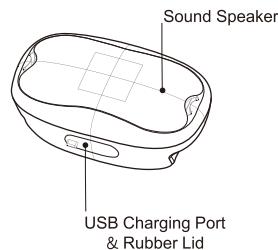

II. Package Content



 ① Remote Control



② Receiver



③ Collar



④ Decorative Cover



⑤ USB Cable



⑥ Lanyard




⑦ User Manual



⑧ Teardown Piece


III. Quick Operating Guide

1

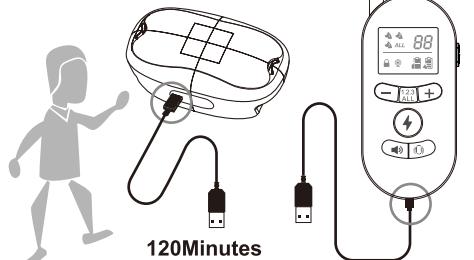

Charge in 2 hours. Only one wire is provided in the package.

2

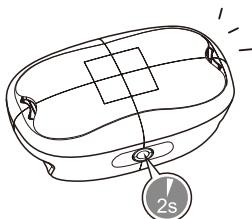

Turn on the receiver: Hold the ON/OFF button for 2 seconds and the receiver will beep and vibrate.

Turn off the receiver: Hold the ON/OFF button for 2 seconds and the receiver will beep and shutdown.
(if no operation within 8 hours, automatic shutdown.)


3



Turn On: Press any key on the remote control to start .


Turn Off: The remote control is in standby mode without any operation, and it will shut down automatically after 15 minutes. Or in the key lock protection state, it will shut down after 15s.

4

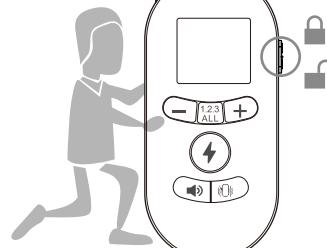


Security Keyboard Lock: Push the switch to the down position to unlock ,and toggle it up to lock.

5

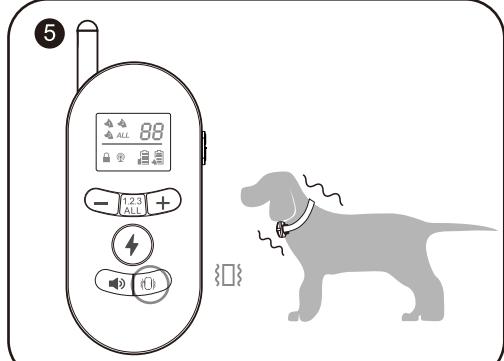


Vibrate Command: Press the vibration button briefly and the receiver vibrates once.


6

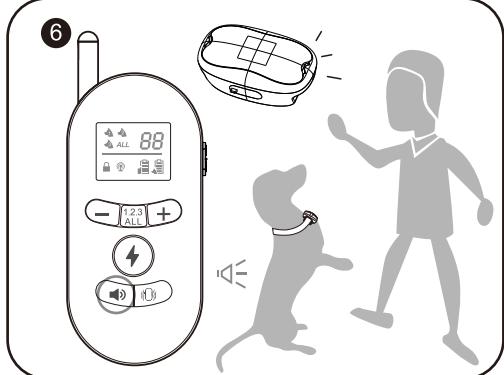


Beep Command: Press the beep button briefly and the receiver beep once.

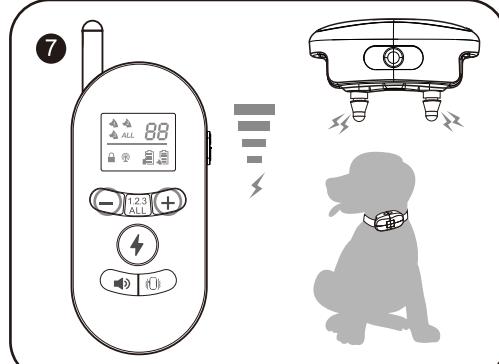

Electrostatic Intensity Adjustment: press the "-" to reduce the intensity; press the "+" to strengthen it. You can adjust from 1 to 15. Static Command: Press the static button briefly and the receiver shock once.

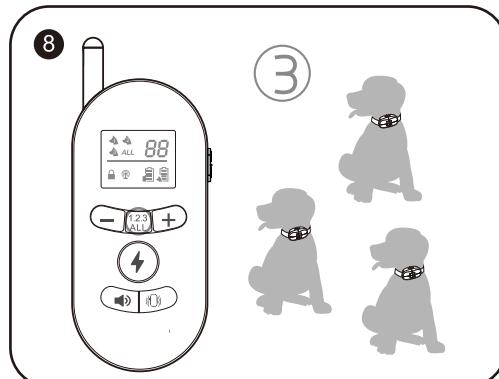

Channel Switching: You can train 3 dogs at the same time or separately. Short press the channel switching key to switch to the dog you want.

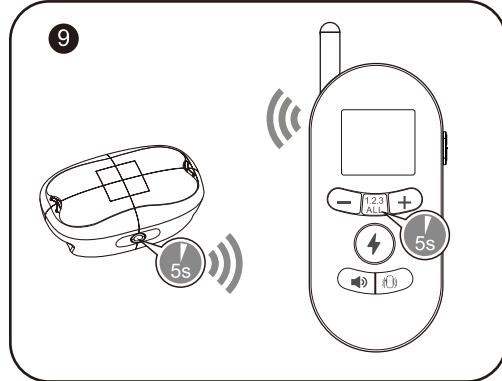


Pairing: Refer to "Page 10" for more information.

COLLAR STATIC STIMULATION QUICK GUIDE



When wearing the collar, it's best to insert a finger. Too tight is not good for your dog, but too loose will slow down the electrostatic function, because the electrode cannot contact the dog's skin.

 No SHOCK? Try these solutions.



If your dog has thick fur, please separate it so that both electrodes can touch the skin.



Water can help conduct electricity. If you spray some water around the electrodes, the shock function can be more effectively.



One last thing you can try is to shear the fur where both electrodes are touched.


Note:

1. Only when both electrodes are simultaneously touched, shock will work.
2. If you find collar cannot work, please check whether you push the lock button on which is on the left side of remote.
3. The sensitivity to static depends on your dog's size weight, amount of fur, and even skin condition.



IV. Setting Up

1. Charge the devices respectively for 2-3 hours.

Remote Control: Charge the device until the battery icon on the display indicates full bars.

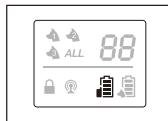

Receiver: Charge the device until the red LED turns green. The display on the Remote will indicate full bars as well.

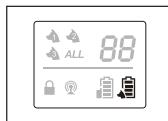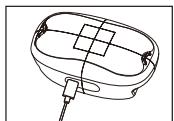

⚠ If the charging time is exceeded, the battery of the receiver may be damaged.

 
2. Electrostatic Intensity Adjustment

Press the "-" to reduce the intensity;
Press the "+" to strengthen it. You can adjust from 1 to 15.



Recommended Static Level strength starts from "3". This is the minimum sensation your dog can feel. The right static level goes down to an individual basis that your dog is responsive to the shock function. The sensitivity to static depends on your dog's size and weight, amount of fur, and even skin condition.


V. Wearing the Receiver Collar



1. Thread the collar through the Receiver.



 2. If your dog has thick fur, please **separate the fur** at the electrodes with a comb to enable them to reach the skin.

3.  When wearing the collar, the tightness is at most fit if **one finger** can be inserted underneath.
4.  Wear excess collar tape into the Plastic button.
5.  If you want to remove the ribbon collar from the receiver, or replace the decorative cover. Can use the Teardown Piece, pry open the decorative cover.

VI. Training Modes

1. Vibration Mode:

Press **Vibrate Button**, and the Receiver will vibrate once; hold the button and the vibration persists.



2. Sound Mode:

Press **Beep Button**, and the Receiver will give a "Beep" sound; hold the button and the "Beep" sound persists.



3. Static Stimulation Mode:

Press the **Static Button**, and the Receiver will give a Static Stimulation to the wearer.



Do not hold the button as it is not recommended to have prolonged shock to your dog. However, the static will be cut off in 6 secs. Automatically to prevent unintentional harm to your pet.

4. Switching Channel:

Press the **Channel Switch Button** to choose which Receiver you want to control, when you match more than one Receiver.



5. If you want to control multiple receivers at the same time, switch the "ALL" channel.

Note: you can only switch to "ALL" channel after pairing 2 or 3 receivers.

VII. Match the Remote Control to the Receiver:

*You may skip this step because the set is already paired by factory setting.



After confirming that the receiver is turned off, hold the ON/OFF button of receiver for 5 seconds until the LED indicator Light on receiver flashes in green,then release the receiver switch.

Press and hold Channel Switch / Match Button for 5 secs. The Receiver will vibrate and beep which indicates the matching is completed. You will see "dog 1" (or subsequent number) in the Channel Display when the match is successful.



Adding multiple Receivers:

 
After confirming that the receiver is turned off, hold the ON/OFF button of receiver for 5 seconds until the LED indicator Light on receiver flashes in green ,then release the receiver switch. Press and hold the Remote Control Channel Switch /Match Button for 5 secs (repeat steps 2.1 and 2.2). The Channel Display will show the subsequent number of the new Receiver.

Note: Connect only 1 Receiver at a time, do not connect all simultaneously, or the Remote will match all Receivers into a single channel.



Removing all Matched Receivers:

Press and hold the "-" and "+" for 5S while pressing two function keys on the remote control. When the LCD is restarted, all dog heads on different channels will disappear and the removal is completed.



VIII. Training Tips

1. Reward your dog with food will usually help to achieve the best result.
2. Do not use the device on dogs aged below 6-month, old, pregnant, easily frightened, aggressive, in heat, old, and dogs not in best of health.

3. Use **verbal commands** first, and supplement with a corrective stimulus only as needed. Be consistent with your verbal commands, using the same words every time. Work with your pet on **one behavior at a time** to avoid confusion and frustration.
4. Use as little stimulus as possible and only to reinforce verbal commands when necessary. Do not over correct your dog.
5. For example, use the beeps as warning by pressing Beep Button. The dog will **become conditioned to the beep** preceding the corrective stimulus and will soon learn to recognize the beep as a warning along with your verbal command.
6. Do not rely on this product solely to train your dog. Some dogs will not respond to this product. We cannot guarantee the effectiveness of this or any trainer on your dog.

▲ If your dog shows signs of **growling, snarling, biting or aggression** while using the collar, discontinue use immediately and contact a professional trainer for advice.

IX.Important Notice

Regarding you and the product :

1. It is **strictly prohibited to open the Receiver in any situation. Doing so** will likely compromise the waterproof function and thus voiding the product warranty.
2. Please use **Remote Control and Receivers from the complete set**, do not use other product to match with the Receiver.
3. If you want to test the product, please use professional testing apparatus. **Do not test with hands, so as to avoid accidental injury.**
4. If find water at the charging port, please **wipe it dry before charging.**
5. Beware the interference from the environment can cause the product not to work properly. For examples there are places with high voltage facilities, communication towers, thunderstorm, large buildings, and strong electromagnetic interference.
6. Receiver will be turned off if idling for **8 hours**.
7. The included collar is a basic accessory and is **not necessarily suitable** for all types of dog breeds. Any collar not wider than 20mm and not thicker than 2mm, made of soft material, can be a replacement for the current collar.

Regarding well-being of your dog:

1. The Receiver collar is not a regular collar and not recommended to put **on a leash** to walk your dog. (Doing so during pulling may hurt the dog due to protruding electrodes on the Receiver.)
2. Do not put the collar on for over **12 hours**, it may cause rashes or discomfort to your dog's skin.
3. **Do not allow children, or anyone who has little to no experience with training dogs, to handle this training kit.**
4. **In order to guarantee normal diving function, please insert the waterproof rubber lid over the charging port.**
5. Static stimulation is not a pleasant experience for any dogs. **Punishment**

is harsh way to train a dog. Always, the praise could encourage your dog for good behavior. **Note:** With Anti-Misoperation design, Static function always cut-off after **6 secs**, this is a precaution designed to prevent unintentional long-pressed of the button, and potential animal abuse.

X. Troubleshooting

1. Remote/Receiver runs out of power quickly, not charging

Make sure the charger and Remote/Receiver is securely connected. Try to use other universal android USB cable to charge.

2. Static is too weak or even completely no static, Static Mode has no effect on my dog.

Make sure the receiver has enough power(when it is low-battery, shock doesn't work); Only both electrodes are simultaneously touched by dog's skin shock will work; Try to increase the static level to more than 8. If dog has long hair, you need to separate dog hair to make electrodes touched.

3. Remote/Receiver does not response

Recharge the Remote/Receiver, make sure they have enough power. Check the keypad lock(which is on the left side of Remote), unlock the Remote. If Remote is locked, there will be a lock icon on the display. If you try methods above but still fail, please remove all the matching and reconnect Remote with Receivers.

4. Receiver is fully charged, but Remote Display still shows receiver has empty battery.

Turn off Receiver and turn on Receiver again.

5. Training mode fails to sync up even in a very short distance

Make sure there is no strong signal interference in your surroundings. Remote's range could fluctuate subjects to obstacles, electromagnetic field, or even stormy weather.

6. Receiver beeps, vibrates, shocks by itself constantly or occasionally

Make sure no button of Remote has been pressed or gotten stuck.

If any quality problems or confusion, feel free to contact us via
PETPNR@outlook.com

XI. Operating Environment & Maintenance

Do not use the product in the circumstances as follow:

1. Do not operate the devices under temperature of 104°F and above, doing so in such high temperature will decrease the performance of the batteries.
2. Do not use the Remote during snowing, this could lead to water sipping in causing damage to the controller.
3. Do not use the set in places with strong electromagnetic interference. This will greatly compromise the performance of the product.

4. Avoid dropping the devices on hard surface or inflicting excessive force on them.
5. Avoid using the devices in environment flooded with corrosive chemical, this may lead to color degrading, deforming, or cracking of exterior of the devices.

Maintenance:

1. When not in use, please wipe clean both the Remote and Receiver with mild detergent. Turn off the Remote, lock the keypad, put on the rubber lid on the Receiver's charging port, and store the set in a cool dry place.
2. During cleaning, wipe with soft cloth and mild detergent. Do not use hard brushes which may scratch the surface of the device.
3. If the Receiver has gotten dirty, secure the charging port rubber lid secured and wash it thoroughly. Note: Do not submerge the Receiver into water for long period of time, even though it is waterproof.
4. If found residues around the charging port's rubber lid, you should wipe it clean to prevent water from seeping in.
5. If the Remote fell into water, pick it up quickly and turn off the power. Dry it with cloth as much as you can and let it out to dry. It should resume function normally once the moisture is dried out.

XII. Terms of Use & Limitation of Liability

1. Use of this product means you accept all the terms and conditions.
2. This product is a professional dog training device. You are not recommended to use this product if your dog is clever and less than 15 lbs in weight. If you're not sure whether the product is suitable for your pet dog, please consult a professional handler or contact us.
3. This product is a professional dog training device and should not be used for other purposes. Please do not violate local laws in using this product.
4. We bear no liability for any direct or indirect losses caused by use or misuse of this product; all risks in using this product shall be borne by user.
5. Please contact the dealer for parts warranty, goods return or exchange. We provide only technical support.
6. We reserve the right to alter the terms, conditions and notices of this product offered.

XIII. FCC Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in

a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

XIV. Product Specification

Model	DTC01
Neck Circumference	9.8" -24.8"
Receiver's Casing	IP67 waterproof; Rain resistant;
Remote's Casing	Non-waterproof; Keep away from water
Remote / Receiver's Battery	200mAh
Charging Voltage	DC 5V/500mA
Remote / Receiver Charging Time	Full Charge at 2-3 hrs
Charging Port	Micro USB
Wireless Power	10mW
Operating Environment	32°F-104°F<95% Rh
Remote / Receiver Standby Time	Remote: 40 days; Receiver: 20 days
Remote to Receiver's Signal Range Distance	1000 Ft
Receiver's Battery Sync Distance	200 Ft



If any quality problems or confusion, feel free to contact us via

✉ PETPNR@outlook.com