

External EUT Photographs

External photos of RF Module

Back Side

Front Side



The Module will always be inside the Host and there are no user-serviceable parts inside. Therefore, the label will always be on the outside of the host

Host System

