 


原材料 机乐堂 (亚马逊) JR-MH01 Holder系列 支架蓝牙音箱 英文说明书 V1.1

尺寸: 70x120mm

材质: 128g哑粉纸+正反单色印刷+风琴折

**JOYROOM**

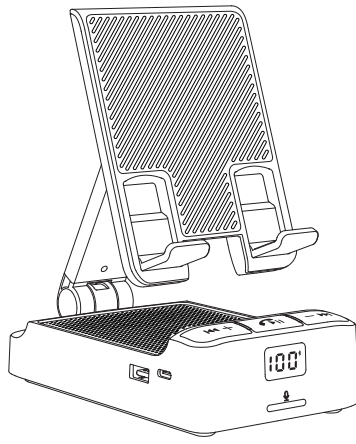


**User Manual**  
JR-MH01 Wireless Speaker with Phone Holder


**I. Packing list**

- Wireless Speaker with Phone Holder
- Charging cable
- User Manual & Warranty Card

**II. Fold/Unfold diagram**

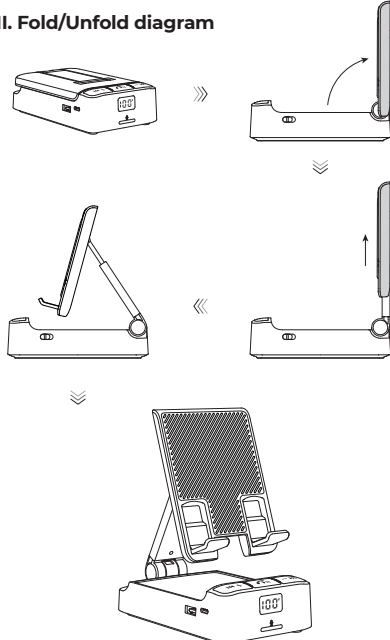

**III. Product diagram**

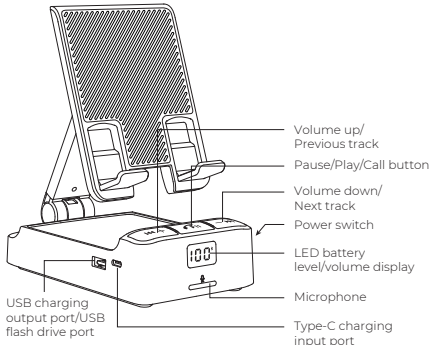


- Volume up/ Previous track
- Pause/Play/Call button
- Volume down/ Next track
- Power switch
- LED battery level/volume display
- Microphone
- Type-C charging input port
- USB charging output port/USB flash drive port

**IV. Basic parameters**

Name: Stand sound  
Model: JR-MH01  
BT version: V5.3  
Audio decoding: SBC  
Supported protocols: HFP, A2DP, AVRCP  
Working frequency: 2402-2480MHz  
BT range: 10m (barrier-free open environment)  
Frequency response range: 20Hz-20KHz  
Speaker:  $\phi$ 50mm Rated power: 3W  
Music time: about 15h (70% volume)  
Calling time: about 20h (70% volume) Standby time (connected): about 120h Battery capacity: 2000mAh  
Charging time: about 3h  
Speaker charging port: TYPE-C  
Device charging output port: USB  
Charging input: 5V 1A  
Charging output: 5V 0.5A  
Material: ABS+aluminum alloy+silicone  
Net weight: 391g

For FAQs and more information, please scan



Lifetime Warranty Code  
**602438**  
support@joyroom.com

**V. Connection operations**

**1. Turn on**

Slide the power switch to "ON" position, the speaker will give a "doo-doo-doo-doo" prompt, which means the speaker is turned on.

**2. Wireless connection**

Turn the phone's BT function on and search for the BT device "Joyroom Holder MH01", connect the phone with it, and then you can start to control music via the speaker.

Note: Please connect the speaker manually for the first time, after that it will reconnect to the last connected device automatically. (IP & Android devices connecting in the same way)

**3. Turn off**

① Slide the power switch to "OFF" position      ② It will automatically turn off if not connected for 5 minutes

**5min Turn off**

**VI. Indicator light**

Turn on	LED display lights up
Ready for pairing	BT symbol on LED display flashes slowly
Charging the speaker	LED battery level display indicates current battery level, and the ones digit flashes

**VII. Operation instructions**

**Music function**

- Play/pause: Click the pause/play button
- Volume up: Click the volume up button
- Previous track: Press and hold the previous track button for 1s
- Volume down: Click the volume down button
- Next track: Press and hold the next track button for 1s

**Call function**

- Answer/end call: Click the call button
- Reject call: Press and hold the call button for 2s

**Mode switch function**

- BT mode/USB flash drive mode switch: Triple-click the pause/play button


Note: To switch to USB flash drive mode, you need to insert the USB flash drive into the USB port.

**Factory reset**

- Restore factory settings: Press and hold the volume up and down button for 3s simultaneously

**Charging your device via the speaker**

Connect one end of the charging cable included to the USB output port of the speaker, connect the other end to the device that needs charging

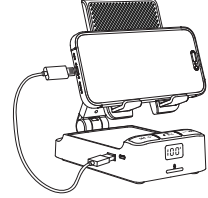

**VIII. FAQ**

Q: Why can't the speaker be turned on?  
A: ① The speaker may be out of power. Please charge it for more than 30 minutes before turning it on.

Q: Why can't the speaker be connected?  
A: ① The speaker may be out of power. Please charge it for 30 minutes before turning it on, and then search it for connection.  
② If your phone uses IOS system, it may be that the speaker did not reconnect to your phone in time. You can directly click the device name "Joyroom Holder MH01" in the phone's BT list to connect with it.  
③ Check whether the speaker is connected to another device. If so, please disconnect with it and make a reconnection again.  
④ If above operations failed, you can restore it to factory settings.

Q: Why does jamming/discontinuity occur when playing songs?  
A: ① The transmission range of the speaker is 10m, please reduce the distance between the speaker and the device.  
② Do not use it in areas with large interference sources to avoid affecting the signal.  
③ It may be caused by poor signal or network cache, please use it in such environments with strong phone signal and smooth network.

Q: Why is the sound of the speaker too low or mute?  
A: ① It may be that the playback channel of the phone is not turned on. Please turn on your phone's BT function, click the icon on the right side of connected Joyroom Holder MH01 to open the media and call channel of the phone.  
② Open the "Settings" interface of your phone, check if there is a maximum volume limit on the phone.  
③ Volume up both the phone and the speaker.

**IX. Safety Criteria**

- Please follow the instructions, do not disassemble the product or refit it for any reason, otherwise it may break down or burn down.
- Do not immerse it in any liquid or wash it with water.
- Please use adapters that conform to national/regional safety standards together with the included charging cable to charge the product, otherwise its battery may be damaged or cause safety problems.
- Please use and store it in normal temperatures; too low or too high temperature (below 0°C or above 45°C) is not permitted.
- Do not block the openings of the product, such as charging port, indicator, etc.
- Do not use it at high volume levels or for long periods of time to avoid dizziness or hearing damage.
- Do not use it under thunderstorm which may lead to abnormal performance and signal interruption.

**WARNING:** Before installing or operating the product, please refer to the electrical and safety information on the bottom of the shell.  
**WARNING:** Never expose the battery (or battery pack) to excessive heat, such as sunlight or similar heat sources.

**FCC NOTE:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.