




BEITONG ASURA 2 WIRELESS GAMEPAD


BEGINNER GUIDE

LESTIFICATE IS INSPECT





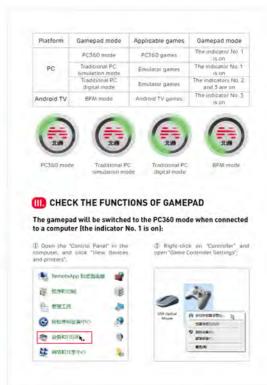

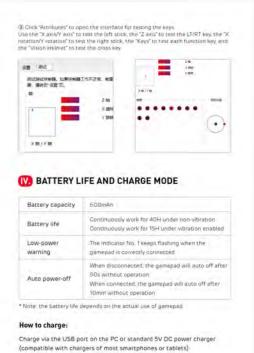



Sairt Auto: priess and hold the TURBO key and any action key to enable the Auto function in any gamepad mode. After the Auto function is enabled, press and hold the action key. The indicator will flash quickly. Close Auro; mress and hold the CLEAR

Close Auto press and hold the CLEAR key and the action key to cancel the Auto function when the action key is in the auto made.



2. Swap the key value between the left stick and the cross key

Start Swap: press the SHIFT key and the indicator No. 4 is on, suggesting that the swap function is enabled. Close Swap: press the SHIFT key again and the indicator No. 4 is off, suggesting that the swap function is disposabled.





* Note: this function is not available in a traditional PC mode:

3. Turn on /off the light of action keys

Press and hold the BACK key and the A key to turn on or off the light of action keys.



4. Startup and shutdown:

Startup: Press the BEITONG LOGO key and the indicator is on. Shutdown: Press and hold the BACK key and the B key usell the indicator is off.If the gamepad is not operated for 10 minutes, it will shut down automatically.





+

Q: Why doesn't the gamepad vibrate? A: 1. Make sure that the gamepad has enough power. If the battery is too low the vibration will be weak or disabled in this case, please charge the gamepad. 2. Make sure that the gamepads driver is correctly installed and the game you play supports the vibration feature. 3. Some PC games and TV games do not support the vibration feature. Q: Why is the gamepad not recognized? A: 1. Make sure that the gamepad has enough power and is already scarted. 2. Make sure that the device supports the vibration feature. 3. Make sure that the device supports the vibration feature. 3. Make sure that the device supports the vibration devices are not suitable for peripherals because their bardware and software are specially existanced. 4. If the operating system is Windows VP, make sure that you have downloaded and installed the gamepad sorrer. C: Why doesn't the gamepad work even if the wireless receiver is connected and the indicator is on? A: 1. The problem may be caused by an error or hardware conflict when you plug or unplug the receiver. Since down the computer and try to plug the receiver again. 2. The problem may be caused by the peripheral hardware that incretives with the receiver's signal and generates messy code. Press and hold the BETTONS LOGO key for 20 seconds to match the code with the receiver. 4. If the operating system is Windows XP, make sure that you have downloaded and installed the gamepad some the three receivers. 4. If the operating system is Windows XP, make sure that you have downloaded and installed the gamepad some the receiver again.

 When connecting the device, ensure that the interface is in the correct direction to avoid any port damage caused by trute force or other improper use.

2. Do not use the gamepad in any damp, corrosive, dusty or poorly ventilated

3. Do not operate the gamepad with wet hand. Otherwise, the moisture may enter the

4. Do not play the game for a long time. Take Breaks and enjoy a healthy game







This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2AWMK-BTP-2185T2